

966LCD

USER MANUAL

Congratulations on your selection of the **966LCD** Cordless telephone from **CHINCOWELL Phone**. This quality 46/49 MHz Cordless telephone, like all chinwell Products, has been designed to give you many years continuous service, And represents the best value for your money. It reuires little mainte
nance and is easy to setup and operate.

Chincowell Co., Ltd.

Chincowell co;ltd copyright

Installation

1. The handset
Open the battery cover and mount the battery in it. Cover the battery and screw the antenna into the handset.
2. Handset charger
Insert the AC. connector of the adapter (Input AC 110V/220V, Output DC 9V) into the power socket, and the output connector to the socket of the handset charger.
3. The Base
Connect the receiver handset and the Base with the curled cable. Insert the telephone wire into the line socket of the Base.
4. Power for the Base set
Connect the telephone line first. Plug the adapter into the power socket of 110V. Plug the DC. connector into the socket of the Base set. The indicator should be on.

Note: The phone set has its own battery an adapter specified for use.
Do not use any others products to use in here without specified.

Points to be noticed

1. Do not put the cordless under direct sunlight, Keep it away from the damp place.
2. Do not let the Base set and the antenna get close to devices such as :
The microwave oven, TV set, computer etc.
3. Make sure the suitable power source of AC 110/220V for the cordless set.
4. The adapter used by the cordless set is DC 9V (with a Filter capacitor inside).
Do not replace it at all. If the adapter breaks down, contact us for a new one.
Incorrect adapter may lead to abnormal current and breakdowns.
5. If dust occur on the surface of the cordless set, do not clean it with organic solvents such as toluene, petrol etc. In case the case is eroded. If the surface needs cleaning, use a dry cloth, dab wax on it, and wipe dust away.
6. If you want to take out the adapter, hold it tight first, and then take it out with care. Do not take it by pulling the wire.
7. Do not put the cordless set in high places in case it falls down and gets precision parts damaged. If you have any trouble with it, please sent your cordless set to the distributor or the servicing center.
- Do not disengage the cordless set by yourself. The warranty may be null and void if disengagement by user exists.

How to set up the functions

Operation Instruction

1. The code of the handset should be consistent with the Base set.
Press the FUN and INT key of the Base set, and the FUN and INT keys of the handset You should hear a long beep tone. Now the Cordless is in consistent code and for your service already.
2. Setting the functions of the handset and relevant operations

Setting the individual number of the handset : FUN + 0
+ 1 ~ 3 key.

Automatic resetting the codes : FUN + INT (at the same time
with the Base).

Outgoing call : Telephone number + TALK key.

Receiving call : Press the TALK key (You may pick it up when
charging).

Internal call : INT (to the Base set directly).

External switch : HOLD + 1 ~ 3 (switch to handsets 1 ~ 3).
Press INT directly (switch to the Base set).
INT + 9 (Group call).

End of talk : END key.

Receive volume : Press ↑ or ↓ for adjustment.

External redial : Redial the number (TALK + RD or RD + TALK).

Flash off : FLASH (Served as a switch when Insertion
of other calls
or PABX is applied).

Clear : CLR (If the number is mistakenly entered, press
the CLR key to erase the last digit entered).

Conference conversation : FUN + TALK (As the handset
communicates with an external call,
press FUN + TALK keys and pick up
the receiver of the Base set. Now a
conference call is established).

Memory setting : Telephone number + FUN + MEM +
0 ~ 9
(10 sets of numbers can be remembered).

Inquiring a number in memory : MEM + 0 ~ 9

Searching a number in memory : MEM + ↑ or ↓

3. Function setting of the Base set

Automatic resetting the codes : FUN + INT (At the same time with
the handset). Setting the amount of the handset : FUN + # + 1 ~ 3
(3 handsets in Maximum).

External dialing : Pick up the receiver + telephone number.
Telephone number + SPK or SPK +
Number. Receiving call : Pick up the receiver
handset. Internal call : INT + 1 ~ 3 (to
the handset). External switch : HLD + 1 ~ 3 (to
the handset).
HLD + 9 (for group call).

External hold on : Press the HLD key. Press the key again to release
the hold. End of talk : Just hang up the telephone. External
redial : Pick up the receiver + REDIAL,
SPK + REDIAL or REDIAL + SPK (Hand-free
redialing).

Flash off : Press the F/P key when on the Line (Served as a
switch when insertion of other calls or PABX is
applied).

Clear : CLR (when hand-free dialing)

Memory setting : Telephone number + FUN + MEM + 0 ~ 9

Inquiring a number in memory : MEM + 0 ~ 9

Dialing on the number in memory : Pick up the receiver + MEM +
0 ~ 9,
MEM + 0 ~ 9 + SPK or SPK +

Flash time setting : MEM + 0 ~ 9
FUN + * + 1 ~ 9 or 0

	1:	150 ms	2:	300 ms	3:	450 ms .
4:	600 ms	5:	750 ms			
	6:	900 ms	7:	1050 ms	8:	1500 ms
9:	1350 ms	0:	1.5 sec			

Start preventive setting against unexpected user :

FUN + HLD + 1
(The LCD display will
show I)

h After the handset is used, I will disappear automatically. However, the preventive setting still works.

Cancel preventive setting against unexpected user : FUN +
HLD + 2

(The LCD of I will
disappear)

Warranty and its provisos

Warranty Card

Type 966LCD wireless telephone

Customer:

Address:

Tel:

Distributor:

Tel:

Date of purchase:

The card is Invalid if there's no chop of the distributor.

Items under warranty and provisos:

.The term of servicing without charge is one year beginning from
the date of purchase when the set is in normal use.

Including replacements of spare parts and maintenance.

Antenna.battery.adapter.and similar consumer parts are excluded.

Damage due to carelessness,Irresistible forces of action of nature
are also excluded.

.After the term of warranty replacement parts will be charge based on
the price in the service manual.

.No re-issue of this warranty if it is missing. The customer who has

lost the warranty card can receive servicing of free charge only if
the

term beginning from the final date of production of this product is
within one year.