

Exhibit A

ID label photo or engineering drawing

Remote Control Operation

Press once to unlock driver's door and fuel filler flap.

Press twice to unlock all doors, fuel filler flap, and liftgate.

One flash of turn signals indicates completion of the unlocking command.

Note:

If the fuel filler flap cannot be opened, refer to *Fuel Filler Flap, Manual Release* (see Index).

After unlocking the vehicle, if neither door nor liftgate is opened within approximately one minute, the vehicle is automatically locked again.

Press once to lock all doors, fuel filler flap, and liftgate.

One flash of turn signals indicate that the vehicle is locked and the Antitheft Alarm is activated.

Press to unlock liftgate.

Important!

A minimum height clearance of 7 ft (2.15 m) is required for the liftgate to swing open.

Press panic button for approximately one second to activate the visual and audible alarm.

Notes:

The alarm can be cancelled by pressing the lock, unlock or liftgate button for approximately one second, or by inserting key in steering lock.

If key is inserted in steering lock, the vehicle cannot be locked or unlocked with the remote control.

For operation in the USA only: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

Manual Locking/Unlocking in Case of Remote Control Malfunction

Use key to lock/unlock either front door, if remote control fails.

To do so, first remove small cap from door lock.

Note:

The alarm sounds when unlocking the door. Cancel alarm by inserting key in steering lock, or by centrally unlocking the vehicle with switch, or by using the remote control.