



# Users Manual

## Remove the GPRS modem software

1. Go to add/remove programs in Control.

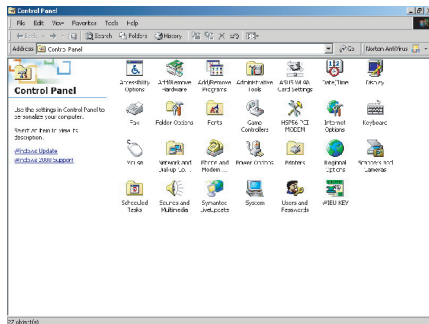


2. Select "USB GPRS/WLAN dongle" then click on Change/Remove.

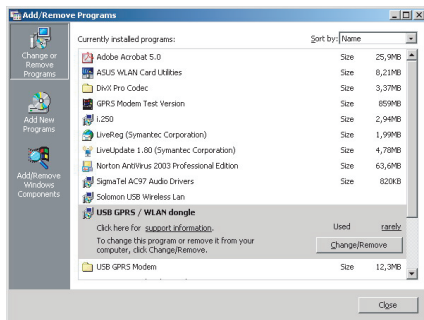


# Users Manual

3. You will see the USB GPRS-WLAN dongle installation dialogue box, select "Remove", then click "Next".

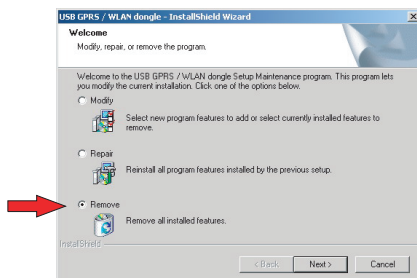


4. A popup window shows "Do you wish to remove the program and its components"? Click on Yes, and then the software starts to remove the program.

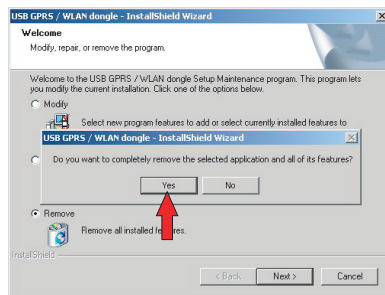

# Users Manual


5. When the program is removed, a dialogue box will show up to indicate it has completed, then click on Finish to close the dialog box.

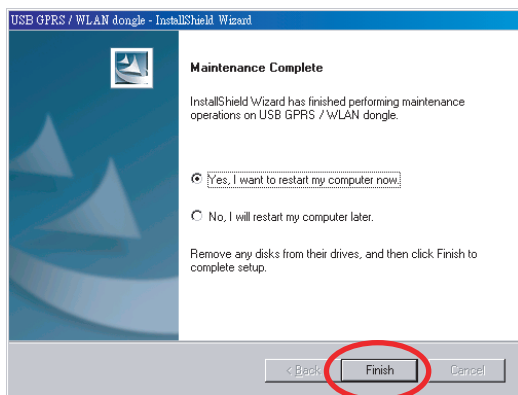


# SMS Management

## Send and Receive SMS

- 1. Click "Message" icon and the SMS functions will be initiated.

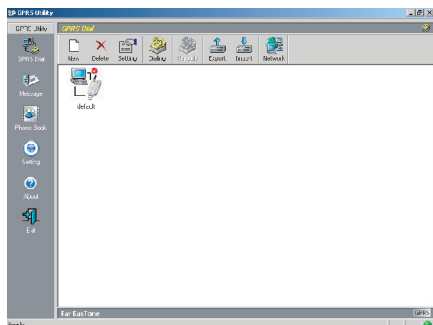

- 2. The SMS user interface.

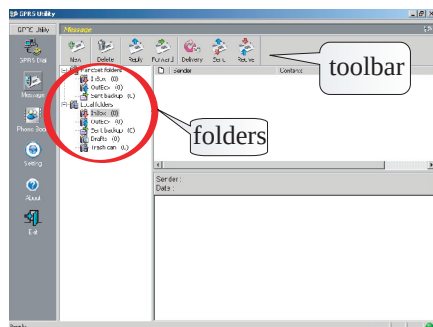

- Folders including: SIM card folders and Local folders; SIM card folders indicate the contents stored on the SIM card and the Local folders indicate the contents stored on the local PC.

# SMS Management

## New SMS

1. Click on "New" in the toolbox or right mouse click on the empty folder content select "New", the Message Editor window will pop out.

