



B. The installation of Handheld transmitter

 
Press the power switch for 1 second and then relax. At that time, LCD appears normal mode. when the indicator light brightiny, the transmitter can work. The LCD appears the degrce of the battery  Full shows 8 points, middle shows 4 points. the end shows 1 point. (please chanye the battery)

There are four main menus.

1. The main screen(DISPL): the screen is on  when press "SET" , the screen appears  or  soon. If want to set the frequency, please press "▲" or "▼", the screen appears  twinkling, press "SET", and then the screen appears the frequency. If want to set the channel, please press "▲" or "▼", the screen appears  twinkling, press "SET", and then the screen appears the channel.
2. Volume setup(SNESIT):Press "SET", the screen appears ,  and , each charnge is -10dB when press "▲" or "▼". The normal is: +30dB/-20dB for perform, -20dB/-10dB for generic speaking, -10dB/0dB for interview.
3. Frequency setup(TUNE):Press "SET", the screen appears the frequency between"▲" and "▼" after appears  there are 1280 frequencies for choosing, each change is 25KHz. When press "▲" or "▼".Pleas press again after setup the frequency.
4. Lock setup(LOCK): Press "SET", the screen appears  or  after appears  .If need to lock the key, please press "▲" or "▼" ,when  twinkling, press "SET" again. If need to release key, press "SET" the screen appears"▲" or "▼" twinkling after appears  press "SET" again. And then you can go on setup other functions.





Back

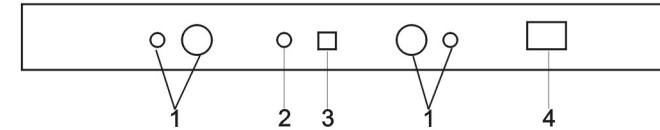

1. Independent Audio Output Connectors: There is a separate balanced XLR connector and unbalanced 1/4-inch phone jack for each channel.
2. Mixed Channels Audio Output Connector: An unbalanced, 1/4-inch phone jack connector mixes both channels into a single output.
3. Power input connector: Connects to a PS20(120Vac) or PS20E(230Vac) power adapter.
4. Alternating current jack: can use for 110V-230V.

B. The installation of the receiver

  
1. Put the two antennas into the socket A B at the back panel separately in a vertical (990) angle.
2. Put the power plug into the power socket at the back of the machine (NOTE: The power supply must comply the requirement of the system).
3. Turn volume smallest. Press the power switch for 1~2 seconds and then relax. At that time, LCD appears normal picture.
4. Adjust all the function key for ready position you want (See the description LCD or the control panel).
5. After using press the power switch for 2~3 seconds and the power stops. The picture of LCD disappears automatically.





C. LCD Control Panel


 
Turn the power on, LCD appears as below:

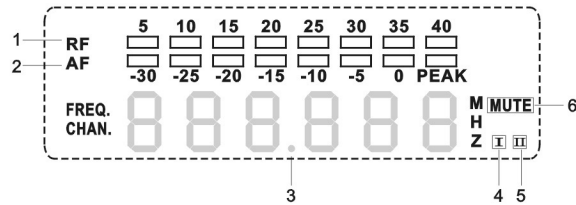

1. RF Indicator
2. Audio Frequency Indicator
3. Signal Channel Indicator
4. A Receiving Channel Indicator
5. B Receiving Channel Indicator
6. MUTE Indicator

The names of the Buttons and their functions:

  
1. Button "SET" for menu solution and Definition. Press this buttorn for changing what you want. First press"▲" or "▼" for solution and then press "SET" for definition.
- 2."▲" or "▼" Button, for adjusting or selecting the present menu statue indicating.
- 3.Operating step of button "SET":
Signal Channel indicating adjustment Frequency sensitvity adjustment (SQELCH) signal channel souldtion Adjustment for system's locked statue, (a) Signal Channel Indication and Mennu Adjustment.
Press "SET" button to make LCD indicate as below:



Description of the transmitter

A: The part manes and their functions:

 M-70H

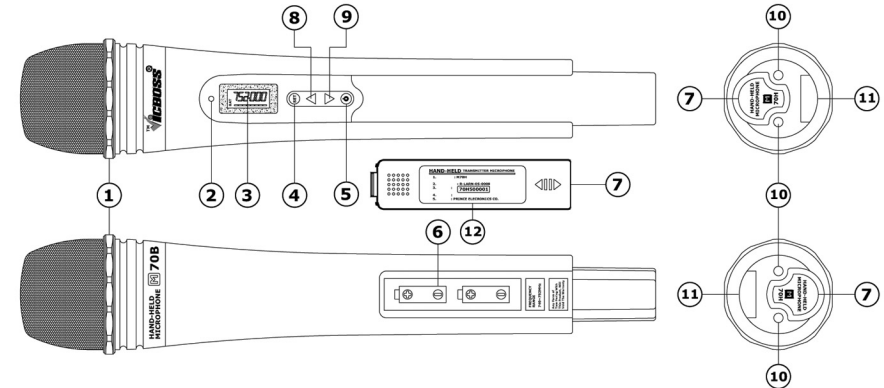

- ① 마이크 그릴 (MIC Grill)
- ② 마이크 사용중 표시 램프 (ON-AIR LED Indicator)
- ③ LCD 디스플레이 표시창 (LCD Panel Display)
- ④ 메뉴 선택 버튼 (SET Control Button)
- ⑤ 전원 ON/OFF 스위치 (Power ON/OFF Switch)
- ⑥ 배터리 함 (Battery Case)
- ⑦ 배터리 교환 개방 커버 (Opening Battery Compartment)
- ⑧ 주파수 및 채널 올림 조작버튼 (Frequency & Channel UP Control Button)
- ⑨ 주파수 및 채널 내림 조작버튼 (Frequency & Channel DOWN Control Button)
- ⑩ 배터리 충전 단자 (Battery Rechargeable Jack)
- ⑪ 모델번호 및 제품명 명판 (Index Name)
- ⑫ 인증번호 표시 스티커 (Certification NO Sticker)