 


USER`S GUIDE MANUAL

Introduction

Congratulations on your purchase of a Mitsuki Infinite Plus Numeric Display pager. This user's guide explains how easy it is to use the Mitsuki Infinite Plus pager.

1. Operating your Pager

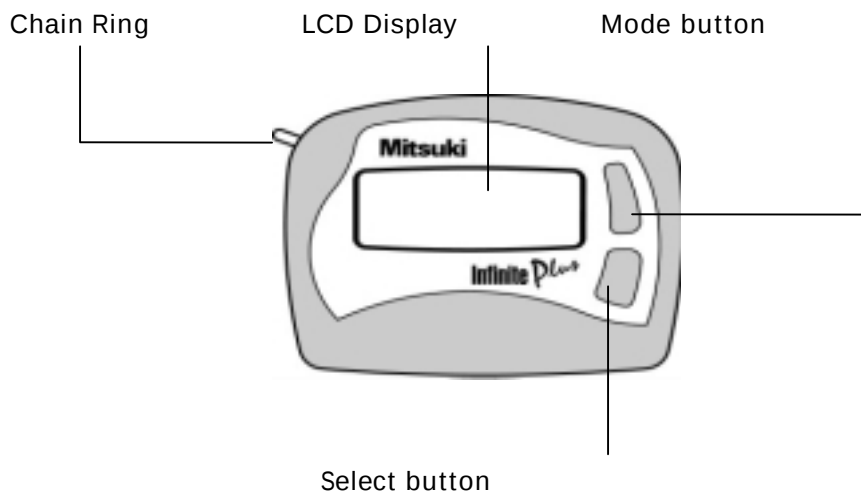

2. Controls

A.Mode button

- Turn your pager on
- Turn the back light on/off
- Enter the function menu
- Delete and lock messages
- Return the pager to the standby screen

B.Select button

- Display messages
- Select pager functions

3. Function Indicators



 
4. Turning your Pager off

- 1) Press Mode button for 2 seconds on the standby screen and scroll the menu by Select button until "POWER OFF?" is displayed.
- 2) Press Select button for 2 seconds to turn your pager off.

(power off mode)




(power off)



5. Turning your Pager on

 Press Mode button for a second to turn your pager on. Your pager gives an alert sound, after displaying the power-up screen. The time of day, day of week and an alert indicator are shown on the standby screen.



(power off)



(standby)

6. Receiving and reading message

Your pager can receive up to twenty 20-character messages. When a message is received, the pager alerts for eight seconds.

- 1) Press any button to stop the alert.
- 2) Press Select button to display the message and the time the message

was received.

3) Press Mode button twice while reading your message to return to the standby screen.

Message longer than 12 characters display on a second screen, indicated by the continuous message icon. Press Select button to display the second screen.



The first screen of your message displays the message slot number and time received. If a message is not read, the pager gives a remainder alert every two minutes and the screen displays the number of unread messages (i.e. 1 memos, 2 memos) until all messages are read.



If the pager receives more messages than its available memory can hold, the new message replaces the oldest read, unlocked message. An overflow condition occurs when all message slots are filled with unread message, while the pager is in the overflow condition, the oldest unread message is discarded.

At this time, the pager displays "MEMO FULL". Message must be read and erase to clear the overflow condition.



7. Pre-programmed message (canned message)

This pager is capable of displaying pre-programmed alphanumeric messages when received special code. The code for these messages should only be given to people who page you frequently. This code is made up of four decimal digits. First two digits are message-code and

last two digits are identity-code. Identity-code indicates who pages you.

Message-code s from 00 to 19.

Identity-code is from 00 to 09.

1) Sending a pre-programmed messages.

If your friend wants to send a pre-programmed message, he has to dial the pager number as he would normally do. And he has to press message-code(two digits) and his identity-code(two digits).

2) List of pre-programmed messages:

Message-code : Message

00	: call home urgent
01	: call home not urgent
02	: call office urgent
03	: call office not urgent
04	: I love you
05	: I miss you
06	: sweet dreams
07	: you love me?
08	: call boss urgent
09	: call boss not urgent
10	: good morning
11	: have a nice day
12	: happy valentine day
13	: happy birthday
14	: merry christmas
15	: happy new year
16	: happy mather's day
17	: happy father's day
18	: congratulation
19	: call me sweet heart

8. Turning the Back Light on/off

1) Press Mode button to turn the back light on.

2) Press Mode button again to turn the back light off.

The back-light turn off automatically eight seconds after returning to the standby screen.

9. Changing Alert mode

1) Press Mode button for two seconds to enter the function menu.

2) Press Select button to scroll the function menu.

3) If "SOUND?" is displayed, press Select button for two seconds.

 
4) Press Select button to select alert menu SOUND1 to SOUND14(5 tones and 9 melodies), and SOUND OFF(vibration).



10. Setting the Time



- 1) Press Mode button for two seconds to enter the function menu.
- 2) Press Select button to scroll the function menu until "TIME?" is



displayed.

- 3) Press Select button for two seconds to set the day of the week. The



 
day blinks.

- 4) Press Select button to change the day.
- 5) Press Select button for two seconds to switch to the hour. The hour



blink.


As the same procedures, you can change the minutes and AM/PM.



- 6) Press Mode button twice to return to the standby screen.

11. Setting the Alarm

 - 1) Press Mode button for two seconds to enter the function menu.
 - 2) Press Select button to scroll the function menu until "ALARM?" is displayed.
 - 3) Press Select button for two seconds to set the alarm time. The ON/OFF blinks.
 - 4) Press Select button to change the alarm on/off.
 - 5) Press Select button for two seconds to switch to the alarm time.
 - 6) Press Select button to change the alarm hour digit.
 - 7) Press Select button for two seconds to switch to the alarm minutes.
- As the same procedures, you can change the alarm minutes and AM/PM.
- 8) Press Mode button twice to return to the standby screen.

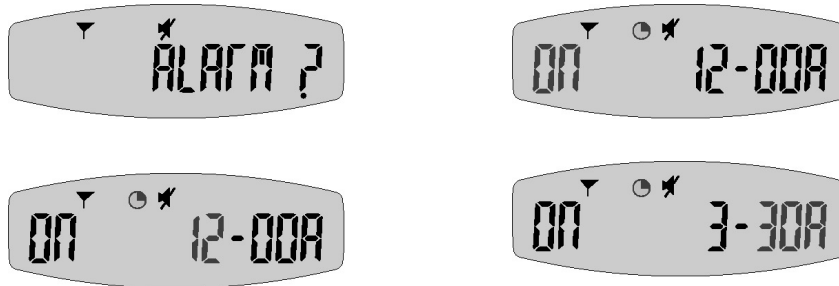

12. Protecting (Saving) messages

- 1) Press Mode button for two seconds, while reading your messages.
The "CLEAR?" is displayed.
- 2) Press Select button to protect your messages. The Protected message icon indicates that
your message is protected.
- 3) Press Mode button twice to return to the standby screen.
- 4) Press Mode button for two seconds to remove the protection, while reading your messages.
The "CLEAR" is displayed and the Protected message icon is removed from screen.
- 5) Press Mode button twice to return to the standby screen. Protected

messages cannot be

erased or overwritten by new messages when memory is full. You can protect up to four messages.

13. Erasing all messages

- 1) Press Mode button for two seconds at the standby screen.
- 2) Press Select button to scroll the function menu until "CLEAR ALL?" is displayed.
- 3) Press Select button for two seconds to erase all messages. The "SURE?" is displayed.
- 4) Press Select button for two seconds to erase all messages. The "NO MEMOS" is displayed.
- 5) Press Mode button twice to return to the standby screen. The protected messages cannot be



erased.

14. Erasing Selective messages

- 1) Press Mode button for two seconds, while reading a message. The "CLEAR?" is displayed.
- 2) Press Select button for two seconds to erase the message.
- 3) Press Mode button twice to return to the standby screen. Only unprotected messages can be erased.

15. Features

- 1) Back-light : In low-light condition, the back-light makes the screen easy to read.
- 2) Duplicate messages : If the same message is received more than once, the duplicate message icon is displayed when receiving your

latest message. This message contains the latest time stamp.

- 3) Low battery indicator : When battery power reaches low levels, the low battery icon is displayed, prompting you to change the battery, your pager gives an alert or vibrate every two minutes.
- 4) Memory retention : All messages remain in memory, even when the player is off.
- 5) Message erase : Messages can be erased all at once or selectively at your choice to free space in memory.
- 6) Automatic alert reset : Your pager alerts automatically, stop when any button is pressed.
- 7) Alarm : This alarm can be set to alert you.
- 8) Reminder alert : The pager chirps or vibrates every two minutes until you read all unread messages.
- 9) Standby screen : The standby screen displays the time of day/day or week and the indicators.
- 10) Time of day : The time of day displays whether the pager is on or off.
- 11) Time stamp : The time of day a message is received is displayed on the first screen of each message.
- 12) User selectable audible alerts : A selection of seven alert tones gives your choice of message alert heard when you are paged in the audible alert mode.
- 13) Pre-programmed message : The pager is capable of displaying pre-programmed alphanumeric messages.

16. FCC Requirements

This device complies with Part 15 of FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

CAUTION: Any changes of modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.