

Congratulations on purchasing the Hydro Xtreme Raceway R/C boat!

Please unpack all items carefully

1. Transmitters/Chargers x 2
2. R/C boats x 2
3. Inflatable Raceway x 1
4. Hand Pump x1
5. Flags x 9
6. Ramp x 1
7. Banner x 3
8. Buoys x 4
9. Repair Patch

Step 1

Inflate raceway with a hand pump and fill with water to approximately 2.5 inches deep.

Step 2

Attach all the flags, ramp, arch and buoys to the inflatable raceway.

Step 3

Unlock the battery cover (handle grip) of the transmitter using a screwdriver

Install a 9V battery according to the labeled polarity.

Secure and lock the battery cover using a screwdriver.

Step 4

Locate the switch on the side and turn “ON” the transmitter.

Step 5

Remove the figurine from the boat and make sure the power to the boat is switched off.

Have the boat upright and insert the rear of the boat into the charger underneath the remote controller. (Make sure the metal contact on the rear of the boat is in contact with the connectors underneath the remote controller)

Step 6

When connected properly the green LED of remote controller will be lit to indicate that the boat is charging. After 2 minutes, the LED will extinguish to indicate the boat is fully charged and ready to play.

Step 7

Remove the boat from the remote controller. Switch on the boat’s power and place it in the water of the raceway. You can adjust the rudder to ensure how straight the boat goes.

Step 8

While the remote controller is still “ON”, push the joystick with your thumb upward to drive the boat forward. The joystick has 6 positions to control the boat in different

directions. When the boat slows down or becomes weak after a few minutes of playing, you can repeat the step 3-5 to recharge it in order to get back into action.

Step 9

Make sure the color of the remote controller matches the color boat during play. You This assures that the frequencies of the controllers match the exact boats.

Step 10

Remove all accessories (flag, banner, buoys and ramp etc) from the raceway when finished playing with the Hydro Xtreme Raceway.

Step 11

Unplug the drain plug on the bottom of raceway and rest the other end of the hose in drainage to release the water.

Step 12

Let the raceway dry and deflate it.

Step 13

After deflating the roll up the raceway for easy storage and avoid creasing.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- I Reorient or relocate the receiving antenna.
- I Increase the separation between the equipment and receiver.
- I Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- I Consult the dealer or an experienced radio/TV technician for help.

FCC ID: NS618134-27

FCC ID: NS618134-27

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: NS618134-49TX

FCC ID: NS618134-49TX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: NS618134-49RX

FCC ID: NS618134-49RX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.