


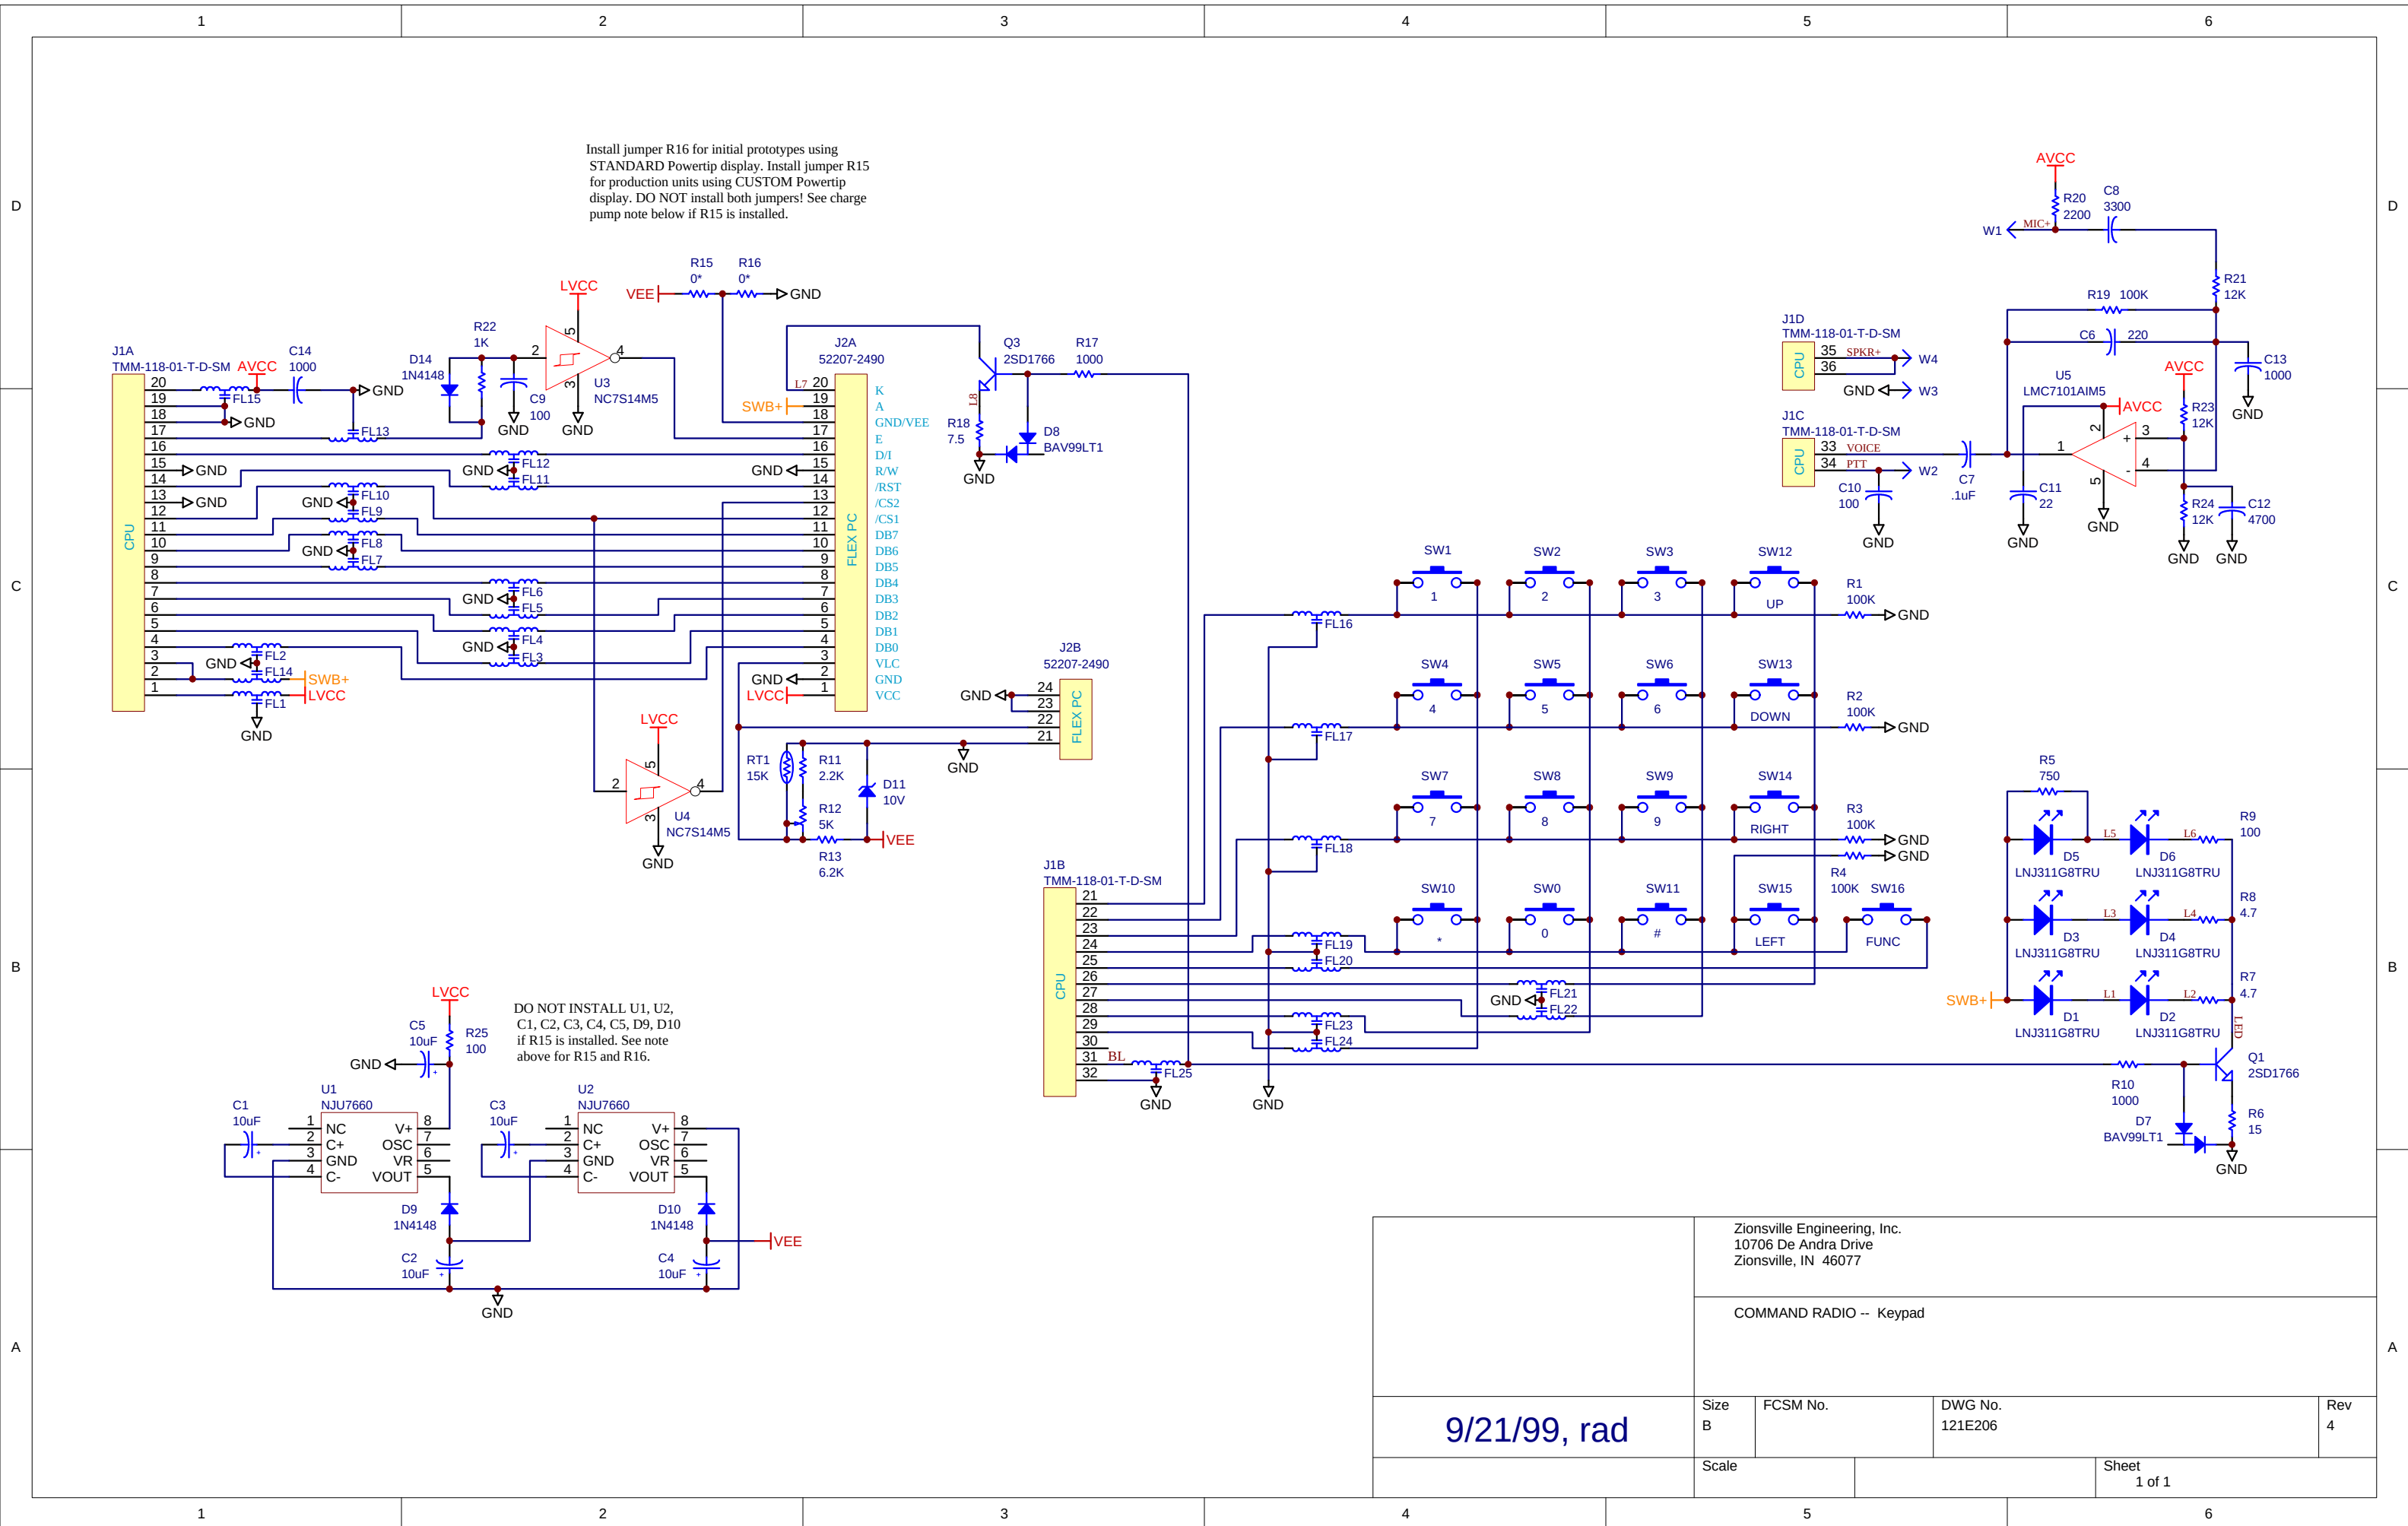

Install jumper R16 for initial prototypes using STANDARD Powertip display. Install jumper R15 for production units using CUSTOM Powertip display. DO NOT install both jumpers! See charge pump note below if R15 is installed.

DO NOT INSTALL U1, U2, C1, C2, C3, C4, C5, D9, D10 if R15 is installed. See note above for R15 and R16.

Zionsville Engineering, Inc.
10706 De Andra Drive
Zionsville, IN 46077

COMMAND RADIO -- Keypad

9/21/99, rad

Size B	FCSM No.	DWG No. 121E206	Rev 4
Scale		Sheet 1 of 1	