



World Headquarters / North America

Hypercom Corporation
2851 W. Kathleen Road, Phoenix, Arizona 85053 USA • Tel: +1.602.504.5000 • Fax: +1.602.504.4655

HYC Latin America:

Hypercom Industria e Comercio LTDA
Centro Empresarial Atibaia
Rodovia Dom Pedro 1, KM 07, 5 Av.
Tegula, 888-Ponte Alta
Atibaia 12940-000, Brazil

Tel: +55.11.4417.7000
Fax: +55.11.4417.7060

HYC EMEA:

Hypercom EMEA
Unit 2, Woking Eight
Forsyth Road
Woking, GU21 5SB,
United Kingdom

Tel: +44.1483.718600
Fax: +44.1483.718601

HYC Asia:

Hypercom Asia
21/F Metro Centre II
21 Lam Hing Street
Kowloon Bay, Kowloon
Hong Kong

Tel: +85.2.2561.6800
Fax: +85.2.2561.5890

HYC Australia:

Hypercom Australia
Unit 1,
11 Orion Road
Lane Cove, NSW 2066
Australia

Tel: +612.9420.6444
Fax: +612.9420.6466

Compliance

- FCC ID: NVA00003, QIPMC56 (GSM)
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The user is cautioned that changes or modifications to the product(s) identified in this manual unless expressly approved by Hypercom could the user's authority to operate these product(s).
- IC: 1204B-00003, 267W-MC56 (GSM)
- CE
- A-tick

Bluetooth models use Ezurio BISMII Transceiver.

© 2006 Hypercom Corporation, all rights reserved. Hypercom and the Hypercom logo are registered trademarks of Hypercom Corporation. Optimum is a trademarks of Hypercom Corporation. All other products or services mentioned in this document are trademarks, service marks, registered trademarks or registered service marks of their respective owners. Celebrating 26 years of technology excellence, innovation and leadership, Hypercom Corporation is a leading global provider of electronic payment solutions that add value at the point-of-transaction for consumers, merchants and acquirers, and yield increased profitability for its customers. Widely recognized as the global payment technology innovator, Hypercom delivers comprehensive card payment terminal, network and server solutions that help merchants and financial institutions generate revenues and increase profits.

Headquartered in Phoenix, Arizona, Hypercom's card payment terminal, network and server solutions are leading the transformation of electronic payments in more than 100 countries.

www.hypercom.com



Terminal Installation Guide

M4100



Optimum M4100 Installation Guide

Equipment Check List →

WARNING:

- The battery pack is a Li-ion polymer battery which can explode if not properly replaced, handled or disposed of. Dispose of the battery in accordance with local regulations. Use only batteries recommended by Hypercom as a replacement.
- Recharge only with Hypercom approved chargers designed for this product.
- Do not use if visibly damaged.
- Do not expose to temperatures above 140 °F or 60 °C.
- Do not disassemble.
- Do not short circuit battery pack terminals.
- Do not incinerate or crush.
- Keep out of reach of children and pets.
- Dispose of properly.



Optimum M4100

Photo
Coming
Soon

Cable



Stylus



Battery

The Optimum M4100 terminal comes with a Lithium Battery Pack (3.6V 1150mAh). A fully charged battery can complete more than 200 transactions (or 10 hours) before requiring another charge.
NOTE: Charge the battery for 4-6 hours before initial use of the terminal.

To recharge the terminal, use the M4100 Docking Station (sold separately).

To use the terminal while on the docking station, ensure that the terminal is fully charged.

For additional information, visit our web-site at www.hypercom.com.

Inserting the Battery



Remove the battery from the packaging. Flip the terminal over (as shown).



Remove the battery cover from the terminal.



Insert the battery (as shown).



Reattach the battery cover. Turn the terminal on.

Powering the Terminal



Push button to power terminal

Using the Stylus



Remove the stylus from the packaging.



Insert the stylus (as shown).



Insert the stylus into the stylus holder (as shown).



To use, remove the stylus from its holder and press gently on the terminal screen. When not in use, return the stylus to its holder.

Accessories Available



Printer Module
(P/N# 010325-001)



Docking Station Module
(P/N# 010326-001)



Receipt Paper
(P/N# 710024-002)



Terminal Battery (Single Stack)
(P/N# 400036-001)



Printer Battery (Double Stack)
(P/N# xxxxxx-xxx)



Printer Module
(P/N# 010325-001)

Photo
Coming
Soon

Power Cord
(P/N# 810005-010)

Photo
Coming
Soon

USB Cable
(P/N# 810372-001)