

 
FORWARD & TURNS  
IN REVERSE

CRASH & SMASH

2.4 GHZ  
MULTI-CHANNEL  
RADIO CONTROL

00274 CRASH & SMASH  
00276 LIGHTNING McQUEEN  
Size: 10(W) x 6.5(H) x 5.25(D) inch  
Nov 29, 2016

R/c  
*Crazy Crash & Smash*  
**Lightning McQueen**

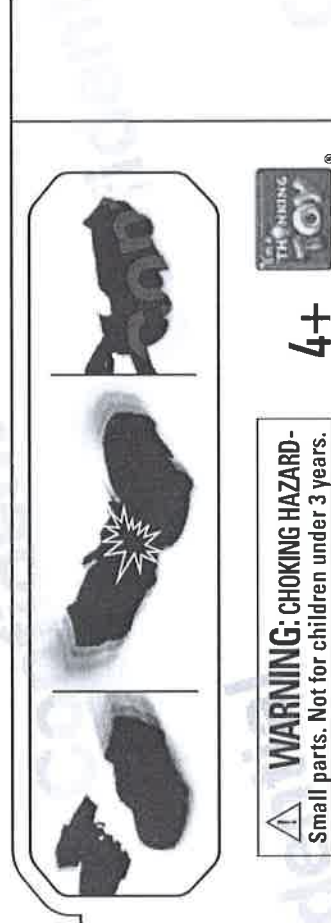

PRIVATE &  
CONFIDENTIAL

PRIVATE &  
CONFIDENTIAL

## Crazy Crash & Smash Lightning McQueen

COLLECT 'EM ALL!  
(EACH SOLD SEPARATELY)



Lightning McQueen

CONTENTS: Lightning McQueen  
and Radio Control.

BATTERIES: Car requires 3 AAA  
alkaline batteries. Radio Control  
requires 2 AAA alkaline batteries.  
(Alkaline batteries not included).

See bottom panel Preparation and  
Battery Instructions before playing.  
Retain this box for future reference.

No. 00276

Asst. No. 00274



MADE IN CHINA

 
PRIVATE &  
CONFIDENTIAL

#00276 **REVISED** 14 DEC 2016


PRIVATE &  
CONFIDENTIAL



PARTS POP OUT WHEN CRASHES!

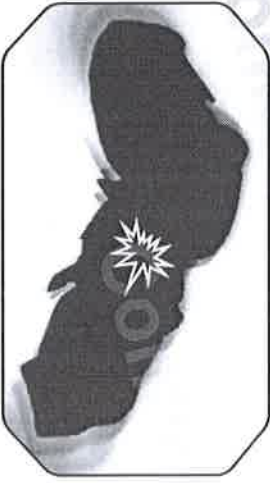

 Cruz Ramirez sold separately from Thinkway Toys. Item #00277

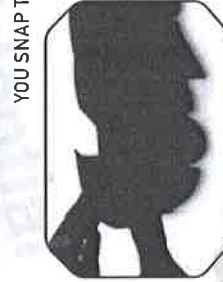

YOU SNAP THEM BACK IN!



FORWARD & TURNS  
IN REVERSE

CRASH & SMASH

2.4 GHZ  
MULTI-CHANNEL  
RADIO CONTROL

Creating Fun With Technology®



ThinkwayToys.com

Manufactured For  
**THINKWAY TOYS**  
POINT LOOKOUT, N.Y. 11569  
1-800-535-5754

Product and colors may vary. Remove all  
packaging materials before giving to a child.

© Disney/Pixar  
Visit [disney.com/cars](http://disney.com/cars)

 
 


P2-3



4+

**WARNING: CHOKING HAZARD -**  
Small parts. Not for children under 3 years.

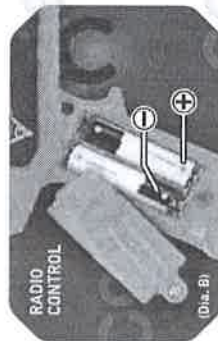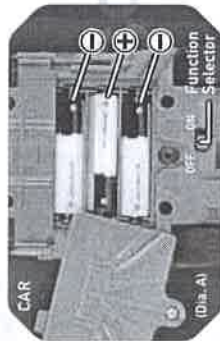

**PREPARATION:** Remove all packaging materials before giving to a child. Follow Battery Instructions below to install alkaline batteries before playing.

**BATTERY INSTRUCTIONS:** Adult Assistance Required.

**CAR:** Requires 3 AAA alkaline batteries (not included).

**RADIO CONTROL:** Requires 2 AAA alkaline batteries (not included).

Always turn the Car's power off before installing batteries. Ask an adult to help open battery covers by using a Phillips screwdriver (not included) and install as shown 3 new AAA alkaline batteries (not included) for the Car (D1a. A) and 2 new AAA alkaline batteries (not included) for the radio control (D1a. B). Replace battery covers and screws. Set the Car's function selector to ON.

**BATTERY CAUTION:** Always check batteries in case of leakage. Be sure to insert batteries correctly and follow the toy and battery manufacturers' instructions. Never mix old batteries with new batteries, or mix carbon-zinc, alkaline or nickel-cadmium batteries. Do not mix different brands of batteries. Do not use rechargeable batteries. Do not attempt to recharge batteries which are not rechargeable. Do not short-circuit the battery contacts. Always remove batteries from the product when not in use or discharged. Dispose of batteries safely. Caution: Batteries inside this product may explode or leak when in contact with fire.

#### PAIRING INSTRUCTIONS:

**IMPORTANT -** The Car needs to pair (link) with the radio control BEFORE playing.

1. Set the Car's function selector to ON. Place it on a flat & smooth surface. Aim the radio control at the Car for a few seconds for linkage.
2. Pairing is for one set of Car and radio control only.
3. If the toy has been idle for a while, it will automatically shut off to save battery life. Set the Function Selector on the Car to OFF then to ON to reactivate the toy.

#### HELPFUL HINTS:

1. Only one set of car & radio control can be linked at a time. Ensure power is off on other radio control cars.
2. For best results, aim the radio control in the direction of the toy.
3. When playing indoors, operate the toy on a smooth, even floor in a spacious area clear of delicate or breakable objects. Do NOT operate the toy near stairs as it may fall and incur damage.
4. Floor surface (ie. texture, smoothness) may affect vehicle performance while driving in reverse mode.
5. Do not attempt to manually turn or apply force on the back wheels while in motion. This may damage the mechanisms.
6. If the toy malfunctions for no reason, try resetting the Function Selector to OFF, then to ON.
7. If the toy is not responding properly or the motion starts to slow down, try reinstalling or replacing all batteries with new ones.
8. Do NOT operate the toy on public roads or in public places.
9. Do NOT operate the toy in wet areas. Do NOT immerse the toy or radio control in water.
10. Do not modify or change any component inside the toy or radio control.
11. Keep tires clean and free of debris. Clean them with a dry, clean cloth only.
12. Keep tires away from fingers, face, hair and loose clothing. Do not attempt to stop the tires when they are in motion.
13. Turn power off when the toy is not in use. Remove all batteries from the toy and radio control before storing the toy for a long period of time.

00276-8111  
CARS 3

#00276

REVISED

14 DEC 2016

P3-3

TOY-CAR  
TOY-REMOTE CONTROL

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

00276, 00277, 00260 (Asst.No.00274) / 00278, 00279, 00280 (Asst.No.00298) / 00314, 00315, 00317, 00318 (Asst.No.00313) / 00319 / 00244, 00247 (Asst.No.00249) / 00297 / 00305  
00252, 00257 (Asst.No.00258) / 00303 / 00308 / 00238 / 00233

Size: 7.5" x 4.25"