



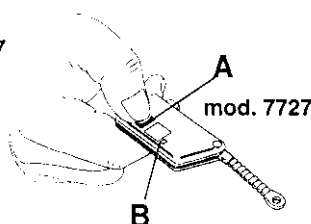

BRIEF INSTRUCTION

ARMING

- Press the button A of the radio control to lock the doors (if the vehicle has a central locking system).
- The turn indicators will blink twice.
- The buzzer will beep twice (if activated).
- The protections activate after a 40 seconds timer is elapsed.
- The led will flash.

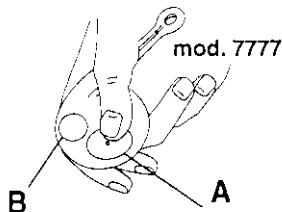

PROTECTION

When armed the system will generate an acoustic and visual 30 s alarm when the bonnet, boot or one of the doors is opened. Articles with the volumetric sensor (ultrasonic and/or hyperfrequency) will generate the alarm in case of intrusion. The system remains activated at the end of the cycle.

Whith the system armed it will not be possible to cause the engine running (for system with engine immobiliser).

INTERRUPTING AN ALARM IN PROGRESS

If the system generates an alarm, the siren can be disactivated by pressing button A on the radio control once. The turn indicators will also stop blinking but the alarm system remains armed. Thus, if the system is activated (siren sounding), press the button twice to unlock the vehicle. The first pressure will stop the siren, the second will disarm the system and unlock the doors.

DISARMING

- Press button A on the radio control to open the doors.
- The turn indicators will blink once.
- The buzzer will beep once (if activated).
- The protections deactivate immediately.
- The led will go off.

Note: If an alarm has occurred the buzzer and the turn indicators will give four signals instead of one also if the buzzer is disarmed (refer to ALARM MEMORY section).

RADIO CONTROL BATTERY LOW

When the radio control battery becomes low, the radio control LED will blink in an irregular way or once only instead of remaining permanently ON until the button is released. Replace the battery.


REPLACE THE BATTERY

1. To change the battery, open the radio control as indicated in the figure, levering in the zone marked "OPEN".
2. Remove the old battery as indicated.
4. Wait for 10 seconds about.
5. Open the pack with the new battery. Only touch it on its sides with the fingers. Insert the new battery, remembering to comply with the polarity indications (+sign upwards, as shown in the figure).
6. Close the radio control and press two times the A button checking the correct system operation.

Note:


If the remote control does not work proceed as follow:

- A) Press both buttons on the radio control until the LED will go OFF. Released them.
- B) Press button A remaining close to the vehicle for checking the correct system operation.

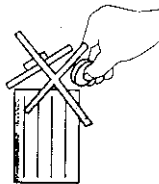

Dispose the old battery in the special containers

mod. 7777

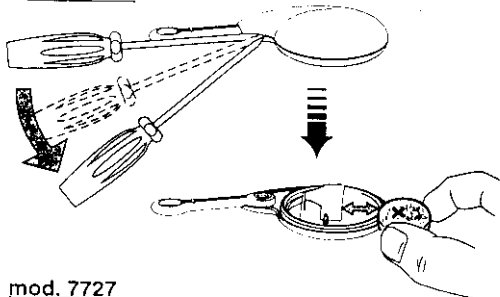

mod. 7727

