

Panasonic®


EB-TX320 Series Operating Instructions



Preliminary

Before operating this phone, please read these instructions completely and save this manual for future use. Charge battery before operation.

Press shortcut keys shown
to get to desired function.

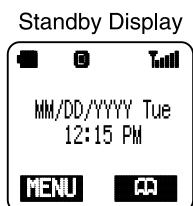

1 Phonebook (1)

- 1 Search (1)
- 2 Create (1) (2 ABC)
- 3 Super Dial (1) (3 DEF)
- 4 Search Method (1) (4 GHI)
- 5 Own Number (1) (5 JKL)
- 6 Delete All (1) (6 MNO)

Chapter 5

2 Messages (2 ABC)

- 1 Voice Mail (2 ABC) (1)
- 2 Text Message (2 ABC) (2 ABC)

Chapter 7

3 Call History (3 DEF)

- 1 Dialed (3 DEF) (1)
- 2 Missed (3 DEF) (2 ABC)
- 3 Received (3 DEF) (3 DEF)
- 4 Call Timers (3 DEF) (4 GHI)

Chapter 6

4 Tone Settings (4 GHI)

- 1 Ring Volume (4 GHI) (1)
- 2 Key Volume (4 GHI) (2 ABC)
- 3 Ring Alert (4 GHI) (3 DEF)
- 4 Message Alert (4 GHI) (4 GHI)
- 5 Vibration (4 GHI) (5 JKL)
- 6 Warning Tone (4 GHI) (6 MNO)

Chapter 6

5 Phone Settings (5 JKL)

- 1 Display (5 JKL) (1)
- 2 Answer Mode (5 JKL) (2 ABC)
- 3 Alert Mode (5 JKL) (3 DEF)
- 4 Time Settings (5 JKL) (4 GHI)
- 5 Answer Key (5 JKL) (5 JKL)
- 6 Welcome Screen (5 JKL) (6 MNO)
- 7 Language (5 JKL) (7 PQRS)
- 8 Miscellaneous (5 JKL) (8 TUV)

Chapter 6

6 Security (6 MNO)

- 1 Lock Code (6 MNO) (1)
- 2 Call Lock (6 MNO) (2 ABC)
- 3 Power-On Lock (6 MNO) (3 DEF)

Chapter 6

7 System Setting (7 PQRS)

- 1 Network Voice Privacy (7 PQRS) (1)
- 2 NAM Selection (7 PQRS) (2 ABC)
- 3 Search (7 PQRS) (3 DEF)
- 4 SVC Priority (7 PQRS) (4 GHI)

Chapter 8