



OPERATION AND MAINTENANCE MANUAL

ELEVATION OVER AZIMUTH POSITIONER AL-4017-1EBS-B

For Baron Services Radars:

XDD-350C ®

VHDD-350C ™

HDD-350C ™

HDD-250C ™

BARON RADAR SERVICES, L.L.C.

4930 Research Drive

Huntsville, AL 35805

PHONE: 256.881.8811 FAX: 256.881.8283

TABLE OF CONTENTS

SECTION 1	DESCRIPTIONS	1
1.1	General Description	1
1.2	Technical Description	1
1.3	Specifications	1
1.4	Mechanical Sub-Assemblies	1
1.4.1	Elevation Unit	1
1.4.2	Azimuth Unit	2
1.5	Electromechanical Sub-Assemblies	2
1.5.1	Limit Switches	2
SECTION 2	INSTALLATION & OPERATION	4
2.1	General.....	4
2.2	Positioner Installation.....	4
2.3	Antenna Installation	4
2.4	Operation Instructions	5
SECTION 3	MAINTENANCE	7
3.1	General.....	7
3.2	Cleaning	7
3.2.1	Exterior Cleaning	7
3.2.2	Interior Cleaning	8
3.3	Lubrication	8
3.3.1	Periodicity	8
3.3.2	2000 Hour or 2-Month Lubrication	8
3.3.3	17000 Hour or 2-year Lubrication	8
3.3	Electromechanical Components	11
3.3.2	General.....	11
3.3.3	Limit Switches Maintenance.....	11
3.3.4	Limit Switch Adjustment Procedure (see Figure 1).....	11

3.4	Timing Belt Installation And Adjustment	13
3.4.1	Belt Tension (refer to Figure 2)	13
3.4.2	Sprocket Alignment	15
3.4.3	Belt Handling	15
3.4.4	Belt Storage.....	15
3.5	Replacement of Azimuth Motor Assembly.....	15
3.5.1	Removal of Azimuth Motor Assembly.....	15
3.5.2	Installation of Azimuth Motor Assembly	17
SECTION 4	STORAGE AND PREPARATION FOR USE	19
SECTION 5	REPLACEMENT PARTS	20
5.1	PARTS LIST	20
5.1.1	GENERAL	20
5.1.2	ITEM NUMBER (ITEM No.)	20
5.1.3	DESCRIPTION.....	20
5.1.4	PART NUMBER (PART No.).....	20
5.1.5	QUANTITY (QTY).....	20
5.1.6	ORDERING INFORMATION FOR PARTS.....	21
APPENDIX		22

LIST OF TABLE AND FIGURES

TABLE 1. AL-4017-1EBS-B SPECIFICATIONS	3
TABLE 2. RECOMMENDED LUBRICANTS AND LUBRICATION INTERVALS	10
FIGURE 1. LIMIT SWITCH ASSEMBLY	12
FIGURE 2: RECOMMENDED BELT TENTION.....	14
FIGURE 3. AL-4017-1EBS-B POSITIONER ASSEMBLY	18
TABLE 3. AL-4017-1EBS-B Parts List.....	21

Table of Contents

1. Introduction.....	1
2. RDACS Terminal Window.....	2
3. RDACS Config.....	3
3.1 File Pull-Down Menu.....	3
3.2 Connect Commands.....	4
3.3 A-Scope Commands.....	5
3.4 Control Commands.....	8
3.5 Configuration Commands.....	17
4. Configuration Commands.....	36
5. Installing RDACS.....	39
6. The radacs.ini Configuration File.....	41
6.1 Start-Up Section.....	45
6.2 Master Section.....	50
6.3 Site Section.....	53
6.4 RadPgmN Section.....	57
6.5 Antenna Sections.....	63
6.6 LevelN Section.....	67
6.7 ModeN Section.....	70
6.8 AntennaCmds Section.....	91