

History:

Printing colors :



AW



If you have any questions setting up or using your tablet, please visit www.kurworld.com to find out more about Kurio, read our FAQs, and for any technical support. All of our products have a 1-year limited warranty. In the unlikely event you experience any problems with your Kurio, please contact our Customer Care team at CustomerCare@kurworld.com or call 1-800-368-2222. We will provide you with a replacement Kurio through the Customer Care/Kurio Support applications on the device. If the service representative is unable to solve the issue, he or she will provide instructions regarding returning the device to the manufacturer.

How to have your Kurio serviced if it is under warranty.

1. If you are within the 12-month original purchase date for a period of two to three months from the original purchase date, under normal use and service, against defective workmanship and materials. If the product is damaged due to accident, improper or unreasonable use or maintenance, such as a broken screen, fall, water damage, etc., this damage is not covered under the limited warranty. We will provide you with a replacement Kurio, repair or replacement options, at our discretion. We will not provide a replacement Kurio for damage to the device, especially for a broken screen or other spare parts.

[illegible]

Warning! Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

For more information about Kurio, please go to www.kurioworld.com or contact:



A Division of LF Products
www.technosourceusa.com
 Distributed by Techno Source,
 A Division of LF Products.
 © 2014 LF Products.
 All rights reserved.
 800 Cheung Sha Wan Road,
 Kowloon, Hong Kong.



Made in China
Printed in China
UM 01 140708

C14150US TS AW UM 01 140708

- While using some applications that use a lot of the device's processing capacity, the device may become warm. If this occurs, take a short break from using the device to let it cool down.
- Keep the unit clean by wiping it with a slightly damp cloth.
- If you encounter any charging issues, such as not fully charging or shutting off when it has finished charging, please contact the nearest service center for assistance. Plug the unit into the power adapter, and then press and hold the **POWER** button until the tablet turns off. Continue to hold down the **POWER** button until the battery icon shows up again. Once it appears, release the **POWER** button and press it again to start the unit normally.
- The **Kurio** bumper protects your tablet in most cases, but is only intended to make the product more durable. It is not designed to protect the product from all types of damage. Like any other electronic device, **Kurio** is fragile and despite the presence of the protective bumper, can break or be damaged from forces like dropping, banging, or being hit by other things. Please handle with care. Broken screens and touch panels are not covered by the warranty, and no bumper can prevent all damage.
- **Android 4.4's** system management, it is no longer possible to move applications to an external SD card. We advise you to store all media files on an external SD card to keep free memory on the device's internal storage for apps and games.



- Do not damage or deform the power supply USB cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.
- The power adapter & cord should be plugged in near the unit, so it is easily accessible and does not strain the cord.

- All packing materials such as internal bags, plastic collars, plastic films, screen protector film, and cartons inserts are not part of this product and should be removed before handling the device over to a child. Please keep the box and this guide for further reference.
- Do not try to disassemble the unit.
- To charge Kurio, only use the power adapter supplied with Kurio tablet.
- Avoid using the tablet while charging; this may alter the battery charging process and the battery life of the device.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- To prevent hearing damage, never use earphones at excessive volume levels. Listening to loud sounds for an extended period may cause temporary or permanent hearing loss.
- Never use Kurio while operating a motor vehicle or bicycle.
- If you feel discomfort in your hands or any pain using Kurio, please stop immediately.
- In case of long period of use, take frequent breaks.
- If a small part comes out of the Kurio, don't try to remove it. Keep it away from small children.
- Never force a connector into a port of Kurio. If a connector and a port do not join with reasonable force, make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.
- To clean the screen, simply use a soft, damp cloth. Do not use alcohol, solvent, aerosol spray or abrasive cleaners to clean your Kurio.
- The silicone bumper is designed to protect from light use and drops, but is not guaranteed to protect this delicate piece of electronics from severe drops, abuse, misuse, etc.
- The product and the adapter should be periodically examined for conditions that may result in injury to people. If you find any injury to people and that, in an event of such conditions, the adapter should not be used until properly repaired.

- **Language Selection:** Select your language to continue. You will still be able to change the language later in the Android settings.
- **Wi-Fi Connection:** Select a Wi-Fi hotspot and connect to Wi-Fi (no mandatory, but highly recommended).
- **Date & Time Settings:** Set the correct Date & Time (if not connected to Wi-Fi).
- **Select Usage Mode:**
 - **Normal Mode:** Select this mode to use your tablet normally and continue the setup.
 - **Store Mode:** This mode is used for stores and retailers. Do NOT select this mode unless you are a retailer.
- **Restore Preload Content:** This screen will be displayed only after a factory reset. It will allow you to download and install the pre-installed content. Tap **Yes** this screen if you do not want to restore the preloads.
- **Parental Account Creation:** Enter your name, email address and create a new account.
- **Security Password:** To protect your parental account, you must set up a password (choose from a pin code password, a numeric password, an alphanumeric password, or a security password). Select your preference and continue.

- **Create 1st Child Profile**
You can create the first child's profile right now or choose to create it later. Please select your preference and continue.
- **Child Profile Information**
 - Name: Enter the child's name.
 - Birthdate: Enter your child's birthday (this information will be used to automatically adjust security levels and controls).
 - Gender: Select between boy and girl.

- Select a predefined profile on the left or create your own custom settings.
- Each predefined profile defines the main settings for your child's account - that is the authorized applications, the web access filtering and the time management settings.

The Kurio Parental Widget is pre-installed on the main screen of the Parental Profile. This widget will give you quick access to the main settings and features of the Kurio System.

- Parental Account:** In this section, you will be able to change the main settings of your parental unit - email address, name, password, PIN code and more.
- Child's Profiles:** This button will allow you access to the child profile management. You will be able to create a new profile, and delete or manage an existing profile.
- Apps & Preloads Management:** In this area you will be able to install new available apps, update existing apps, categorize apps, or remove apps from your preinstalled list.
- Store:** This button gives quick access to the Kurio Store, where you can purchase the pre-installed app stores on your device - Kurio App Store & Google Play Store.
- Customer Care:** On this screen, you'll find necessary information you may need if you encounter an issue with your device. Here you can contact support, find your serial number, view FAQs, report a bug, and more.
- Settings:** This gives quick access to the main Android settings - such as date and time, application management, language, and more.
- Edit the Parental Area:** Use this button to switch profiles.

On the Profile Main Menu, you can see the current settings for your child's profile. To modify a profile, use the following settings.

- **Child Profile Information:** Change your child's name, birthday, theme or avatar.
- **App Management:** Allow or block each installed application for any profile.

Internet Filter Presets: Our advanced filtering system allows users to browse the Internet safely by blocking websites that may contain inappropriate content.

- Custom Filters:** Customize your own filters to select authorized categories or websites.
- No Internet Access:** No Internet access is allowed from the profile. Apps can still access online content, if an Internet connection is available.
- Full Internet Access:** Removes any and all restrictions to web browsing. Not recommended for a child user profile.
- Safe List Only:** Restricts Internet browsing only to websites that appear on the Safe List of the profile. All other sites will be blocked.

Warnings: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, which provides reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If you do experience interference, you may wish to take the following steps:

- Turn the equipment off and on.
- Move the equipment away from the receiver.
- Turn the equipment off and on again.

If the interference cannot be eliminated, you may wish to contact the dealer or the manufacturer for assistance. The dealer or manufacturer may be able to provide you with a different model of equipment that will not cause interference, or you may be able to modify the equipment to reduce the interference. The dealer or manufacturer may be able to provide you with a different model of equipment that will not cause interference, or you may be able to modify the equipment to reduce the interference.

The following steps should be taken to avoid interference:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

The equipment is not intended for use in the following environments:

- In the vicinity of a power line or other source of an uncontrolled electromagnetic field.
- In the vicinity of a radio frequency (RF) field.

End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (FCC) in the USA. The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. The device is designed to comply with the FCC limit. Please refer to the physical device for applicable FCC ID.

"The use of electronic/electric devices may interfere with safe operation of some aircraft and can be restricted with some airline companies. Please check with your airline company before traveling. Kurio has an Airplane Mode. Please go into the Settings of the Android Interface to switch the tablet into Airplane Mode. All wireless connections will be turned off."

Techno Source, A Division of LF Products, Pte Ltd, A Li & Fung Company
20 West 22nd St., Suite 1101
New York, NY 10010

Product: Kurio Tab Xtreme
Model: C14150

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

The undersigned does hereby declare that the product complies with the above Directives.
Eric Wolff
General Manager

 Waste electrical products and batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

CAUTION – ELECTRICALLY OPERATED PRODUCT – As with all electric products, precautions should be observed during handling and use to prevent electric shock. Adult supervision is recommended. Please retain this manual for further reference.

We need you to provide us with your email address when activating your Kurio tablet and keep your email address up to date via the Parental Area to be informed of important updates and information. Your email address will never be shared with any third parties and you can unsubscribe at any time by clicking on the link provided at the bottom of every Kurio email. To read our Privacy Policy at any time, please go to www.kurioworld.com.

- Allow USB Connection:** Will turn on the USB port when connecting to a PC or from a USB host, such as an external hard drive.
- Activate Online Ad Filtering:** Kurio will try to filter ads inside websites and apps. Some ads may remain visible.
- Reset Child Passwords:** If your child added a password to protect his profile, you can reset it using this option.
- Auto-authorize Applications After Install:** Applications downloaded from the Parental Area will automatically appear in the child's profile (not recommended).
- Lock Interface:** Turn this setting on to lock your child's interface, preventing him/her to move or delete icons.

On the right side of the main screen, you can see the current Time controls settings for this profile. Select a Kurio preset or choose to customize settings yourself. You can also import the settings from another profile.

- **Day by Day Settings:** Swipe your finger on the table to set the desired time slots for each day. You can make several slots and set different ones for each day of the week.
- **Apply the Same Settings to the Entire Week:** Click on the box at the top of the screen to make the Time Slots settings the same for every day of the week.

- **Daily Play Time:** Maximum duration of use per day.
- **Session Time:** Maximum duration of consecutive use.
- **Rest Time:** Minimum break time between each session.

At the bottom, you can exclude some app categories from play time restrictions. For example, you can exclude the Educational Category so that all apps in this category will be accessible at all times.

- From the master list of apps shown, check the box next to the app to use in the profile.
All unchecked apps will not appear on this profile's interface.
- It is also possible to import the settings from another profile or to use the default original selection.

[illegible]

The tablet must be set up by an adult to ensure an appropriate level of protection for all users of the device.

- To turn off your Kurio tablet correctly, press the Power button until the pop up message appears on screen, and then select "Power off". Avoid switching off the device by pressing and holding the Power button until the unit shuts down.
- Do not fully discharge the battery (keep at 5% or more). Recharge it to full power frequently to preserve the battery.
- Password Reset: Tech Support must not be able to retrieve your Parental Area password, so please don't forget to note it in a safe place. In case of a lost password, the tablet may have to be factory reset and all personal data will be lost.
- Please connect your Kurio tablet to Wi-Fi frequently to receive and enjoy the latest upgrades. Updates are pushed to your tablet wirelessly.

If you encounter any issues with your device, please do not return it to the store. Please contact our FADs or Tech Support team for help at techsupport@kurioworld.com or contact www.kurioworld.com/support/. You can also contact the tech support team through the Kurio Support App in the Parental Area.

- **Avatar:** Press the avatar to access the child's menu.
- **Categories:** Use the categories to find your apps.
- **Favorites:** Drag and drop your favorite apps into the Favorites tab.
- **Store:** Access the Kurio Store directly.

- **Change My Avatar:** Press here to select a new avatar or to take a picture.
- **Change My Theme:** Apply a new theme to your interface.
- **Change My Wallpaper:** Select a picture from the gallery to change your wallpaper.
- **Help:** Press here if you need help.
- **Kurio Store:** Access the Kurio Store to download new applications.
- **Log Out:** Press here to exit your profile.