



C16500CA_KDUS_AW_UM_01_160722
C16501CA_KDUS_AW_UM_01_160722
C16502CA_KDUS_AW_UM_01_160722

Units: mm

Actual Scale

History:

V00:
V01: For production

Printing colors :



AW

210 mm

Tech Support & Warranty Information

If you have any questions about setting up or using your KURIO Watch, please visit us at www.kuriowatch.com to learn more. All of our products are backed by a 1 Year Limited Warranty. In the unlikely event that you experience a problem, please visit www.kuriowatch.com/support/ to contact our KURIO Support Team.

Please note, this device is warranted only to the original purchaser for a period of twelve months from the original date of purchase, under normal use and service, against defective workmanship and materials. If the product is damaged due to accident, misuse or unreasonable use or maintenance (such as a broken screen, fall, water damage, etc.), these damages are not covered by the warranty.

Warning

Avoid using the KURIO Watch while charging; this may alter the battery charging process and the battery life of the device. The device should not be exposed to dripping or splashing liquid and never place objects filled with liquid on the device - such as a glass of water. Do not expose the device to flames. Never use KURIO while operating a motor vehicle or bicycle. If you feel discomfort or any pain using KURIO, please stop immediately. If a small part is coming out of the KURIO, don't try to remove it. Keep it away from small children. Never force a connector into a port of KURIO. Make sure that the micro USB connector matches the USB port. To clean up the screen, simply use a soft damp cloth. Do not use alcohol, solvent, aerosol spray, liquid or abrasive cleaners to clean your KURIO. The product and micro USB cable should be periodically examined to check that they are in good condition. In case of defect, the micro USB cable should not be repaired, but replaced.

Restricted Use of Electronic Devices

The use of electronic/electrical devices may interfere with safe operation of some aircraft and can be restricted with some airline companies. Please check with your airline company before traveling.



This device complies with Industry Canada licence-exempt RSS (standard). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be as close as possible to that necessary for successful communication.

Précisions: La présente notice d'utilisation d'industrie Canada, le présent émetteur radio et fonctionnaire avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvés pour l'émission par industrie Canada. On ne doit de réduire les risques de brouillage



C16500CA_KDUS_AW_UM_01_160722
C16501CA_KDUS_AW_UM_01_160722
C16502CA_KDUS_AW_UM_01_160722
Made in China. Printed in China.

Exposure to Radio Frequency Energy

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Copyrights

KURIO® is a registered trademark of Kidz Delight, Ltd. © 2016 Kidz Delight, Ltd. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KD Interactive is under license. Other trademarks and trade names are those of their respective owners. MicroSDHC Logo is a trademark of SD-3C, LLC. © Hasbro 2016. All rights reserved.

Kurio WATCH

The Ultimate Smartwatch Built for kids



USER MANUAL



Apps & Games

- Snake
- Tic Tac Toe
- Pirates Battle
- Ninja Roll
- Air Music
- Sport Challenge
- Activity Tracker
- Voice Translator
- Photo Editor
- Drawing
- Messaging
- Emergency app
- Time features
- Calculator
- Calendar
- Contact list
- Reminder
- Take photos & videos
- Music player
- Phone function

Included

- KURIO Watch with rechargeable Lithium battery*
- Micro USB cable
- User Manual
- * Battery is not replaceable

Safety precautions

- Please do not use the KURIO Watch if you have or had symptoms/signs of skin irritation.
- Do not attempt to disassemble, repair or modify the product or replace the batteries.
- This will invalidate the warranty. There is danger of explosion if the battery is replaced incorrectly.
- Use only the micro USB cable supplied with KURIO Watch for charging the battery and transferring data. Do not damage or deform the power supply micro USB cable and connector. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing it from the device, be sure to remove by holding the plug attachment and not by pulling the cord.
- In case of data transfer from the KURIO Watch to the PC or MAC, to avoid data corruption or loss of data, the misuse, malfunction or modification.
- If for any reason, the screen (display) is cracked or broken, immediately stop using the product.
- Do not drop the product or subject it to severe impact.
- Do not use and do not expose the device in extreme temperatures (hot or cold), dusty conditions or damp conditions. Do not expose to direct sunlight. Do not expose the device to water, liquids, rain, dust or moisture. If your KURIO Watch is exposed to liquid, power off the device immediately and clean/dry it.
- Avoid using the device near strong magnetic fields. If your KURIO Watch has been exposed to magnetic fields, please restart the device, following the instructions in this manual if necessary.
- Please keep the box and this manual for further reference. This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

WARNING: All packing materials such as internal bags, plastic celars, plastic films and cartons inserts should be discarded before handing the device over to a child, for your child's safety.

Getting Started!

We recommend fully charging your device before use. A full charge takes about 3 hours. To charge your KURIO Watch, connect the USB port with the Micro USB cable. The battery level indicator on the battery status bar at the bottom of the screen will show the battery level. More frequent usage drains the battery more quickly. Additionally, some activities require more battery consumption, such as games, videos, Bluetooth communication, etc.

First Time Use

When you launch your KURIO Watch for the first time, you will follow a quick setup guide and enter your Child's information. **Parental Supervision is ALWAYS recommended for first time use.** During setup, parents can enter their Child's personal information (blood type, medical conditions, emergency contacts and more). In case of emergency, this information will be easily accessible! You can edit the personal information at any time under Settings.

Change the theme



Change the Watch face



To choose your preferred theme, press and hold anywhere on the screen for 2 seconds to enter the Customization Mode. Swipe Left or Right to select different watch faces. Then press the screen when you've found a theme you'd like to choose.

You can choose between digital and analog watch faces. To choose one, press and hold anywhere on the screen for 2 seconds to enter the Customization Mode. Swipe Left/Right to select different watch faces. Press the screen when you've found a watch face you'd like to select.

Navigation

Swipe Left and Right to navigate the main menu. Press an icon to select it. Swipe down to display the Option Bar. In the Option Bar, you can activate or deactivate the app, use Bluetooth, see your emergency information, and adjust the volume. Swipe up or press anywhere on the main screen to remove the Option Bar from displaying. The Option Bar is accessible from all screens.

WARNING: On many apps & games, swipe right from left edge to go back to previous screen.

Settings

Swipe Right to the last screen of the main interface to access the Setting.

FOLDER	ITEMS	DESCRIPTION
System	Language	Change the language of the device
	Vibration	Activate/Deactivate the vibrations
	Bluetooth	Manage the Bluetooth features
	Screen	Describe where to save the photos and videos taken. Internal Memory or Micro SD card (if inserted)
	Factory reset	Reset your KURIO Watch device to factory settings. Note: You will lose all your data.
Display	About	See the firmware version, credits and legal
	Time & Date	Set the date and time of your KURIO Watch
	Brightness	Set the brightness of your KURIO Watch
	Theme	Change the theme
	Watch face	Change the watch face
Sounds	Notification indicator	Activate/Deactivate the notifications of the activity tracker (accelerometer)
	Screen timeout	Set the screen timeout
	Volume	Adjust the volume of your KURIO Watch
	Mute	Activate/Deactivate the volume
	Buzzes	Activate/Deactivate the buzzes when pressing a button on the screen
I.C.E.	Emergency info	Set the Emergency information (blood type, medical conditions, emergency contacts and more). In case of emergency, this information will be easily accessible! You can edit the personal information at any time under Settings.
	Emergency info	Set the Emergency information (blood type, medical conditions, emergency contacts and more). In case of emergency, this information will be easily accessible! You can edit the personal information at any time under Settings.
	Emergency info	Set the Emergency information (blood type, medical conditions, emergency contacts and more). In case of emergency, this information will be easily accessible! You can edit the personal information at any time under Settings.

Data Transfer

Share Photos, Videos, Music and More

It's possible to connect the KURIO Watch to a computer (MAC / PC) and share photos (jpg, gif, png, mp3, video, wav, mp4, doc, ppt, music, mp3, mp4, wav, themes, watch faces and emojis (for messaging)). Use the Micro USB that was included to connect your KURIO Watch.

Please follow the following steps:

1. Connect the KURIO Watch to the Micro USB port on the left side of the watch.
2. Insert the Micro USB plug into the KURIO Watch.
3. Insert the USB plug into the USB port of your computer.
4. A removable drive - KURIO Watch - will appear on your computer.
5. There are 4 folders available in your KURIO Watch drive: Music, Photos, Videos, Themes, Watch Faces and Emojis. Make sure to move the files to and from the appropriate folders as they will appear properly on your watch.


When you are uploading photos, videos, music, etc., do not disconnect your KURIO Watch. Once finished, remove the watch by following the steps to safely remove hardware from your computer. You can then physically unplug the watch from the computer.

Minimum PC requirements: From any version after Windows XP.

Minimum MAC requirements: From any version after MAC OS 10.10.

Play 2-Player Games & Send Messages to Another KURIO Watch

Pirates Battle and Tic Tac Toe allow you to play against your friend, while you and your friend both use your own watch. The Messaging app also allows you to share messages with another KURIO Watch. Bluetooth connection is required. You must pair two watches in order to connect them for game play and message sharing.

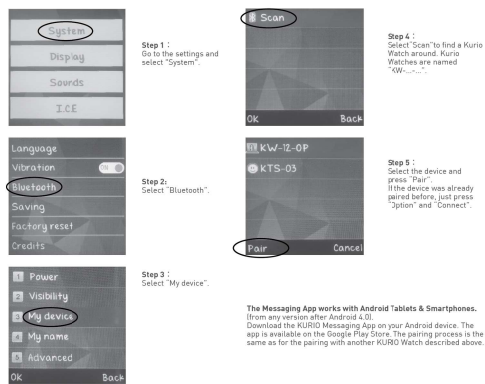

The Messaging App works with Android Tablets & Smartphones. From any version after Android 4.0. Download the KURIO Messaging App on your Android device. The app is available on the Google Play Store. The pairing process is the same as for the pairing with another KURIO Watch described above.