

Title :

Information Document

NO. : SCE-0202

Date : 22. JAN. 2002


2. USER MANUAL

2.1 Name : Remote Keyless Entry system


- This system is *RKE system.
- RKE system is intended for auto door lock or unlock in vehicle.
- This RKE system is to be installed on motor vehicles as *OE item.
 - * OE : Original Equipment.
 - * RKE : Remote Keyless Entry.

2.2 System construction

2.2.1 System in vehicle

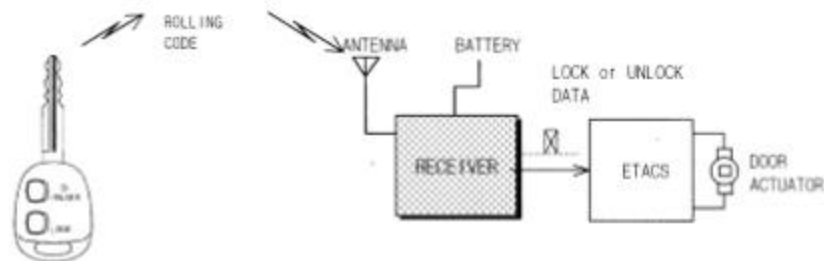

2.2.1 System for test

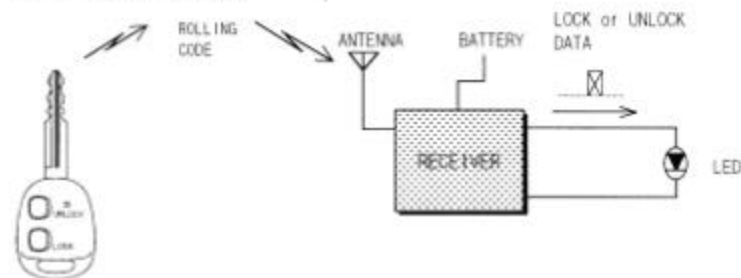

* Through use of the LED, operating state is displayed by LED.
LED 'ON' means that DATA is sent to the ETACS.

Title : Information Document	NO. : SCE-0202 Date : 22. JAN. 2002
2.3 Operating summary ① Transmitter's Lock or Unlock button is pushed. ② Transmitter sends the code by radio frequency. ③ Receiver gets the code and decodes it. ④ Receiver judges the code whether it is right code or not. ⑤ When Receiver proves it to be the right code, Receiver sends data to ETACS. ⑥ ETACS receive it, and drive the actuator. * ETACS : Electronic Time & Alarm Control System. 2.3.1 Lock or Unlock If transmitter's Lock or Unlock button is pushed, Transmitter sends the Lock or Unlock data. 2.4 Caution ① Danger of explosion if battery is incorrectly replaced. ② Replace only with the same or equivalent type recommended by the manufacturer. ③ Dispose of used batteries according to the manufacturer's instructions.	