



*FieldPro*

*Remote Bird Launcher  
Owner's Manual*

**Thank you for purchasing  
FieldPro equipment !**

Your new equipment uses  
state of the art electronics so  
that we can offer you a quality  
product at an affordable price.



## **TABLE OF CONTENTS**

### **TRANSMITTER ( ProTX)**

|                      |   |
|----------------------|---|
| Getting started..... | 1 |
| Controls.....        | 1 |

 
### **RECEIVER ( ProRX)**

|                                       |   |
|---------------------------------------|---|
| Getting started.....                  | 2 |
| Setting the ProRX color code switch.. | 3 |
| Mounting to the E-Z bird launcher...  | 4 |
| Adjusting the launcher.....           | 5 |
| Ready to go.....                      | 5 |

### **STORAGE AND RATINGS..... 6**

### **WARRANTY AND SERVICE..... 7**

**FieldPro, ProTX, and ProRX are Trademarks of FieldPro, LLC  
First Printing April 1999**

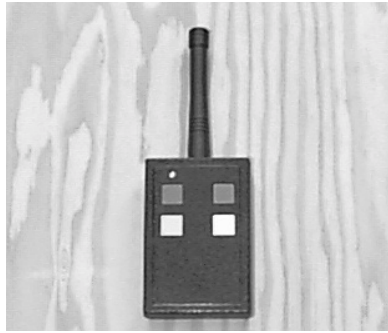

## GETTING STARTED WITH THE ProTX

**1. Replacing the battery (included):** The ProTX is designed to operate from one 9-volt alkaline battery. Open the battery compartment on the back of the ProTX by sliding the door away from the ProTX antenna. Install the battery and re-install the battery door.

## CONTROLS

**1. Testing the control buttons:** The ProTX was designed to operate up to four ProRX's. Each button on the top of the ProTX will operate one ProRX. Press each button and make sure the red LED turns on when you press each button and turns off when you release the button.

**2. Operation:** The unit will operate up to 100 yards consistently. It will operate the best under line of sight conditions. The unit will not operate over hills but down in a valley is fine. Pressing the button for under one second will operate the ProRX if the above conditions are followed. The unit is not water proof but it is water resistant. Humidity and dampness will not affect the unit adversely.

**Note:** Hold the ProTX away from your body for optimal range.

**3. Color coding:** All the ProTX buttons are color coded to match the ProRX so that you can tell which button on the ProTX will operate which ProRX. Refer to the section titled "Setting the ProRX color code switch" to learn more about that subject.




## GETTING STARTED WITH THE ProRX -1

**1. Replacing the batteries (included):** The ProRX is designed to operate from four AA alkaline batteries. Make sure the power switch on the right side of the unit is set to OFF. Open the battery compartment on the front of the ProRX by sliding the door to the right. Install the batteries and re-install the battery door. Turn the unit ON to position the arm of the ProRX correctly then turn the unit back OFF.

## SETTING THE ProRX COLOR CODE SWITCH

**1. Opening the unit:** Lay the unit on a flat surface with the battery door facing up. Remove the screws from each corner of the unit. Remove the top and place it to the right of the unit.

**2. Setting the color code switch:** The color code switch is located at the top-center, below the antenna. The picture below shows the default color code switch setting, which is RED. To set the unit to another color, simply flip the RED switch down to match the others, then flip the desired color code switch up.

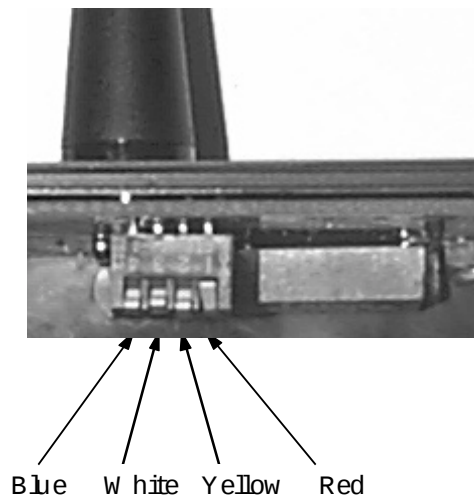

**3. Closing the unit:** Place the top back on the unit and install the four screws. Do not overtighten!

**4. Color coding the receiver:** Once the color code switch has been set, you might want to mark the outside of the unit with that color. Use the appropriate small color sticker provided to do that. Use the large color sticker to wrap around the antenna if you would like to see it from a distance.

## MOUNTING TO THE E-Z BIRD LAUNCHER

**1. Removing the hardware:** Unscrew the two bolts from the back of the unit. Keep them together with the lock washers for later.

**2. Getting ready for mounting:** Set the E-Z bird launcher, as shown below. Tie the launcher arms together so that it will not launch accidentally while installing the ProRX.




**3. Finding the right placement:** Place the ProRX against the E-Z bird launcher so the metal arm of the unit just touches or is a little bit above the arm of the E-Z bird launcher as shown below.



**4. Installing the hardware:** Take the bolts and lock washers from step 1 and screw them into the ProRX from the inside of the E-Z bird launcher.

## ADJUSTING THE LAUNCHER

**1. Adjusting for a fast launch:** It is important on the medium and large E-Z bird launchers that you set them so that they are "hair trigger". The picture below demonstrates this. You might also want to bent the arm of the E-Z bird launcher up to touch the arm of the ProRX for a very quick release.

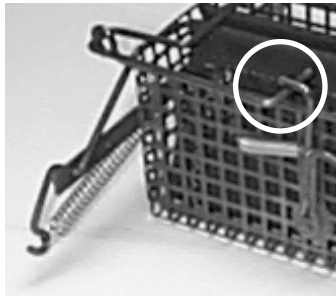

## READY TO GO

**1. Operation:** Go ahead and turn the power switch on the right side of the unit to the ON position. Press the corresponding color coded button on the ProRX to test the ProRX. Turn the unit to the OFF position when you are done testing and when not in use. The unit is not waterproof but it is water resistant. Humidity and dampness will not affect the unit adversely.

**Note:** Severe weather conditions like rain and high winds can limit the operating range.

## STORAGE AND RATINGS

### **Storage Temperature:**

-45 degrees C to +85 degrees C

### **Operating Temperature:**

-20 degrees C to +70 degrees C

### **Operating Range:**

100 yards

### **ProTX Specifications:**

Size - 2.375"(L) x 1"(W) x 3.75"(H)

Weight - 2.9 ounces (without battery)

Battery Requirements - (1) 9 volt alkaline

### **ProRX Specifications:**

Size - 6.25"(L) x 1.75"(W) x 3.625"(H)

Weight - 10.9 ounces (without batteries)

Battery Requirements - (4) AA alkaline

## WARRANTY AND SERVICE

**Factory Warranty**

Both the ProTX and the ProRX are covered by a one year warranty on parts and labor from date of purchase. The warranty does not cover misuse, abuse, or any unauthorized alterations or modifications.

**Service**

If you have a problem with your equipment and need to get it repaired or have questions regarding your equipment, please call **330-658-7705** or email us at **[email@FieldProLLC.com](mailto:email@FieldProLLC.com)**

# WARRANTY REGISTRATION

(Please fill out and return for our records)

Name \_\_\_\_\_  
 Address \_\_\_\_\_ Apt. No. \_\_\_\_\_  
 City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
 Telephone No. \_\_\_\_\_  
 Email Address \_\_\_\_\_

Date of Purchase \_\_\_\_\_  
 Location Purchased \_\_\_\_\_

Model No. ☐ ProTX -1 Serial No. \_\_\_\_\_  
☐ ProRX -1 Serial No. \_\_\_\_\_  
☐ ProRX -1 Serial No. \_\_\_\_\_  
☐ ProRX -1 Serial No. \_\_\_\_\_

\*The Serial No. is located on the front of the ProRX and on the back of the ProTX.

Comments and Suggestions:

---

---

---

---

---

---

---

---

---

---



SEND TO :

**FieldPro**

14120 Galehouse Rd.  
 Doylestown, OH 44230



**Contact Information:**

**Phone: 330-658-7705**

**E-mail: [email@FieldProLLC.com](mailto:email@FieldProLLC.com)**

**Website: [www.fieldprollc.com](http://www.fieldprollc.com)**