

MAINTENANCE MANUAL
RT-1601 RECEIVER-TRANSMITTER

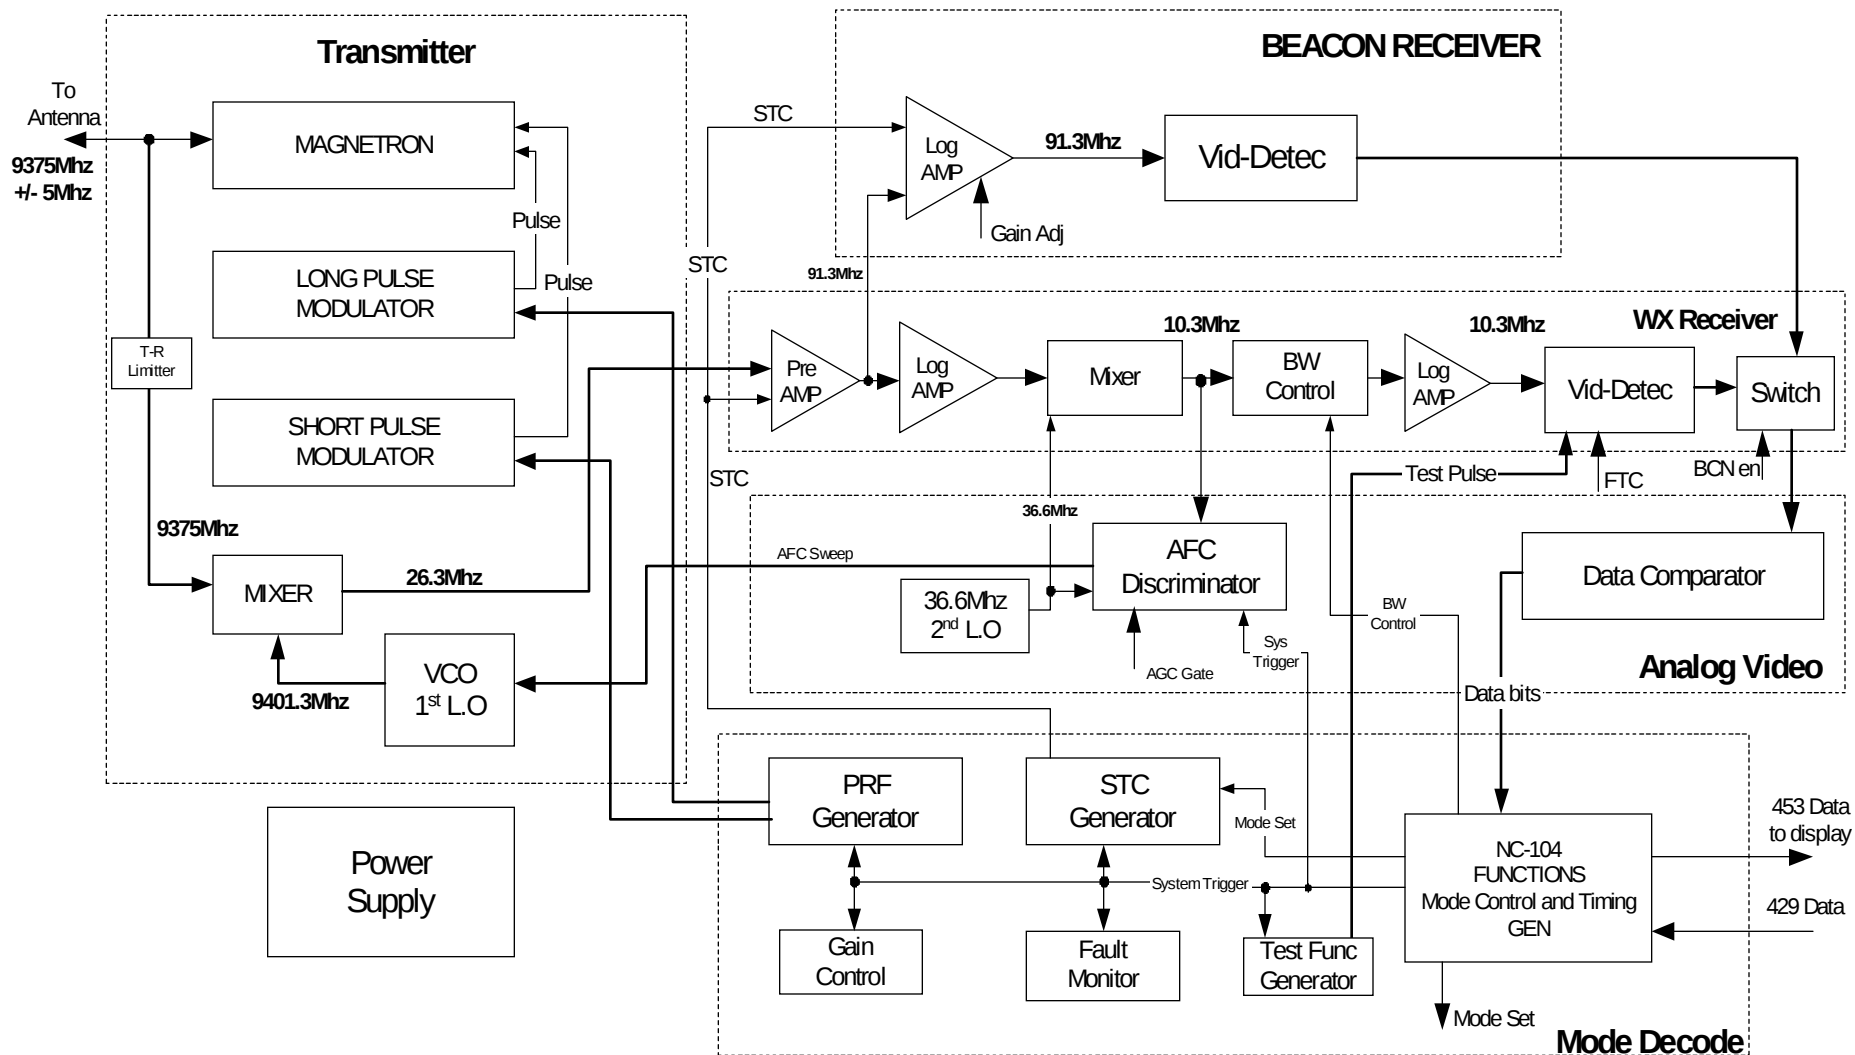


Figure 1 RT-1601 BLOCK DIAGRAM