




ASSEMBLY INSTRUCTIONS


WARNING!

- USE CAUTION, MAKE SURE PEOPLE AROUND YOU KNOW YOU ARE LAUNCHING OR FLYING AIRPLANE.
- MUST FLY IN OPEN AREA.
- DO NOT FLY NEAR ANY AIRPORT.
- DO NOT FLY NEAR AIRPLANE ROUTE.
- DO NOT FLY NEAR HIGH VOLTAGE WIRE.
- DO NOT FLY IN TEMPERATURE BELOW 5°C.
- DO NOT FLY ABOVE OR INTO PEOPLE, VEHICLES, OR BUILDINGS.
- DO NOT FLY IN STRONG WIND, BAD WEATHER OR HAZARDOUS SITUATION.
- DO NOT TOUCH PROPELLER WHEN SPINNING.
- KEEP AIRPLANE AWAY FROM FACE WHEN LAUNCHING OR FLYING.
- USER BELOW AGE 16 MUST BE ACCOMPANIED BY ADULTS WHEN FLYING.

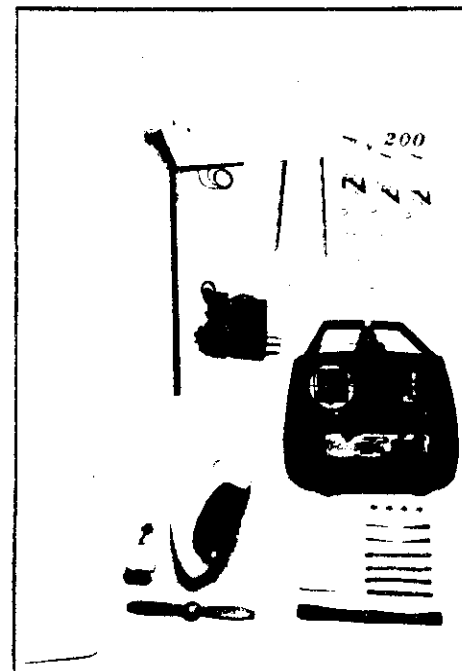


PRODUCT COLOUR AND DECAL MAY VARY

1. ASSEMBLE MAIN WING

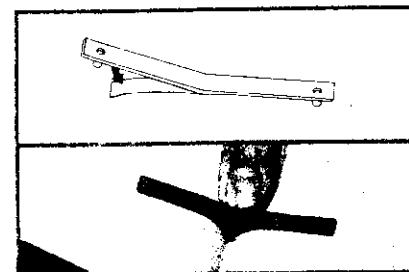

LEFT AND RIGHT (X2)

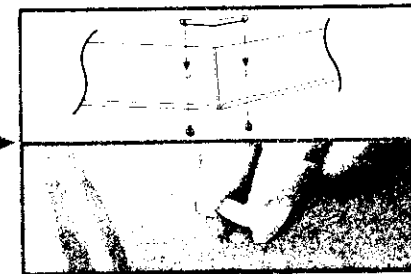

LEFT AND RIGHT (X4)




CHECK WING ANGLE




2. ATTACH PROPELLER




3. AFFIX MAIN WING

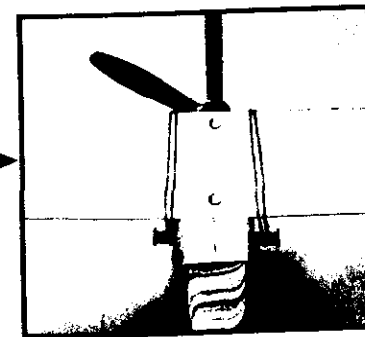




4. CHARGE BATTERY PACK

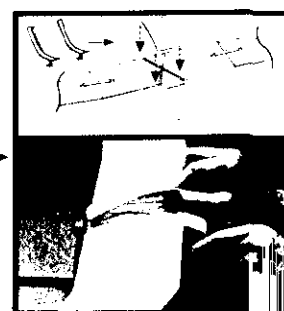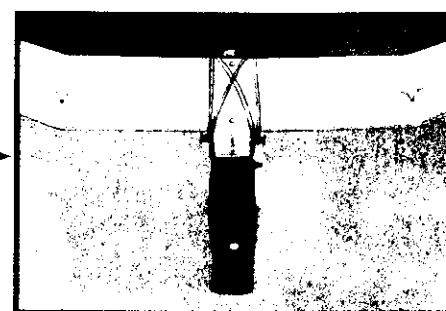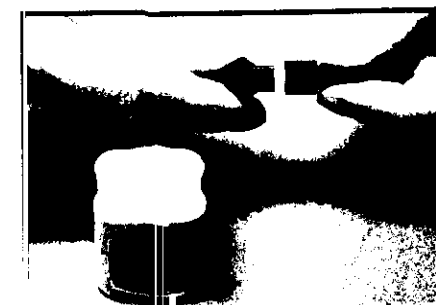

5. PREPARE R/C CONTROLLER

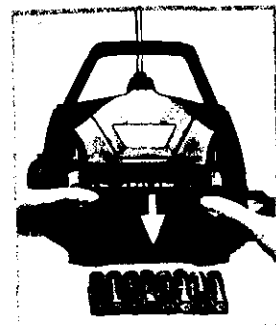



AA SIZE BATTERY X8PCS

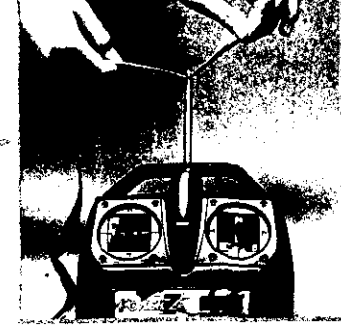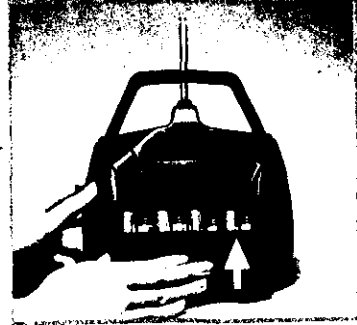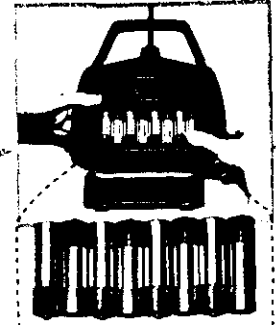


6. INSTALL BATTERY PACK




! MAX 2HRS !

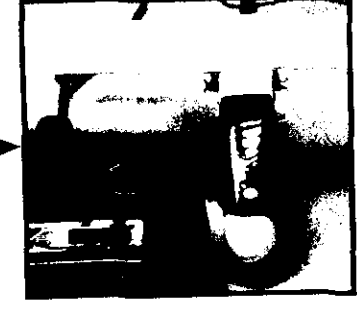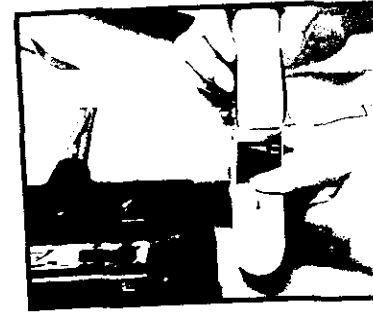


7. ADJUST RUDDER

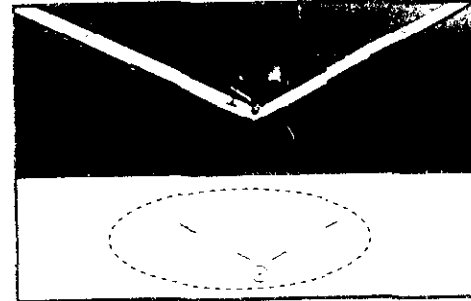


CHECK RUDDER ALIGNMENT

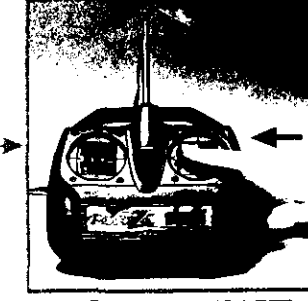


TURN DIRECTION TO LEFT...

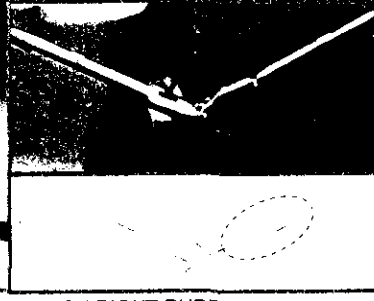

CHECK RIGHT RUDDER LIFTS APPROX. 1/4 INCH (4~5MM)

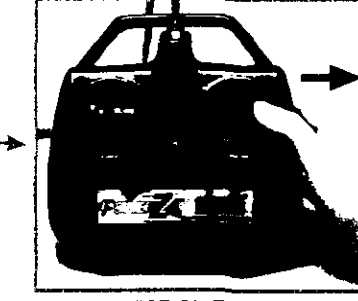

TURN DIRECTION TO RIGHT...

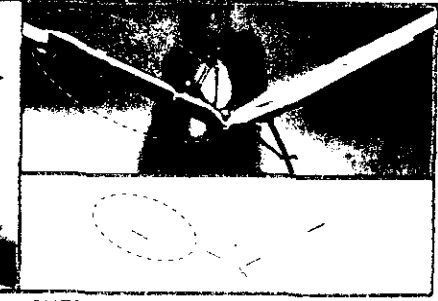


CHECK LEFT RUDDER LIFTS APPROX. 1/4 INCH (4~5MM)

8. CHECK MOTOR POWER



PRESS START/SAFETY BUTTON

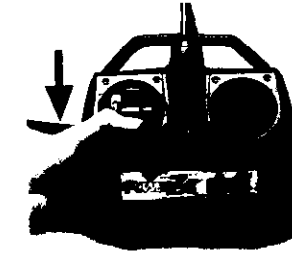


POWER ON



KEEP FINGERS AWAY FROM PROPELLER.

9. READY TO FLY

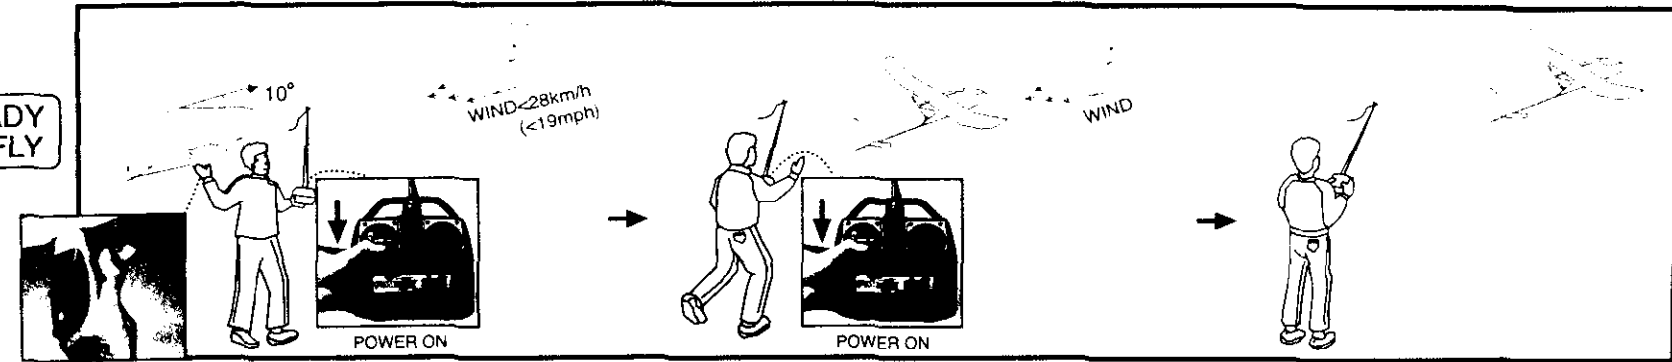

POWER ON


POWER ON




POWERZ-200 ELECTRIC R/C AIRPLANE

FLYING INSTRUCTIONS

1. TAKE-OFF

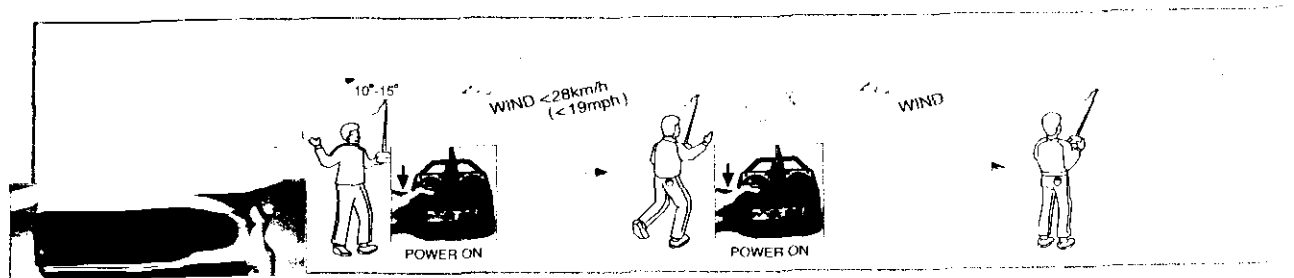

2. FLY STRAIGHT

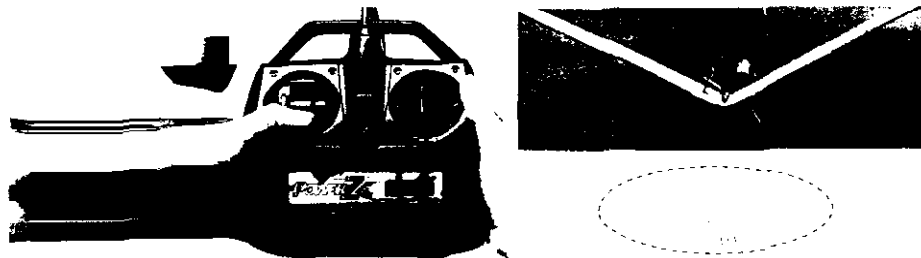

3. TURN LEFT



TURN DIRECTION TO LEFT...

WARNING!



- USE CAUTION, MAKE SURE PEOPLE AROUND YOU KNOW YOU ARE LAUNCHING OR FLYING AIRPLANE.
- MUST FLY IN OPEN AREA.
- DO NOT FLY NEAR ANY AIRPORT.
- DO NOT FLY NEAR AIRPLANE ROUTE.
- DO NOT FLY NEAR HIGH VOLTAGE WIRE.
- DO NOT FLY IN TEMPERATURE BELOW 5°C.
- DO NOT FLY ABOVE OR INTO PEOPLE, VEHICLES, OR BUILDINGS.
- DO NOT FLY IN STRONG WIND, BAD WEATHER OR HAZARDOUS SITUATION.
- DO NOT TOUCH PROPELLER WHEN SPINNING.
- KEEP AIRPLANE AWAY FROM FACE WHEN LAUNCHING OR FLYING.
- USER BELOW AGE 16 MUST BE ACCOMPANIED BY ADULTS WHEN FLYING.

4. TURN RIGHT



TURN DIRECTION TO RIGHT...

6. WHEN OUT OF CONTROL, RELEASE BOTH POWER STICK & DIRECTION STICK

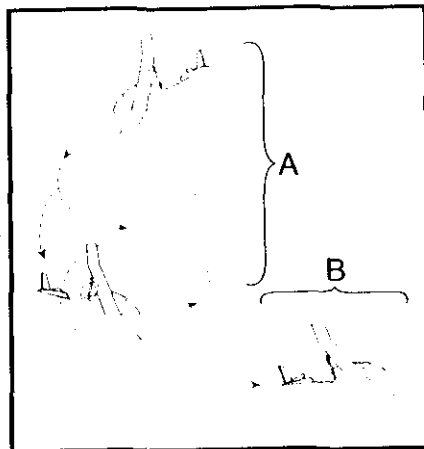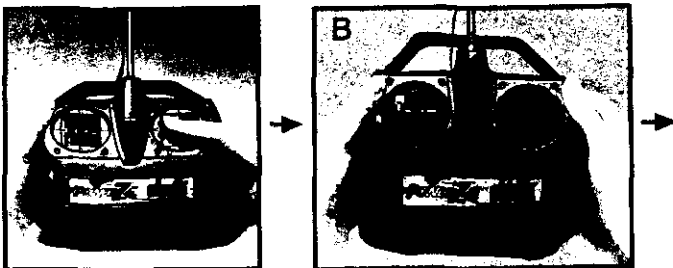

7A. LANDING


5. BEST FLYING AREA



120°



7B. LANDING

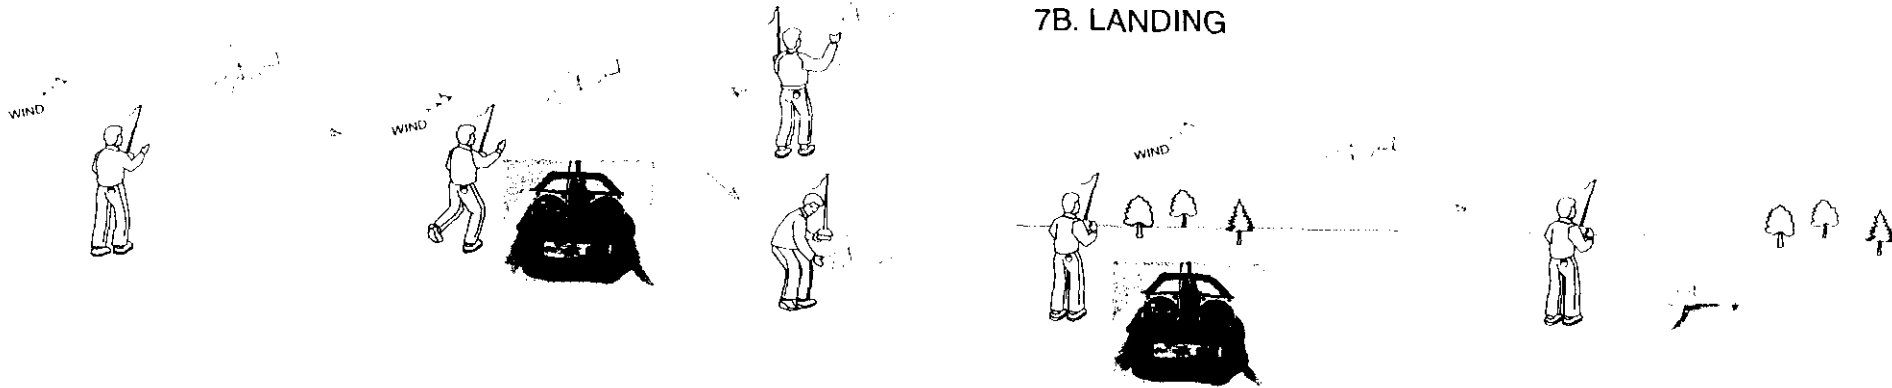

1. IMPORTANT SAFEGUARDS AND SAFETY INSTRUCTIONS

- You must read all instructions carefully. When using the airplane, care and precautions should be followed to avoid personal injury and damage to the airplane.
- To protect against risk of electrical shock or injury, do not put Powerz battery charger in water.
- Only use the Powerz battery charger to charge the Powerz rechargeable batteries. Use of or Powerz battery charger with regular batteries or any other batteries may cause damage or personal injury.
- Powerz battery charger used with the airplane is to be regularly examined for damage to cord, plug enclosure and other parts, and that, in the event of such damage, airplane or Powerz rechargeable batteries must not be used with the Powerz battery charger until such damage has been repaired.
- Non-rechargeable batteries are not to be charged.
- Powerz rechargeable batteries are to be removed from the airplane before being recharged.
- Powerz rechargeable batteries are only to be charged under adult supervision, different types of batteries or new and used batteries are not to be mixed.
- Only 1.5volt "AA" size alkaline batteries are recommended to be used in the R/C controller, batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the airplane or R/C controller.
- The supply terminals are not to be short-circuited.
- Please keep this instruction and the packaging since they contains important information.
- User's changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. HOW TO CHARGE THE POWERZ RECHARGEABLE BATTERIES

- 1) Must use Powerz battery charger.
- 2) Charge only in a dry indoor location.
- 3) Charge for 2 hours only.
- 4) Do not overcharge or undercharge.

