

After use, pull out the waterproof lock and drain the water away as indicated.

After drainage, install the waterproof lock in the hole of the tip as indicated to prevent water going inside the hull. Notice: too much water inside the hull will prevent the normal operation of your boat.

Wipe the hull and battery compartment dry.

IMPORTANT NOTES:
Turn off the switch of the boat before trying to clean things attached to the propeller.

After sailing, switch off the receiver on the boat and then switch off the transmitter.

IMPORTANT NOTES:
1. BEFORE USING THIS PRODUCT, YOU MUST INSERT THE CORRECT BATTERIES IN THE CORRECT POLARITY AND THEN CLOSE THE BATTERY COMPARTMENT COVER.
2. AFTER USING THIS PRODUCT, PLEASE Wipe THE BATTERY COMPARTMENT COVER DRY BEFORE OPEN IT TO AVOID WATER COMES INTO THE BATTERY COMPARTMENT.
3. WHEN YOU ARE NOT USING THIS PRODUCT, PLEASE REMOVE ALL BATTERIES FROM THE BATTERY COMPARTMENT AND USE A CLEAN DRY CLOTH TO Wipe THE BATTERY COMPARTMENT AND CONDUCTOR DRY.
4. THE TOY IS TO BE OPERATED IN WATER WHEN FULLY ASSEMBLED IN ACCORDANCE WITH THE INSTRUCTION.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE

4

R/C SPEED BOAT INSTRUCTION MANUAL

ITEM NO.9310

In order to get the best performance of your speed boat, please read carefully this instruction before use.

PREPARATION BEFORE USE:
A) Make sure you have the following necessities(Fig 1):
1) 6 pcs of 'AA' size Alkaline Batteries,
2) Cross-head screwdriver – 1 pc

6X"AA"/LR6/1.5V

1

B) Follow step by step from figure 2 to figure 7.

IMPORTANT NOTE: Do not mix new and used batteries in your battery compartment.

Make sure the waterproof lock is securely placed in the tip before getting your boat in the water.

1

CAUTIONS FOR SAFETY
Never use your finger to touch the propeller to avoid hurting your fingers (fig 6) correct way to hold the boat (fig 7)

CAUTIONS FOR SAFETY
Do not sail the boat beyond 120 feet from yourself.
Do not operate this boat in sea water for best performance.

Do not drop your boat onto the ground while you driving water.

Do not operate your boat in prohibited area.

Do not sail your boat in dirty water.

Do not operate your boat in sea water for best performance.

Do not operate your boat in prohibited area.

Do not sail your boat in dirty water.

Do not operate your boat in sea water for best performance.

2

BE READY FOR SAILING

1. Pairing for the first time: Turn on the boat first, then turn on the transmitter. Push the joystick to automatically match the frequency.
2. Control Distance: 40 meters.
3. Low Power Mode: When the battery level is low, the boat will be switched to 'low power mode' automatically. The boat can be controlled for 0.5 second and pause for 1 second. The boat will not go smoothly. This is an indication to change the battery as soon as possible to prevent a complete loss in control.

Switch on the transmitter.
Check propeller direction matches with the transmitter's input.

CONTROL INSTRUCTION FOR A VOYAGE

NOTE:
CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

3