



Art Release for Production (Mechanical)

Sky Instructions Domestic

File Name: SV_StreamingDrone_IS.ai

Revision:

Licenser Approval Date:

Production Release Date:06/11/15

Production Artist: JJ Hwang

Colors: Pantone 294

Trim Size:

Notes:

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

526

527

528

529

530

531

532

533

534

535

536

537

538

539

540

541

542

543

544

545

546

547

548

549

550

551

552

553

554

555

556

557

558

559

560

561

562

563

564

565

566

567

568

569

570

571

572

573

574

575

576

577

578

579

580

581

582

583

584

585

586

587

588

589

590

591

592

593

594

595

596

597

598

599

600

601

602

603

604

605

606

607

608

609

610

611

612

613

614

615

616

617

618

619

620

621

622

623

624

625

626

627

628

629

630

631

632

633

634

635

636

637

638

639

640

641

642

643

644

645

646

647

648

649

650

651

652

653

654

655

656

657

658

659

660

661

662

663

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680

681

682

683

684

685

686

687

688

689

690

691

692

693

694

695

696

697

698

699

700

701

702

703

704

705

706

707

708

709

710

711

712

713

714

715

716

717

718

719

720

721

722

723

724

725

726

727

728

729

730

731

732

733

734

735

736

737

738

739

740

741

742

743

744

745

746

747

748

749

750

751

752

753

754

755

756

757

758

759

760

761

762

763

764

765

766

767

768

769

770

771

772

773

774

775

776

777

778

779

780

781

782

783

784

785

786

787

788

789

790

791

792

793

794

795

796

797

798

799

800

801

802

803

804

805

806

807

808

809

810

811

812

813

814

815

816

817

818

819

820

821

822

823

824

825

826

827

828

829

830

831

832

833

834

835

836

837

838

839

840

841

842

843

844

845

846

847

848

849

850

851

852

853

854

855

856

857

858

859

860

861

862

863

864

865

866

867

868

869

870

871

872

873

874

875

876

877

878

879

880

881

882

883

884

885

886

887

888

889

890

891

892

893

894

895

896

897

898

899

900

901

902

903

904

905

906

907

908

909

910

911

912

913

914

915

916

917

918

919

920

921

922

923

924

925

926

927

928

929

930

931

932

933

934

935

936

937

938

939

940

941

942

943

944

945

946

947

948

949

950

951

952

953

954

955

956

957

958

959

960

961

962

963

964

965

966

967

968

969

970

971

972

973

974

975

976

977

978

979

980

981

982

983

984

985

986

987

988

989

990

991

992

993

994

995

996

997

998

999

1000

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

ADULT SUPERVISION REQUIRED

Before each use, an adult should check this product and the LiPo battery to ensure no damage or hazards exist. Drone has rotating blades that move at high speed, posing danger of damage and injury. Pilots are responsible for any actions that result in damage or injury from the improper operation of Drone. Adequate flying space is required. Avoid flying near interior fans and/or vents as they may make flying difficult to control. Keep a safe distance away from streets, public thoroughfares and power lines. Never attempt to retrieve Drone from any location higher than your reach (such as rooftops or trees) or from any location that poses a safety hazard. Never fly Drone at night. Keep Drone in sight at all times during operation. Discontinue operation immediately if Drone flies out of your field of view. Do not fly near spectators or animals. Pets can become excited about R/C vehicles therefore keep away from pets at all times. Keep spinning rotors away from fingers, hair, eyes and other body parts. Always launch from a flat surface. Never leave Drone unattended while it is turned on. Read all enclosed information before operating.

THIS PRODUCT CONTAINS A LITHIUM-POLYMER BATTERY 3.7V 650mAh:

LiPo batteries have a severe risk of fire and injury if they are improperly handled or misused. They may explode, overheat or ignite. Read all following precautions and instructions regarding the care and use of LiPo batteries. The enclosed LiPo battery is only to be used with the vehicle and charger included with this product.

- Keep away from flammable materials.
- Do not expose to direct sunlight.
- Do not place in fires or leave in hot places.
- Do not drop or make subject to strong impact.
- Keep dry and away from water.
- Remove exhausted batteries as soon as possible and discard properly.
- Remove all batteries from the compartment if toy is not used for a long period.
- The supply terminals are not to be short circuited.
- Never throw batteries in a fire or attempt to open outer casing.

LiPo Battery Disposal: LiPo batteries must be recycled or disposed of properly. They should not be disposed of with other household waste. Check your local laws and regulations for correct recycling and/or battery disposal.

ALKALINE BATTERY CAUTIONS

 
 
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and old batteries are not to be mixed.
- Batteries are to be inserted using correct polarity.
- Remove exhausted batteries as soon as possible and discard properly.
- Remove all batteries from compartment if toy is not used for a long period.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.

WARNING: Batteries are harmful if swallowed. Please keep away from children.

Battery Disposal: Dispose of batteries according to the local laws and regulations of your region. Some batteries may be recycled, and may be accepted for disposal at your local recycling center. If you are not able to identify the applicable rules in your area, please check the instructions of the battery manufacturer.

CHANGING DAMAGED PROPELLERS

- 1 Unplug LiPo battery on Drone.
- 2 Make note of the blade color and letter (A or B) before removing the blade from Drone. (Markings are located on the underside of blades and Drone).
- 3 Remove the small screw using the mini screwdriver provided.
- 4 Replace the damaged blade with a new blade with matching color and letter. Secure the blade with the retaining screw.

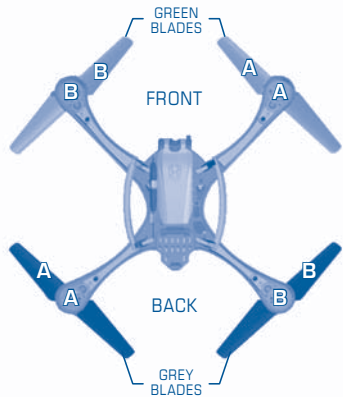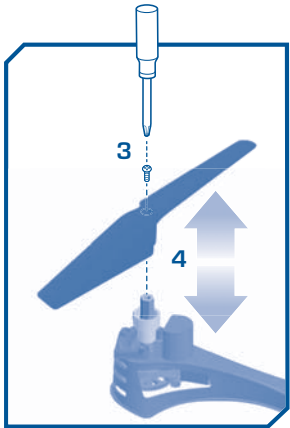

Bottom View of Drone

WARNING: Do not fly with broken or damaged propeller blades as it may cause damage or lead to injury.

MAINTENANCE

Over time, loose hair or carpet fibers may get wound in blades, reducing performance. Unplug Drone and remove fibers from motors. (Remove blades if necessary)

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences ; et
- (2) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

The distance between user and products should be no less than 20cm

La distance entre l'utilisateur et de produits ne devrait pas être inférieure à 20cm

 
ONE TOUCH STUNTS

IMPORTANT
REMOVE THE CAMERA UNIT FROM THE DRONE BEFORE PERFORMING STUNTS. STUNT FUNCTIONS WILL NOT WORK WITH CAMERA UNIT ATTACHED. ALSO REMOVE BLADE GUARDS WHEN FLYING IN ADVANCED SENSITIVITY MODE 3.

BARREL ROLLS

While flying forward (or reverse), press the **STUNT BUTTON**.

NOTE: Once a stunt has been initiated, DO NOT adjust Throttle or press any other controls until the stunt has been completed.

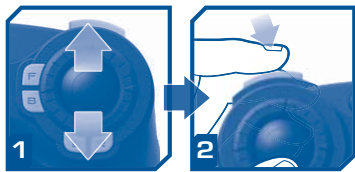

FLIPS

- 1 Bring the Drone to a mid air hover without flying in any direction. Remove finger from the **DIRECTION STICK**.
- 2 While **HOVERING**, press and hold the **STUNT BUTTON**.
- 3 While still holding the **STUNT BUTTON**, tap the **DIRECTION STICK** in the direction you want to the drone to flip.

 


CAUTION!

Drone should be flying at least 9 feet in the air with a minimum clearance of 9 feet in all directions before attempting stunt functions. STUNT FUNCTIONS SHOULD BE PERFORMED OUTSIDE ONLY.

BLADE GUARDS FOR BEGINNERS



Blade guards are great for beginning pilots and can be easily installed if desired. The guards however add undesired weight and reduce flight performance. Blade guards are optional and should NOT be used with Advanced Flight Sensitivity setting 3.

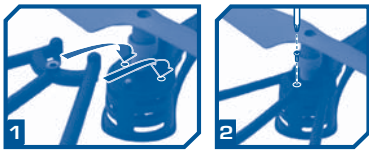

- 1 Insert the posts of the blade guards into the holes of the drone.
- 2 Secure the blade guards with the retaining screws.


CHARGING, INSTALLING & CARING FOR LIPO BATTERY IN THE DRONE

  - 1 Disconnect the LiPo battery connectors hanging out from the back of the drone.
- 2 Plug the red male connector from the LiPo battery into the black female connector end of the USB charging cord.
- 3 Plug the USB end of the charging cord into a USB power source and charge battery until full.
RED LIGHT = CHARGING
GREEN LIGHT = FULLY CHARGED
- 4 Once fully charged, disconnect the charging cord from battery and power source. (Always unplug from power source when not in use).

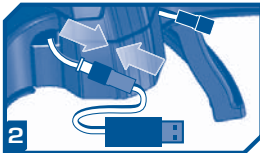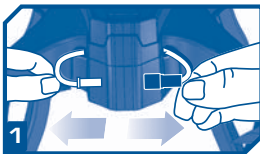

IMPORTANT:

 LiPo battery can be removed from Drone by loosening battery compartment screw, opening door and removing the battery. When replacing the battery, be careful not to pinch battery connector wires when closing the door. Also ensure that wires protrude through open slots on the sides of the battery door as shown. Make sure there is sufficient wire slack for easily connecting and disconnecting plugs, but not so much slack that wires interfere with spinning blades.

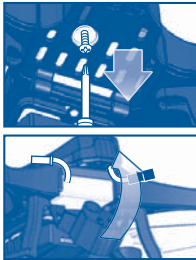

CHARGING PRECAUTIONS:

- After use, allow LiPo battery to cool down to room temperature before charging again.
- Charge LiPo battery in an isolated area, away from excessive heat or moisture.
 - If LiPo battery swells, unplug it immediately and permanently discontinue use.
 - Do not modify, heat, or wet the battery in any way. Only recharge with provided charger.

 
WARNING!

IF AT ANY TIME DURING CHARGING OR USE THE BATTERY BECOMES DAMAGED IN ANY WAY, DISCONTINUE CHARGING OR USE OF THE BATTERY IMMEDIATELY.

Continuing to charge or discharge a battery that has been damaged can result in a fire. Quickly and safely disconnect the Drone from charging and place away from flammable materials. Observe the battery for at least 30 minutes to be certain no additional swelling or rupture occurs. Completely discharge the battery by submerging it in a saltwater solution (1/2 cup salt per gallon of water) for 24 hours. Check your local laws and regulations for correct recycling and/or battery disposal.



WHEN NOT IN USE:

- Always **UNPLUG** the Drone's LiPo battery when not in use or when Drone is being stored or transported.
- Store the LiPo battery and Drone in a dry area at room temperature.
- Avoid temperatures less than 40°F/4°C and greater than 120°F/49°C.
- Do not leave the LiPo battery in a car or exposed to direct sunlight. If exposed to temperatures greater than 120°F/49°C, the LiPo battery can be damaged or may catch fire.

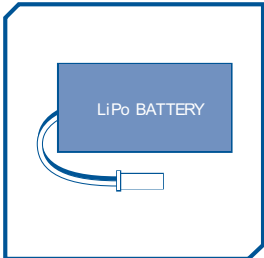

INSTALLING REMOTE BATTERIES

  Loosen screw in the Remote Control battery compartment door with Philips screw driver and insert batteries as shown. Replace door and tighten screw.

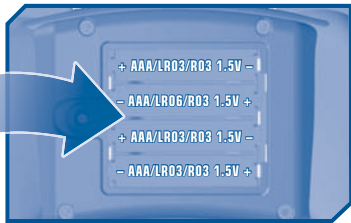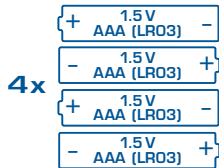

AUTO SHUTDOWN:

- If battery voltage drops to an extremely low level, Drone will automatically shutdown. The Video Drone will need to be recharged to restore flying power.
- If anything prevents Drone's blades from spinning or they become jammed, Drone will automatically shutdown. The LiPo battery will need to be unplugged, then reconnected to restore flying power.

STREAM LIVE VIDEO TO YOUR SMART DEVICE

Sky Viper Streaming Drone is equipped with WiFi connectivity, so you can view streaming video on your smart device.

DOWNLOADING THE APP

iOS

Go to the App Store and search for Sky Viper Video Viewer app. Then, click install.



Android

Go to the Google Play Store and search for Sky Viper Video Viewer app. Then, click download.

 


CONNECTING TO THE STREAMING DRONE WITH YOUR DEVICE

- 1 Go to Wi-Fi setting on your smart device.
- 2 Select SKYVIPER_XXXXXX and connect.
- 3 Open the Sky Viper app on your device.
- 4 The App will bring up your Drone's ID.
- 5 Follow the on-screen icons to interact with your Drone.


ATTACHING YOUR DEVICE TO THE REMOTE

- 1 Install the DEVICE HOLDER to remote.
- 2 Pull the DEVICE HOLDER arm.
- 3 Insert a smart device (Devices larger than 3.1/8" wide can be used, can not be attached to remote).
- 4 Follow app directions for streaming, recording and video playback.

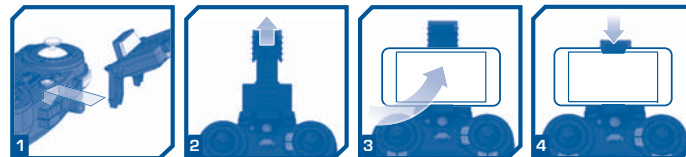

360° PANORAMIC VIEW ROTATION

 - 1 While HOVERING, press and hold the **STUNT BUTTON**.
- 2 Move the **DIRECTION STICK** (Right or left) to start drone rotation.
- 3 Press the **RECORD BUTTON** on your smart device to start recording. Press again to stop recording.

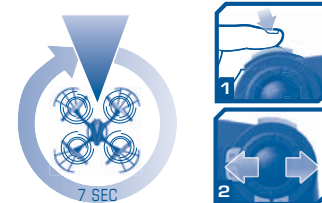

TRIM ADJUSTMENTS

If Drone drifts in any direction while hovering (and you are not pressing the Direction stick), you may need to make trim adjustments. Safely land Drone on a level surface. Press the recommended Trim button once as described below. Launch the Drone back into the air and attempt another still hover. If Drone continues to drift, repeat the process until a still hover is achieved:

- Drone drifts forward
– Press the **B button**
- Drone drifts backward
– Press the **F button**
- Drone drifts to the left
– Press the **R button**
- Drone drifts to the right
– Press the **L button**
- Drone spins counter-clockwise, when viewed from the top
– Press the **↺ button**
- Drone spins clockwise, when viewed from the top
– Press the **↻ button**

NOTE: THE REMOTE WILL BEEP/FLASH 3 TIMES WHEN TRIM ADJUSTMENT IS SET TO THE NEUTRAL POSITION (THE MIDDLE OF THE TRIM RANGE) AND BEEP ONCE WHEN IT HAS REACHED THE END OF ITS RANGE.

FLYING TIPS

- When launching the Drone, face the same direction as the Drone. Green blades should be in front.
- Practice launching, hovering and landing before attempting to learn other moves.
- Flying 2 to 3 feet above the ground will reduce ground turbulence and make flying easier.
- When first attempting to fly in different directions, start by tapping the Direction stick until you have a feel for it. Always move the controls slowly until you become comfortable operating the drone.
- Once you've mastered flying in directions, practice Rotational controls. Spinning and keeping Drone facing the same direction you are facing makes flying easier and more intuitive.
- Stay 2 to 3 feet away from walls and ceilings as Drone will be drawn towards them if you fly too close.
- If propeller blades come in contact with another object or you crash, throttle down immediately to prevent possible or further damage.
- If anything prevents Drone's blades from spinning or they become jammed, **THROTTLE DOWN IMMEDIATELY**. Do not attempt to fly until obstruction has been removed and damage fixed.
- Should something prevent Drone's blades from spinning, Drone may **AUTO SHUTDOWN**. LiPo battery will need to be unplugged then reconnected to restore flying power.
- If the Drone flies too far away, beyond the control range of the remote, the Drone will **AUTO-LAND** to prevent the Drone from flying away out of control.

REMOVING & REATTACHING CAMERA MODULE

The Camera Module is easily removed to improve flight performance. Simply unplug the camera connector and slide the camera module forward to disconnect from drone. To reconnect, simply clip camera module back onto drone and plug in the wire connector.



FLIGHT SENSITIVITY ADJUSTMENT

Drone responsiveness may be adjusted on the Controller to match your flying skills. There are three choices:

1. BEGINNER – 2. INTERMEDIATE – 3. ADVANCED

It is best to start in **BEGINNER MODE 1** until you have mastered flying. Flight sensitivity can be adjusted before or during flight.

IMPORTANT: Advanced Mode 3 is a performance flight setting for OUTDOOR USE ONLY. Blade guards and camera module MUST BE REMOVED for proper flight operation in Mode 3.



 
 
- ☒ 1 - BEGINNER
- ☐ 2 - INTERMEDIATE
- ☐ 3 - ADVANCED

CALIBRATING & LAUNCHING

- 1 Turn **OFF** Remote Control.
- 2 Disconnect the LiPo battery connectors hanging out from the back of the drone.
- 3 Reconnect battery connectors.
- 4 Quickly place Drone on **FLAT LEVEL SURFACE**.
- 5 Turn Remote Control **ON**.
- 6 Slowly push remote control **THROTTLE STICK UP** until Drone lifts into the air.


IMPORTANT: YOU ONLY HAVE A FEW SECONDS AFTER THE LIPO BATTERY IS PLUGGED IN TO PLACE DRONE ON A LEVEL SURFACE FOR PROPER CALIBRATION. IF DRONE DOES NOT RISE TO A STABLE HOVER OR FLIES ERRATICALLY, REPEAT STEPS 1 THROUGH 6.

CAUTION: NEVER APPROACH DRONE WHILE THE PROPELLER BLADES ARE STILL SPINNING. THROTTLE DOWN UNTIL THE BLADES STOP THEN TURN OFF REMOTE BEFORE ATTEMPTING TO HANDLE DRONE.

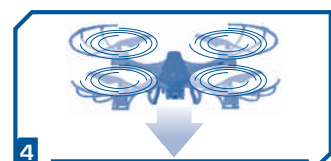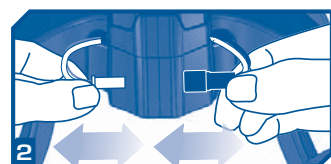

FLIGHT CONTROLS

 Familiarize yourself with Drone's controls before flying!

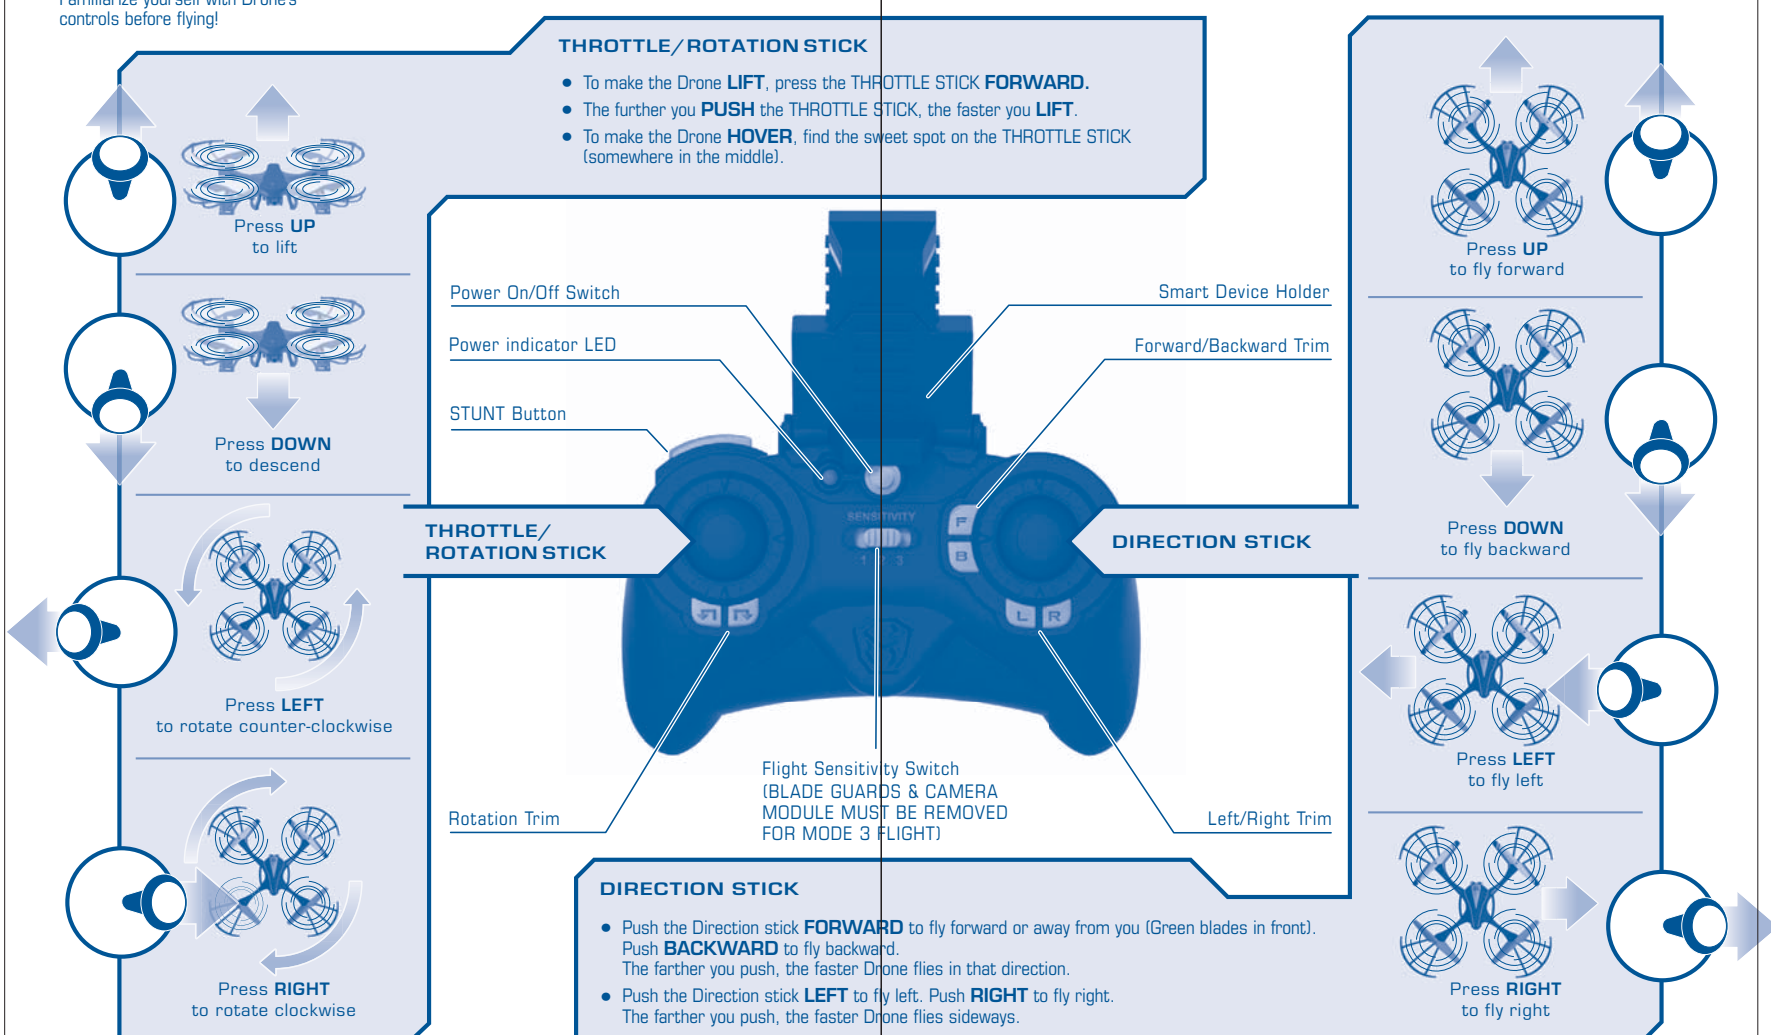

5

6

3B

SIZE: 297 x 210mm (folds to 148.5 x 210mm)
PAGE 5 / PAGE 6