

PomSies™

Pitch Purrfect

3+

POMSIES CONNECT

One Pomsie is fun, but more is a party! Bring up to five Pomsies into the same room and connect them by turning them all OFF, then ON again within 8 seconds. Pomsies will act like they always do, but the first one powered on becomes the leader—Taking center stage when they sing and setting the tone while the others follow and respond. Want to switch it up? Power them all down, then turn on a new leader first.

Only Pitch Perfect brand Pomsies can connect with each other. Classic brand Pomsies do not include this function.

Press the nose to turn on Pomsies, or wake them up if they fall asleep. Press and hold for 3 seconds to turn off.

2 WAYS TO PLAY - SWITCHING MODES

Press and hold the nose, then shake Pomsie at the same time to switch between these 2 super cute play modes!

1 Pomsie Mode (default mode - eyes flash purple)
Pet them, feed them, Looooove them. You never know how Pomsies will react!

2 Pitch Purrfect Mode (eyes flash cyan)
Your Pomsie loves to sing just for you! Connect multiple Pomsies together and they'll sing together in pitch-perfect harmony! (See Pitch Purrfect Mode)

HOLD MY NOSE & SHAKE

1 POMSIE (DEFAULT) MODE



TAP MY NOSE
Tap Pomsie's nose to make it do silly things. Pomsie may sing a little tune, or make a funny sound. It tickles after all! When you connect multiple Pomsies together, tapping the leader's nose could start a conversation between them. They might even tell a few jokes.

PET ME
Pet Pomsies on the forehead or back of the head. They are sure to let you know how much they love it!

SHAKE ME
Weeeeee! Pomsies think this is fun...or do they? I guess it depends on how much they've had to eat.

SURPRISE REACTIONS

Who knows what might happen when you try doing multiple things at once? Just for giggles, try petting Pomsie's forehead while pressing its nose at the same time.

GETTING THE GIGGLES

Pomsies are silly by nature. So don't be surprised if your Pomsie starts giggling uncontrollably for no reason, especially if you have multiple Pomsies connected together. It's kind of their thing!

TOUCH MY MOUTH
Tap and pet Pomsies' mouth to feed them or give them a kiss. Nom, nom, nom. Mmwwaah!

2 PITCH PURRFACT (SINGING) MODE

Switch to Pitch Purrfect Mode to hear Pomsie sing its favorite song. Tap the nose to start, then sit back and listen as Pomsie fills the air with magical melodies.

If you think that's amazing, make Pomsie sing when connected with other Pitch Perfect Pomsies. Listen as the leader (first Pomsie switched on when connecting) takes center stage while the other Pomsies sing backup—All Pomsies singing together in purrrrrfect harmony. Get ready for goosebumps!

TIP: Each Pomsie has its own musical style. Try reconnecting with a different leader to discover how each Pomsie sings the song differently.

Be-Do, Ma 'Naaaaaaah!

Connect Up To 5

POMSIES NOT CONNECTING?

Pomsies can connect together when placed near each other in the same room—See POMSIES CONNECT. Only Pitch Purrfect brand Pomsies can connect with each other. Classic brand Pomsies do not include this feature. If you are having trouble getting Pomsies to connect, switch all Pomsies off then turn them back on again within 8 seconds. If the problem persists, try reinstalling fresh batteries.

Attach Pomsies to nearly anything with their twisty tails.


Wear me!

Remove pull tag to deactivate TRY ME function before use.

CONTENTS:
1 Pomsies Pitch Purrfect™ Pet, 1 Brush, and 1 Instruction Sheet

NOTE:
Remove "Try Me" pull tab before use.

Battery Info

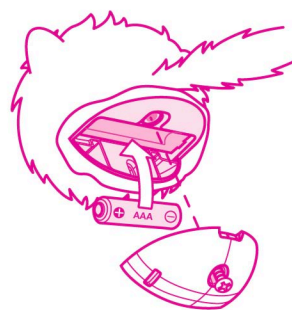

1x AAA (R03P) 1.5V (included)

- Have an adult install fresh batteries. Pomsies require 1 AAA Alkaline (LR03) 1.5V battery.
- To change / insert battery, flip Pomsies pet upside down, open felt pouch and turn screw to the left to unfasten battery door.

Important Battery Info:
- Suggest use of only fresh alkaline batteries of the required size and recommended type.
- Do not use rechargeable batteries.
- Please respect the correct polarity, (+) and (-).
- Do not attempt to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- The supply terminals are not to be short-circuited.
- Remove exhausted battery from the toy.
- Battery should be replaced by adults.
- Battery should be recycled or disposed of as per state and local guidelines.
- Remove battery when storing toy.

Troubleshooting

Replacing Pomsies with fresh battery will resolve most troubleshooting issues. If problems continue, please reach out to our customer service department: support@skyrockettoys.com

Product Care

- Do not immerse Pomsies in water or any other form of liquid.
- Do not throw or kick Pomsies as this may damage mechanical functionality.
- Do not leave Pomsies in extreme heat or freezing temperatures, as this can result in permanent mechanical damage.
- Surface wipe clean with a damp cloth and keep moisture away from battery compartment.

FCC Statement

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.

This device is marked with the selective sorting symbol on waste electrical and electronic equipment. This means that this product should be supported by a selective collection system accordance with applicable regulations in order to be either recycled or dismantled in order to reduce any impact on the environment. The batteries, submitted to a specific collection system, must be removed from the product and disposed of separately. When that the batteries are not to be extracted, the product must be delivered to and appropriate collection center for recycling is complete. Electrical and electronic products as well as batteries that have not been sorted before disposal are potentially dangerous for the environment and human health due to the presence of hazardous substances. For more information, contact your local or regional government.

© 2025 Skyrocket LLC, Los Angeles, CA 90902 USA. All rights reserved. Pomsies and Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.

Questions or comments? Please call 888-674-5650 or visit www.Pomsies.com

WARNING: This toy produces flashes that may trigger epilepsy in sensitized individuals. Stuffing information: ALL NEW MATERIAL • WIRE • REG NO. PA-18686(CN)

Product colors and styles may vary from those shown. Retain this instruction manual for future reference. MADE IN CHINA

PATENT PENDING

SKYROCKET

US - G1