

Pad 系列区明区
尺寸：区琴折后140*100mm
材区：128g区版区
双面区黑印刷，区色虚区区折区不印刷

正面英文反


140.00 mm

LOGIC L-PAD PRO



USER MANUAL

1.HARDWARE OVERVIEW

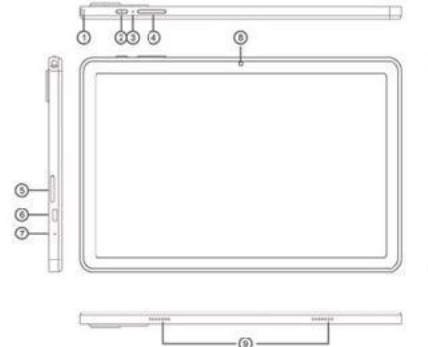

- ①3.5mm Headphone Jack
- ②Power Button
- ③Reset
- ④Volume Buttons+/-
- ⑤TF Card/SIM Card Slot
- ⑥USB 2.0 Type-C Port
- ⑧Front Camera
- ⑨Speakers

2.SAFETY WARNINGS

- Do not disassemble the product or accessories.
- Do not use alcohol,thinner,or benzene to clean the surface of the device.
- The device should be charged for about 4 hours during the first three charge cycles.
- Do not store the device in places with high temperature,humidity,or dust.Avoid dropping or strong collision.
- Use an appropriate volume setting.High volume may cause hearing damage when using headphones.
- To charge the device,use the included USB cable and adapter.
- When transferring data to/from a computer,do not suddenly disconnect the cable:this may cause the device to malfunction.Use a "Safety Remove Hardware"or "Eject"function on the computer.
- Obey all local laws and regulations when using the device,such as when driving or aboard an aircraft.
- The device and included accessoriesare not water resistant or water proof.
- It is not recommended to leave the battery charging for more than 8 hours.Do not use the charger ina wet or humid environment.Only charge the tablet in a safe.

3.technical SPECIFICATIONS

Operating System	Android 16.0
Display	101"Incell &IPS (HD)
Resolution	1280×800
RAM	4GB+12GB Extended Max
ROM	128GB
CPU	Unisoc T310
Battery	6000mAh,Li-Ion Polymer
Ports	Type-C,a3.5mm Standard Headphone Jack
Camerc	5.0MP Front Camera,5.0MP Rear Camera
Card Slot	Dual Nano SIM with Shard TF Slot
GPS	Yes
Voltage	5V/2A
Acceso ala Red	WiFi 2.4G and 5G,BT 5.0 4G:B2/3/4/5/7/8/7/28AB/38/66 3G:B1/2/5/8 2G:850/900/1800/1900 MHz

4.TROUBLE SHOOTING

No.	ISSUE	FIX
1	Battery is draining too fast	Adjust screen brightness to a lower setting.
2	Slowness or unresponsive programs	Close unused opps;clear app cache.
3	Network connectivity issues; no Wi-Fi connection	Reset network connection;toggle airplane mode on/off.
4	Tablet is hot or overheating	Cose unused opps;clear app cache.
5	App crashes	Reopen opp;update app through play store.
6	Unresponsive screen	Restart tablet by holding power button for`8 seconds.
7	Google Play Store crashes	Clear opp cache ond restort.
8	Apps won't download from Play Store	Clear Play Store cache;open opp settings and clear local search.
9	Can't turn tablet on/off	Hold power button for Power Menu options.
10	Touch screen issue;not responding to	low battery power;check for physical damage.
11	Battery does not hold a charge	Check power cable;inspect power button if stuck
12	Sound is low	Check speaker port for blockoge.
13	Camera or SD Card not working	Corrupt Software/Reset to factory default.
14	Download issues	Make sure it connect with PC properly.You'd better not to use the front USB port to connect to PC.
15	Device crashedor can't turn on	Once device crashed during the running time,It can be restarted via tap the RESET button at the side of device.
16	Out of run	Check the battery whether it out of charge.Checking ofter get connected to the power adapter.If it still can not turn on after charging,please contact the customer service center.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference. 1. This device must accept any interference received, including interference that may cause undesired 2. operation. Modification Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Important Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The SAR limit set by the FCC is 1.6W/kg. The highest SAR value of this device type complies with this limit. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. he SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement

Body-wom Operation
This device was tested for typical body-wom operations.To comply with RF exposure requirements,a minimum separation distance of 0mm must be maintained between the user's body and the handset,including the antenna. Third-party belt-clps,holsters,and simior accessories used by this device should not contain any metolie components.Body-wom accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.Use oniy the supplied or an approved antenna.


面法文

LOGIC L-PAD PRO



MANUAL DE USUARIO

1.DESCRIPCIÓNDEL PRODUCTO

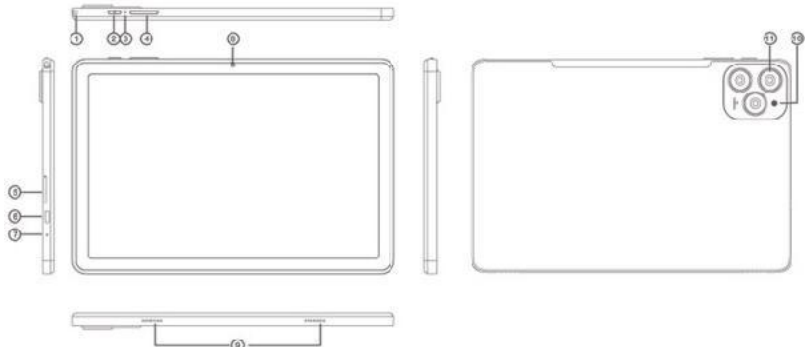

- ②Eotrode enAedo Jock 3.5mm
- ④Botón de Volumen+/-
- ⑤Ranura de TF Card/SIM Card
- ⑥Puerto USB 2.0 Tipo-C
- ①comoro Trosera

2.ADVERTENCIAS DE SEGURIDAD

- No desarme el producto ni los accesorios.
- No utilice alcohol,diluyentes ni benceno para limpiar la superficie del dispositivo.
- El dispositivo debe cargarse durante aproximadamente 4 horas en los primeros tres cidos de carga.
- No almacene el dispositivo en lugares con altas temperaturas,humedad opolvo.Evite caidas o golpes fuertes.
- Utilice un nivel de volumen adecuado.El volumen alto puede causar danos auditivos al usar auriculares.
- Para cargar el dispositivo,utilice el cable USBy el adaptador incluidos.
- Al transferir datos hacia o desde una computadora,no desconecte el cable de forma repentina,ya que esto puede causar un mal funcionamiento del dispositivo.Utilice la función "Quitar hardware con seguridad o "Expulsar'en la computadora.
- Cumpla con todas las leyes y regulaciones locales al utilizar el dispositivo,como al conducir oabordo de una aeronave.
- El dispositivo y los accesorios incluidos no son resistentes al agua ni impermeables.
- No se recomienda dejar la bateria cargando por más de 8 horas.No utilice el cargador en un entorno húmedo o mojado.Cargue la tablet únicamente en un entorno seguro.

3.ESPECIFICACIONES TECNICAS

Sistema Operativo	Android 16.0
Pantalla	101"Incell &IPS (HD)
Resolución	1280×800
RAM	4GB+12GB Maximo Extendido
ROM	128GB
CPU	Unisoc T310
Bateria	Li-Ion Polymer de 6000mAh
Puertos	Tipo-C,Audio Jack de Ø3.5mm
Cámara	Cámara Frontal de 5.0MP,Cámara Posterior de 5.0MP
Ranura da Tarjeta	Nano Doble SIM más Ranura para TF Card
GPS	Si
Voltoje	5V/2A
	WiFi 2.4Gy5G,BT 5.0 4G:B2/3/4/5/7/8/17/28AB/38/66 3G:B1/2/5/8 2G:850/900/1800/1900 MHz

4. SOLUCIÓNDE PROBLEMAS

No.	PROBLEMAS	SOLUCIÓN
1	La boteria se descarga demasiado rápido	Ajuste el brillo de la pantalla aun nivel más bajo.
2	Lentitud o opps que no responden	Cierre los aplicaciones no utilizados;borre el coché de los aplicaciones.
3	Problemas con la conectividad de red; sin conexión Wi-Fi	Restablezca la conexión de red;active y desactive el modo avión.
4	La tablet se calienta o se nsobrecalienta	Cierre las aplicaciones no utilizadas;borre el caché de las aplicaciones.
5	Apps se cierran inesperadamente	Vuelva a abrir la aplicación;actualicela a través de Play Store.
6	Pantalla sin respuesta	Reinicie la tablet manteniendo presionado el botón de encendido durante`8 segundos.
7	Google Play Store se cierra inesperadamente	Borre la caché de la aplicación y reinicie.
8	Las aplicaciones no se descargan desde Play Store	Borre la caché de Play Store;abra la configuración de la aplicación y borre la búsqueda local
9	No se puede encender/opogor la tablet	Mantenga presionado el botón de encendido para occeder al menú de energia.
10	Problema con la pantalla táctil; no responde	Bateria baja;verifique si hay danos fisicos.
11	La boteria no retiene la carga	Verifique el cable de alimentación;revise siel botón de encendido está atascado.
12	El sonido es bajo	Revise si el puerto del altavoz está obstruido.
13	La cdámara ola torjeta SD no funcionan	Software danado/Restablecer a valores de fábrica.
14	Problemas de descarga	Asegúrese de que esté correctamente conectada a laaPC.Se recomienda no usarel puerto USB frontal para conectarlaala PC
15	El dispositivo se bloqueadurante el funcionamiento.puede reiniciarse presionando el botón RESET ubicado en el lateral del dispositivo.	Siel dispositivo se bloqueadurante el funcionamiento.puede reiniciarse presionando el botón RESET ubicado en el lateral del dispositivo.
16	Sin funcionamiento	Verifique si la bateria está descargada.Conéctela a adaptador de corriente, Sium después de cargarlano enciende,contacte al centro de atención al cliente.

LOGIC
móviles siempre

Warranty Certificate
Terms and Conditions
We will take these items apart

Obtain warranty service information please visit the support section of logicmobility.com

Para mas detalles de la Garantía Limitada de LOGIC,por favor obtener informacón del servicio

logicmobility.com

Made in China 度 阳
Copyright © Swagtek Inc.2026