



5.3.1 Powering On and Off

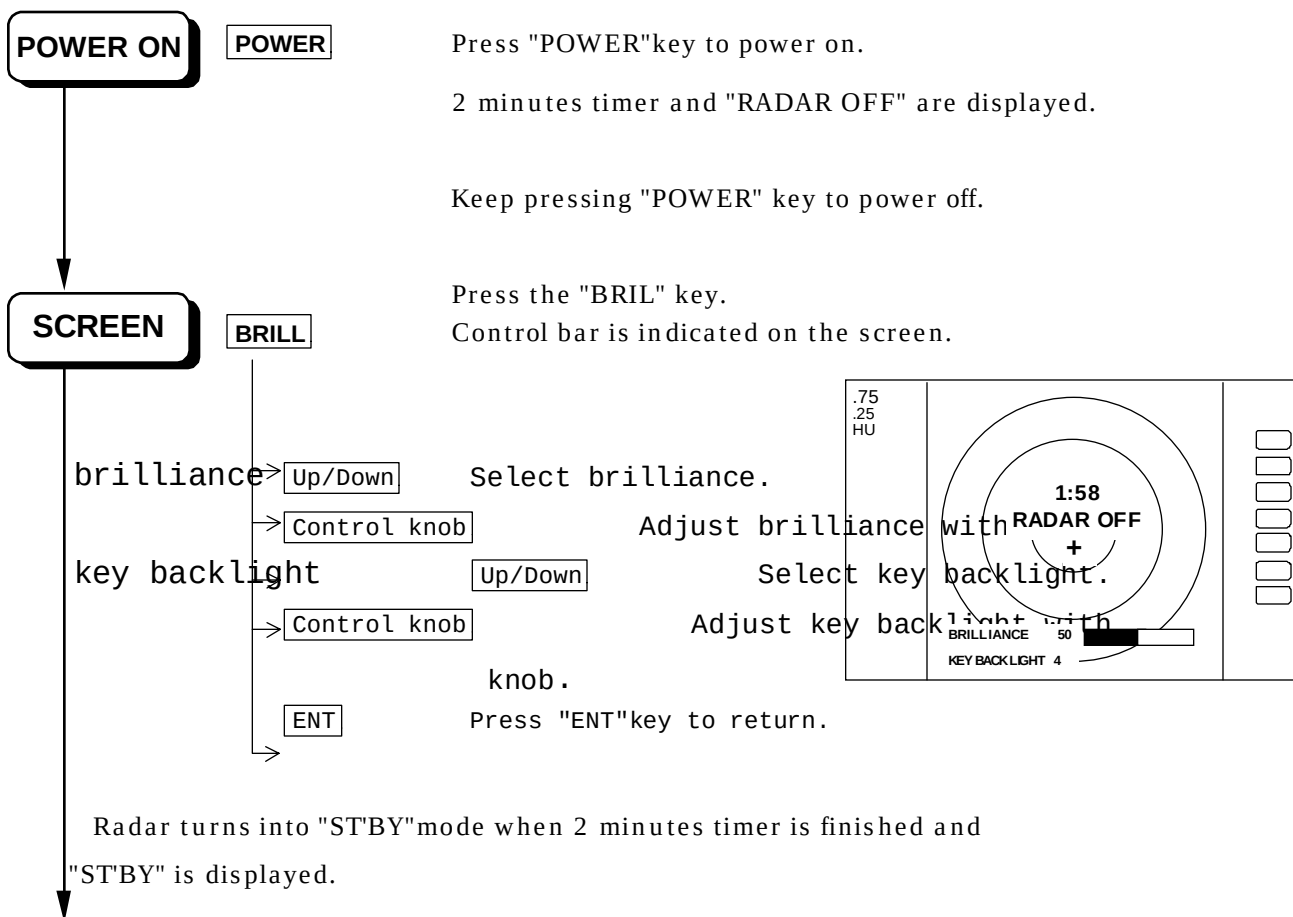


5.3.2 Transmitting

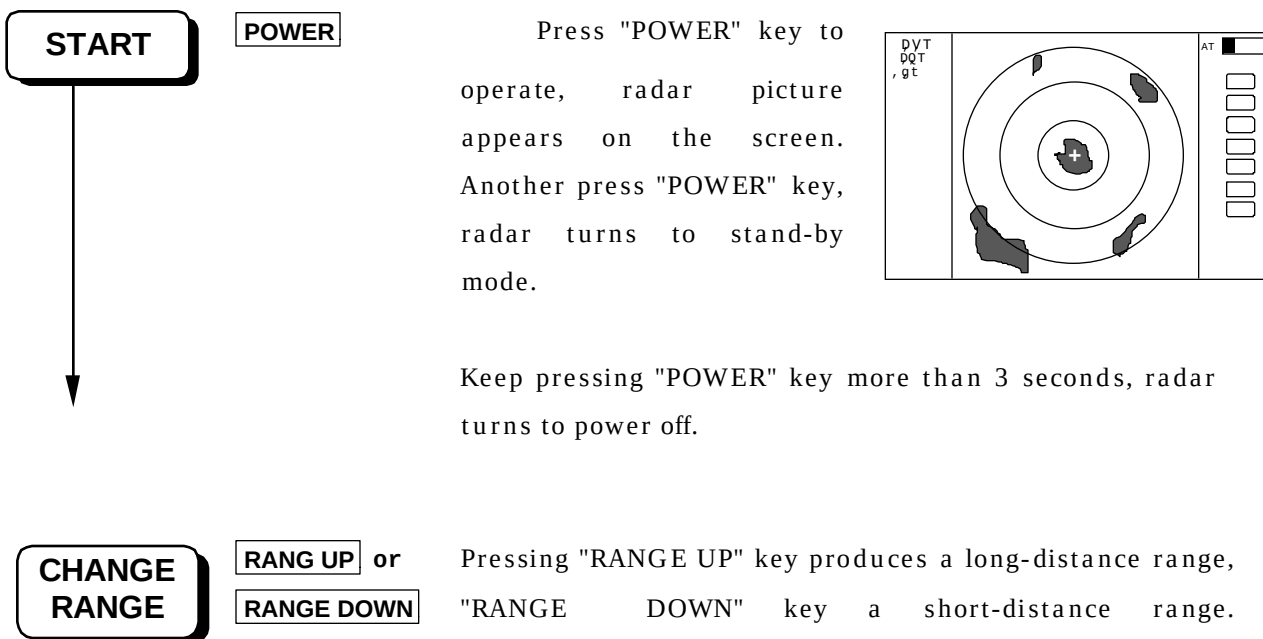

xxx = keys to press


- [BRIL] → [Control knob] (Adjustment of brilliance) → [BRIL] or [ENT]
 |→ [Up/Down] (Adjustment of brightness, panel) |→ [Other function key] Shift to other functions

- (1) When the "STC" key is pressed, the STC display on the left side of the screen will be reversed as **S 35** and the adjustable state will be entered.
- (2) When the control knob is turned, the figure will be shifted within a range of 0 and 99, and the STC can be manually adjusted. When the "AUTO" key is pressed, all (GAIN, STC and FTC) will enter an AUTO state.
- (3) After the adjustment is finished, press the "STC" key to exit from the adjustment state.
If some other function key is pressed, shift to that function will take place.
- (a) To make adjustments by MANUAL (When the STC key is pressed under AUTO operation, shift to a manual operation will take place.)

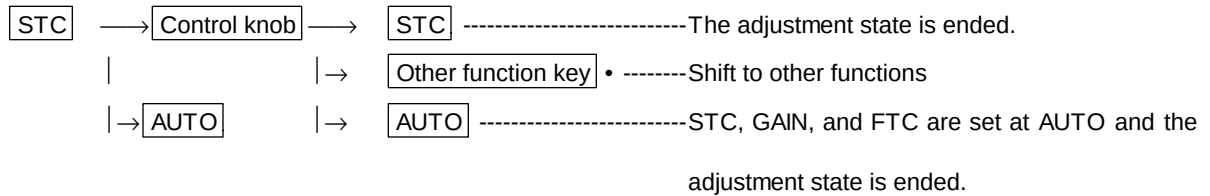


NOTE) When you select MANU mode, GAIN and FTC will be switched to MANU mode, too.

 - (b) To switch from the MANUAL state




5.3.8 Removing rain and snow clutter (FTC)

- (1) When the "FTC" key is pressed, the FTC display on the left side of the screen will be reversed as **F 50** and the adjustable state will be entered.
- (2) When the control knob is turned, the figure will be shifted within a range of 0 and 99, and the sensitivity can be manually adjusted. When the "AUTO" key is pressed, all (GAIN, STC and FTC) will enter an AUTO state.
- (3) After the adjustment is finished, press the "FTC" key to exit from the adjustment state. If some other function key is pressed, shift to that function will take place.

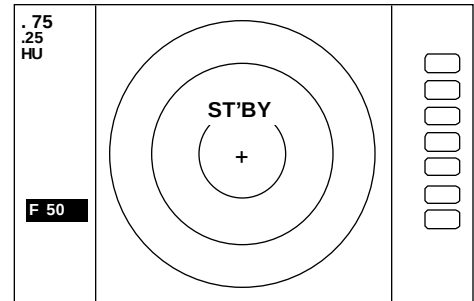

- (a) To make adjustments by MANUAL (When the FTC key is pressed under AUTO operation, shift to a manual operation will take place.)
- | | | | | | | | | |
|-----|---|--------------|-----|--------------------|-------|--------------------------------|-------|---|
| FTC | → | Control knob | → | FTC | ----- | The adjustment state is ended. | | |
| | | μθ> | | Other function key | ----- | Shift to other functions | | |
| μθ> | | | μθ> | AUTO | μθ> | AUTO | ----- | GAIN, STC, and FTC are set at AUTO and the adjustment state is ended. |

 - (b) To switch from the MANUAL state



5.3.9 Man Over Board (MOB)

Pressing the MOB key will send the own ship's position data to the external equipment through NMEA port with "WPL" format. There is no change on the screen.

To check the MOB position data, select "MOB" from the "WINDOW" menu in the "SETUP". The position of MOB and current position will be displayed on the screen. If press the "MOB" key while watching the MOB screen, MOB data will be cleared and return to previous screen. If press other keys, MOB data will be remained and return to previous screen.