

FLEX ALPHA DISPLAY PAGER

Operating Manual

SHINIL INDUSTRIAL Co., Ltd,

CONTENTS

- FEATURES	3
- DESCRIPTION OF INDICATORS & SYMBOLS	4
- CONTROL BUTTONS	5
- OPERATION	5
<i>Turning Pager On</i>	5
<i>Turning Pager Off</i>	5
<i>Read Personal Message</i>	5
<i>Delete Personal Message</i>	6
<i>Lock Personal Message</i>	6
<i>Unlock Personal Message</i>	6
<i>Move Personal Message to Notebook</i>	6
<i>Read Mail-Drop / Delete Individual & All Mail-Drop</i>	6
<i>Function Menu</i>	7
1) <i>Calendar</i>	7
2) <i>Setting the Incoming Message Alert</i>	7
3) <i>Setting the Date and Time</i>	8
4) <i>Setting the Alarm</i>	8
5) <i>Setting Auto Power On/Off</i>	9
6) <i>Setting the Scroll On/Off</i>	9
7) <i>Reminder Alert for Unread Message</i>	9
8) <i>Setting the Display Duration Time</i>	10
9) <i>Setting the Character Type</i>	10
<i>Notebook</i>	10
<i>Others</i>	10
1) <i>Easy Way to Change Alert Mode</i>	
2) <i>Out of Range</i>	
3) <i>Battery Indicator</i>	
4) <i>Automatic Message Deletion</i>	
5) <i>Lamp On/Off</i>	

FEATURES

- 2/4 Line Display besides Icon Indicator Line
- 16/21 Character Display per Line
- Address Capability: 16
- Message Storage: 30,000 Characters Maximum
- Personal Message Slot: 70 (including 20 Notebook Slots)
- Mail-Drop Message Slot: 16
- Message Lock up to 30 Personal Messages
- 8 User Selectable Alert (3 Tones, 5 Melodies)
- Message Scrolling On/Off (On ; Normal / Slow / Fixed / Fast ; Off)
- Incoming Message Time & Date Stamping
- User Selectable Date Display
(Date/Month/Year or Month/Date/Year or Year/Month/Date)
- Message Deletion (All or Individual Message)
- Backlight (button press to turn on)
- Remind Alert for Unread Message (2, 5, 10, 15 and 30 min)
- Backup Battery (For retention memory when replacing battery)
- Battery Replacement Alarm
- User Selectable Alert Mode: Alert / Vibration / Alert after Vibration / Silence
- Memory Full Indication
- Duplicate Message Indication
- 5 Selectable Display Duration Times (4, 8, 12, 16, 20 sec)
- Service Area Indication
- Auto Power On/Off
- Mail-Drop Alert On/Off
- Time Clock
- Alarm Function (TIME=Time of Day, DAY=Day of Week plus Time,
DATE=Calendar Date plus Time)
- Calendar

DESCRIPTION OF INDICATORS & SYMBOLS

■ Indicators

	Duplicate Message
	Service Area
	Unread Message
	Battery Indicator
	Vibration Mode
	Audible Mode
	Message Remain to Read

■ Symbols

	Read Mail-Drop
	Calendar
	Set Incoming message Alert
	Set Time, Date
	Set Alarm
	Set Auto Power On/Off
	Set Scrolling Speed
	Set Alert Periodic Time for Unread Message
	Set Time for Display Duration
	Turn Pager Off
	Individual Message 'DELETE'
	All Message 'DELETE'
	Lock Message
	Unlock Message
	Duplicate Message
	Unread Message
	Read Message
	Return to previous screen
	Audible Alert
	Vibrating Alert
	Audible Alert with Vibration
	Silence
	Alert On for Incoming Mail
	Alert Off for Incoming Mail

CONTROL BUTTONS

⌘ Used to go left through the Function menu and your messages, to decrease the numbers through the functions like time, alarm, date settings.

➡ Used to go right through the Function menu and your messages, to increase the numbers through the functions like time, alarm, date settings.

■ Used to read messages, to select a pager function
If pressing for 1 second at Function menu, return to the previous menu.

OPERATION

Turning Pager On

Press ■ "Pager On? Yes" is displayed. Press again ■.

When the pager is on and no activity is taking place, the Standby screen is displayed.

The Standby screen displays the service area  indicator and may display other indicators according to the current pager status.

Turning Pager Off

❶ From the Top screen,

❷ Press ➡ or ⌘ to move the cursor to Function Set, press . ■

❸ Press ➡ or ⌘ to move the cursor to . 

❹ Press ■ "Pager Off? No" is displayed.

❺ Press ➡ or ⌘ to display "Pager Off? Yes".

❻ Press ■ again to turn the pager off.

Your pager is now off and the screen is blank.

Read Personal Message

- ❶ From the Top screen,
 - ❷ Press  or  to move the cursor to Read Message, press  . 
- The number indicates the count of messages that are unread.
- ❸ Press  to display the Message status screen.
 - ❹ The very left black envelope symbol means the latest and unread message.
- On the right lower corner, the pager shows the date when the message was received.

 Unread Message

 Read Message

 Locked Message

(See Lock Message on page 7)

- ❺ Press  to read the message after moving the flashing cursor by  or .
- ❻ In the message screen, "07" indicates the message is 7th incoming one and the receiving time is am 11:34.  indicates the message is duplicate

(07)  am 11 : 34
John got a promotion.

Message Screen

Delete Personal Message

- ❶ From the Message Screen, press  for 1 second to display Sub Menu.



- ❷ Press  or  to move the cursor to  . *Sub Menu Screen*
- Here, if you want to delete all the messages, move the cursor to .
- ❸ Press  to delete the message.

Lock Personal Message

Up to 30 messages can be locked to prevent them from being deleted or from being replaced when memory is full.

- ❶ From the Sub Menu Screen, move the cursor to .
- ❷ Press  to lock the message.

Unlock Personal Message

First, read the locked message.

- ❶ Press .
- ❷ Move the cursor to  and press  to unlock the locked message.

Move Personal Message to Notebook

- ❶ From the Fig. 6, move the cursor to .
- ❷ Press  to move the message to Notebook.

See Notebook on page 11 for more information.

Read Mail Drop / Delete Individual & All Mail Drop

- ① From the Top Screen,
press ∂ or $\times$ to move the cursor to 
 indicates that you have one unread mail drop or more.
- ② Press  to display the Mail drop status screen.

The Mail drop status screen shows the current status of your mail drop messages.
For example, unread mail drops are indicated by  and read mail drops are indicated by 
Its receiving date is displayed on the right lower corner.

- ③ Press ∂ or $\times$ to move the flash to select the mail drop you want to read.
- ④ Press  to read the selected mail drop.

In order to delete the mail drop(s),

- ① Press  or 1 second while a mail drop is displayed on the pager screen.
- ② Press ∂ or $\times$ to move the cursor to 
Note: Move the cursor to  delete all the mail drops the pager has.
- ③ Press  to delete the mail drop you selected.

Function Menu

The Function menu provides access to the many functions of your pager through the use of symbols and their descriptions. As you move through the Function menu, the pager will show the description of a function the cursor selects.

Note: The icon indicators on the upper corner are displayed according to the current pager status.
Now let's go over the functions the pager provides.

1) Calendar

- ① From the Function menu screen, press ∂ or $\times$ to move the cursor to .
- ② Press  to display the calendar.
- ③ Press ∂ or $\times$ to adjust the month and year.

2) Setting the Incoming Message Alert

- ① From the Function menu screen, press ∂ or $\times$ to move the cursor to .
- ② Press  to display the Choose alert menu.

There are 4 different alert modes, an audible alert() a vibrating alert() audible alert after vibration() and no alert (completely silent)()



- ③ Press ∂ or $\times$ to move the cursor to the desired alert mode. The pager gives a sample of each alert pattern as you move through the alert mode.

Setting an Audible Alert

- ① From the Choose alert menu, press  while the cursor is moved to .
- ② Press  or  to move through the alerts (3 tones/5 melodies) and press  to select.

Setting the Incoming Mail Drop Alert On/Off

While the cursor is moved to  press  or  to switch the Mail Drop alert On/Off mode and press  to select your desired mail drop alert on/off mode.

 Mail drop Alert On (The pager alerts when it has a mail coming.)

 Mail drop Alert Off (The pager won't alert when it has a mail coming.)

Setting a Vibrating Alert

From the Choose alert menu, press  while the cursor is moved to .

Setting an Audible Alert after Vibration

From the Choose alert menu, press  while the cursor is moved to .

Setting No Alert

From the Choose alert menu, press  while the cursor is moved to .

3) Setting the Date and Time

- ① From the Function menu screen, press  or  to move the cursor to .
- ② Press  to display the Set Date and Time screen.
- ③ Press  to move the cursor and press  or  to adjust the month, day, year, AM/PM/24hr, hour, minutes and the display format of the date(MDY/DMY/YMD)

4) Setting the Alarm

The pager has an alarm that can be set for 1)a daily specific time and 2)a specific time and date, and 3)a specific time and day.

- ① From the Function menu screen, press  or  to move the cursor to .
- ② Press  to display the Set Alarm screen .

- ③ The cursor is on No. 0. Press  or  to adjust the No. 0 through No. 2. No. 0 alarm is set for a daily specific time.

For example, when the pager is on the daily specific time, am 6:00, it alarms at am 6:00 every day.

Set Alarm Screen


Note: No. 1 alarm is set for a specific time and day.

No. 2 alarm is set for a specific time and date.

- ④ Press  while the cursor is on No 1. If you want to select No.1 alarm mode.
- ⑤ Press  or  to enable or disable the No.1 alarm mode and press  to select.

 indicates that the alarm function is disabled

- ⑥ Press  or  to adjust the hour and minutes.

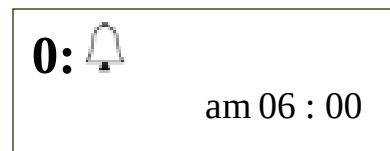

5) Setting Auto Power On/Off

You can set the pager to automatically turn on and off. This feature can greatly improve battery life.

- ① From the Function menu screen, press Δ or ∇ to move the cursor to .
- ② Press .
- ③ **To Enable** : When this Auto power function is set *On* ,  is displayed on the upper corner.

When the cursor is on  press  to enable Auto On/Off function.

And press Δ or ∇ to adjust the time.

 indicates the time when the pager automatically turns on and  indicates the time when it automatically turns off.

To Disable :

When the cursor is on  press Δ or ∇ to display .

And press  to disable.  appears on the upper corner.

6) Setting the Scroll On/Off

- ① From the Function menu screen, press Δ or ∇ to move the cursor to .
- ② Press .
- ③ Press Δ or ∇ to adjust the scrolling speed (Normal / Slow / Fast) and Off.
- ④ Press  to select.

7) Reminder Alert for Unread Message

When you have a unread message or more, the pager gives periodic reminder alerts until all unread messages are read.

- ① From the Function menu screen, press Δ or ∇ to move the cursor to .
- ② Press .
- ③ Press Δ or ∇ to enable() disable ().
- ④ Press  and press Δ or ∇ to adjust the periodic reminder alert time(2, 5, 10, 30 and 60 minutes).

Note : Even though the pager is set to enable this reminder alert for unread messages, it won't remind you when incoming message alert mode is set to "no alert".

8) Setting the Display Duration Time

When the pager is left unbuttoned for a certain period, the screen of pager is automatically converted to be blank but is still ready to receive messages. This feature allows extending the battery life.

- ① From the Function menu screen, press ∂ or $\aleph$ to move the cursor to .
- ② Press .
- ③ Press ∂ or $\aleph$ to adjust the display duration time (4, 8, 12, 16 and 20 sec)
- ④ Press  to select.

9) Setting the Character Type

The pager can display 3 kinds of characters when reading the messages. User can select one of three character types. (2 x16,4x16,4x21)

- ① From the Function menu screen, press ∂ or $\aleph$ to move the cursor to .
- ② Press .
- ③ Press ∂ or $\aleph$ to view character types
- ④ Press  to select.

NoteBook

You can move the personal messages important to you to NoteBook to prevent them from deleted accidentally. Up to 20 messages can be stored in NoteBook.

In order for you to read the message stored in NoteBook,

- ① From the Top screen,
- ② Press ∂ or $\aleph$ to move the cursor to read the message in NoteBook and press .
- ② Press ∂ or $\aleph$ to move the flashing cursor and press to read the message in NoteBook.

Others

1) Easy Way to Change Alert Mode

You can easily change the incoming alert mode by pressing  or 1 second.

- ① From the Top screen, press  for 1 second to change.
- ② The alert mode is changed to the following steps.

[Audible alert $\rightarrow$ Audible alert after vibration $\rightarrow$ Vibrating alert $\rightarrow$ Silence]

As you press  or 1 second, the indicators representing the incoming alert mode are changed accordingly.

2) Out of Range

If the pager are outside your paging coverage  area,  disappears.

As long as  is not displayed, the pager can not receive messages.

3) Battery Indicator

A battery indicator on the upper corner keeps you informed of the low battery.

4) Automatic Message Deletion

If all the 50 message slots are full, the oldest, unlocked and previously read message is automatically deleted when a new message is received.

Note : To prevent specific messages from being deleted, lock them or move to Note book.

5) Lamp On/Off

As long as the screen is not left blank, press ∂ and $\times$ to turn lamp on and press ∂ and $\times$ again.

FCC NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of

the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.