



12 PRODUCT DESCRIPTION

● FEATURES OF PERSONAL STATION (PS) UTS-708J

This Personal Station (PS) UTS-708J is a digital portable phone that uses wireless communication.

- (1) It can be used to place and receive calls while in the PHS service area.
- (2) You can have direct communication as a transceiver between phones.

Please read this instruction manual carefully and treat this phone as two devices in one.

Seamless hand-over

As a first for the PHS, the phone is fitted with two radios. It is no longer easy to be cut off while moving. During a call, the base station with the best conditions is received by reached the another radio which means the hand-over interval is even shorter and a stable clear conversation can be achieved.

Dual Mode

This phone is fitted with a dual mode communication system. The combination of public and transceiver mode enables simultaneous standby condition with the two radios.

3 chord melody

With a 3 octaves range, ring-tones of up to 3 chords are possible.

Hands-free/speaker function

When taking a call, you can talk without needing to hold the phone and it is possible to listen to who your talking with from a speaker. This is useful for when you would like to carry out your business while talking on the phone or while answering message is playing.

Answering message, conversation memo and voice recorder function


When you cannot answer the phone because you are busy working or somewhere like an art museum, you can set the "answering message" function, which answers any calls with an answering message and saves the message. You can easily set the function to record a conversation (conversation memo) or record when in standby condition (voice recorder). You can play the recorded memo whenever you please.

Easy electronic organizer function

Like an electronic organizer, you can input your schedule. This can be displayed in week units. When an appointment time is reached, you are notified by beep tone, melody or vibration. You can specify a telephone number related to the appointment to instantly pop up. You can also store timetables for your regular train and bus service.



● NAMES AND FUNCTIONS OF COMPONENTS

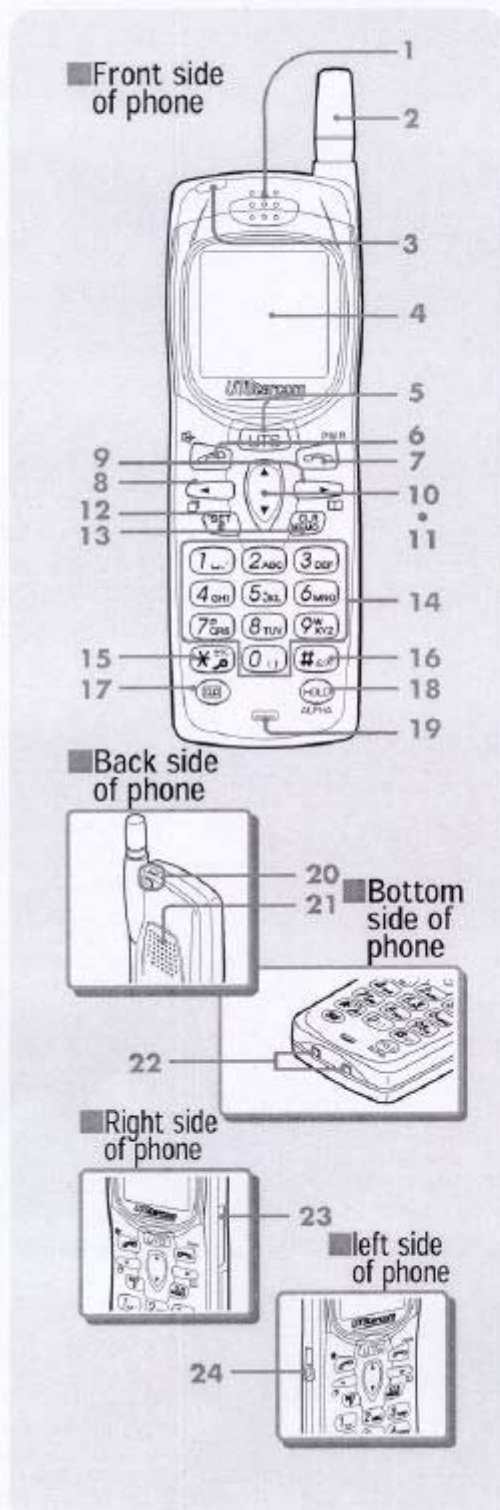

- 1** Receiver
- 2** Antenna
Fully extend the antenna when placing or receiving calls. (Call may be disturbed if antenna is not fully extended.)
- 3** Incoming light
- 4** Liquid Crystal Display (LCD)
- 5** **[UTS]** key
Press this key to switch to short message or manner mode. (See page 69 and 89.)
- 6** **[*]** key
When placing or receiving calls, press this key when using the hands-free function. (See pages 29, 35 and 39.)
- 7** **[END]** key
Press this key when ending a call and turning the phone on and off. Also press to stop a ring-tone. (See pages 24, 29 and 36.)
- 8** **[←]** key
Use this key to navigate the cursor to the left when inputting characters or when placing a call by redial etc. (See pages 32 and 42.)
- 9** **[→]** key
Use this key to navigate the cursor to the right when inputting characters or when using the phone book function. (See pages 42 and 44.)
- 10** **[↑]** key
Use this key to scroll up the function menu when changing function settings. (See page 25.)
- 11** **[↓]** key
Use this key to scroll down the function menu when changing function settings. (See page 25.)
- 12** **[SET F]** key
Press this key when setting the various functions, also press to confirm a selected item. (See page 25.)



- 13** key
Press this key when deleting characters or using dial memo. (See pages 31 and 42.)
- 14** Dial key
Press this key when inputting phone numbers or inputting characters. (See pages 29 and 42.)
- 15** key
Press this key when setting key lock. (See page 96.)
- 16** key
Press this key when setting dial lock. (See pages 95.)
- 17** key
Press this key to record and playback. (See pages 38, 58 and 72.)
- 18** key
Press when holding/releasing a call or when changing the input character type. (See pages 37 and 41.)
- 19** Microphone
- 20** Hand strap attachment hole
- 21** Speaker
- 22** Battery charging terminals
- 23** 32kbps high speed data connector
- 24** Earphone/mic. jack

* The function of keys explains only main functions.



● NAMES AND FUNCTIONS OF COMPONENTS (cont.)

DISPLAY OWN PHONE NUMBER AND NUMBER OF EACH OPERATION MODE (FOO)

1 Press **SET F** **0 11** **0 11**.

Display starts from the number of the current mode.

By using **▲** or **▼** the number of each mode is displayed in order. Modes that are not registered are not displayed.



SETTING FUNCTIONS

You can call up and set various functions.

Setting by function menu display

1 Press **SET F**.

2 Select the function you want to use by using **◀▶**.

You can select schedule function (page 76), function history (page 17) and function menu (menu: each type of function can be set)(this page). After selecting, follow the instructions for each function.



Setting by function menu selection (Menu)

1 Press **SET F**.

2 Press **▼**.

The function group is displayed. Find the function item of each group from the function menu list (page 18).

3 Press **▼** or **▲** and select the function group you want to set.

Function groups for each item category are displayed in order. This display scrolls when the keys are held down.





4 Select function item by pressing .
By pressing  or , the list of functions can be displayed in order. If the function you want to set is not there, return to step 3 by pressing  or .

5 Press .
You can set the selected function.
For more information, see the respective sections for setting each function.

Setting by function number direct input

You can call up the function setting by using the dial keys to directly input the function number (page 18 and page 74).

1 Press .

2 Input function number.
You can set the function by calling up function.

Setting by function history selection

You can select item from the 5 items in function history which were used previously.
You can easily select functions that you set frequently.

1 Press .

2 Press .

3 Select function icon by pressing  or .

4 Press .
You can set the selected function.

MEMO

- If you have not operated the phone for approximately 25 sec, you can exit from the function setting screen by pressing the  key.