

This introduction aims to give the required information using WCM-680D monitor.

Precaution

CAUTION

Please carefully read this instruction for safe use and best operation.

TEMPERATURE

Be sure the temperature inside the vehicle is between 0°C and +60°C before turning this unit on.

MAINTENANCE

If you have problems, do not attempt to repair the unit by yourself. Return it to your purchasing dealer.

LOCATION

Make sure the WCM-680D MONITOR not to be exposed to;

- Direct sun & heat
- High humidity
- Excessive dust
- Excessive vibration

DO NOT RAISE THE VOLUME TOO HIGH

Keep the volume at a level where you can still hear the outside noises while driving. Driving while unable to hear outside sounds could cause an accident.

DO NOT DISASSEMBLE OR ALTER

Attempt to disassemble may lead to an accident, fire and / or electric shock.

KEEP SMALL ARTICLES OUT OF THE REACH OF CHILDREN

Store small articles (screws etc.) in places not accessible to children. If swallowed, consult physician immediately.

WARNING


Do not watch TV when you drive a car. It will be a cause of traffic accident if you drive on giving a side glance with watching TV.

PLEASE READ THIS INSTRUCTION MANUAL COMPLETELY BEFORE OPERATING YOUR SET AND RETAIN FOR FUTURE REFERENCE.


CONTENTS

1
2
2
3
3
4
5
9
10
10
11
12
13

DRAWING 6.8" MONITOR

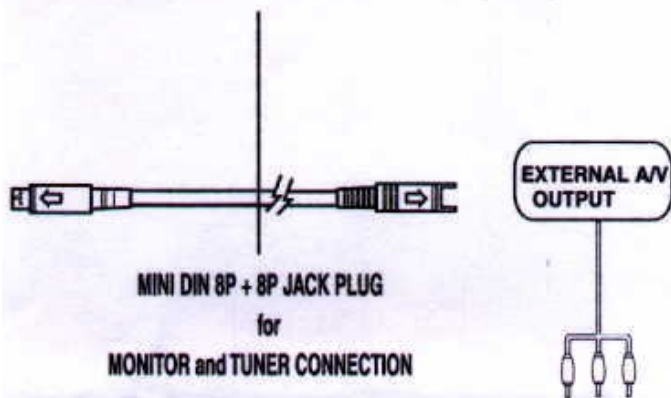

 6.8" MONITOR DRAWING

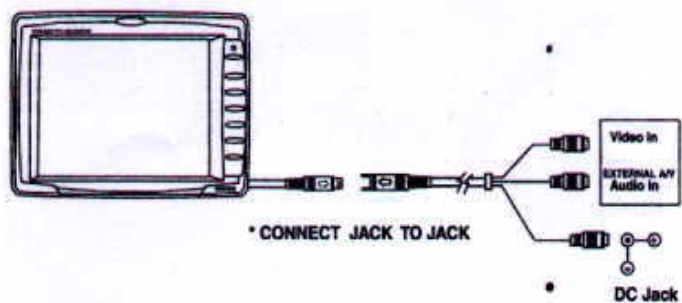

Operation

* The blue letter in [] means the buttons on the remote control

1) POWER : Press power [POWER] button for 'on' and 'off'.

2) TV/AV [TV/AV] : TV and Audio/Video selection button

- Available only when this monitor is connected with TV Tuner, WCR-100U.

06

1) TV mode

a. Press TV/AV [TV/AV] button to select TV mode.

b. Current channel appears on screen and will disappear in 5 seconds.

2) AV mode

a. Press TV/AV [TV/AV] button again to select AV mode.

b. 'AV1' is displayed on the screen.

(it will disappear in 5 seconds)

If there are an external video signal it will be shown otherwise, the screen remained blue as it was.

 
c. Press TV/AV [TV/AV] button again.

d. 'AV2' is displayed on the screen.


(it will disappear in 5 seconds)

If there are an external video signal it will be shown otherwise, the screen remained blue as it was.

* The external video is to be connected through terminal [11].



REMOTE CONTROL)

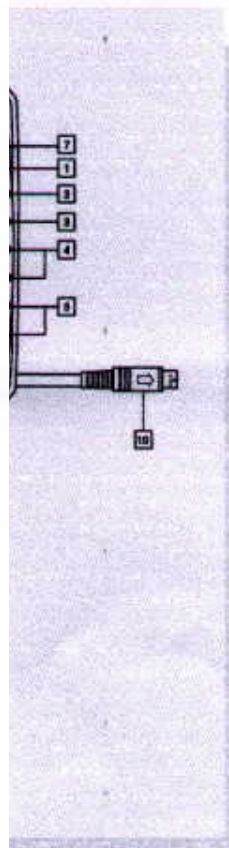 

4) DIMMER FUNCTION

- Press MENU [MENU] button using + CH - [▲ CH ▼] button.
- Press MENU [MENU] button.
- By using + CH - [▲ CH ▼] button.

5) AUTO / MANUAL

- Press MENU [MENU] button using + CH - [▲ CH ▼] button.
- Press MENU [MENU] button.
- To select 'AUTO' function.

6) EXIT

After select some function

4) CH +, CH - [▲ CH ▼]

- TV channel up / selection function

5) VOL +, VOL - [▲ VOL ▼]

- Adjust the volume

6) [AU / MA] - In receiver

1) AUTO & MANUAL

- Press [AU / MA] button.
- 'AUTO' appears on the screen.
- The automatic search function starts.
- To choose a channel.
- Channels are scanned automatically.

7) LED Indicator

LED on : Indicates

LED on : Indicates

3) MENU [MENU]

- Press MENU [MENU] button to select necessary function by using + CH - [▲ CH ▼] button to MENU [MENU] button again.

- Adjust each function by using + CHANNEL - [▲ CH ▼] button.



 
1. Contrast



2. Brightness



3. Color



4. Tint

2) AUTO - SEARCH

- Press MENU [MENU] button and select AUTO - SEARCH function by using + CH - [▲ CH ▼] button.
- Press MENU [MENU] button again.
- TV channels will be scanned automatically.

 
3) FM-TX : Available in AV mode only

- Press MENU [MENU] button to select FM - TX function by using + CH - [▲ CH ▼] button.
- Press MENU [MENU] button again.
- Tune the OSD frequency to the car stereo frequency by using + CH - [▲ CH ▼] button.
(Frequency range : 88.1--89.5 MHz)



The blue letter in [] means the buttons on the remote control.

- ① POWER [POWER] : Power button.



ntil pressing this button

- ② TV/AV [TV/AV] : TV/AV selection button.

- ③ MENU [MENU] : Main control button.

- ④ + CH - [CH] : Channel, adjustment button.

- ⑤ + VOLUME - [VOLUME] : Volume up,down button.

 
- ⑥ [AU/MA] : Channel search function.

DEO / DC POWER


ito this terminal, the

DIVERSITY ANTENNA DETACHABLE

LR antenna detachable

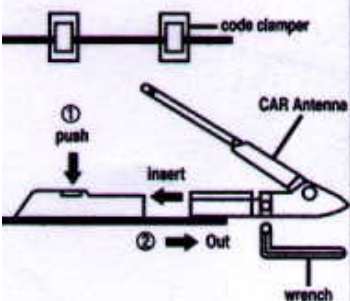

Dummy antenna detachable

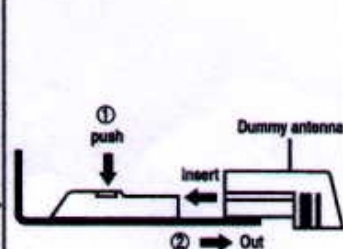 


THE METHOD FOR STAND MOUNTING


TV set in a car

A.Using with a stand horizontal

 
TV set in a car

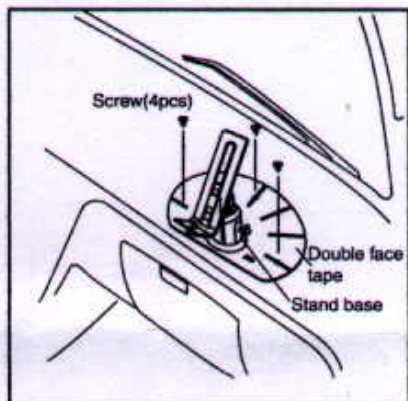

TV set mounting

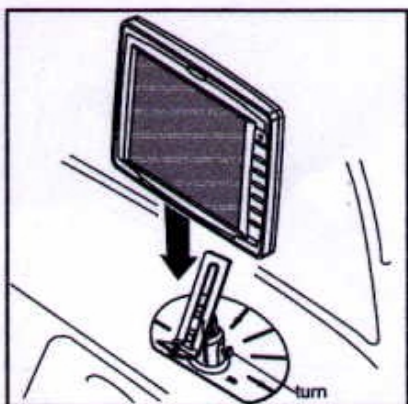 

DRAWING 6.8" MONITOR & TUNER

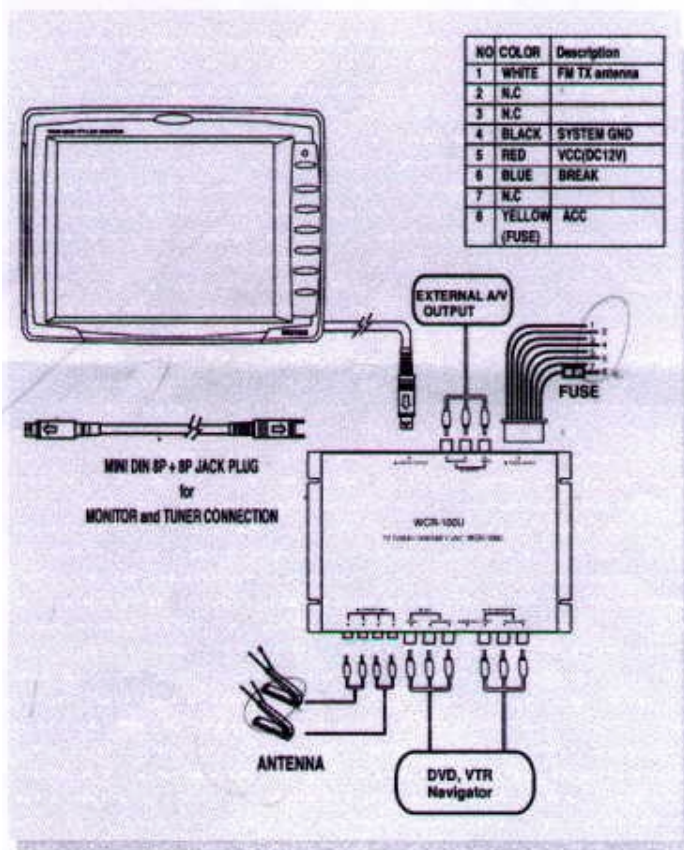 

* If you want to watch the TV or CD,

- (a) Connect the blue wire (break) to black wire (GND)
- (b) Connect the yellow wire (Acc) to red wire (DC 12V)

