

Description of Operation

WLAN module RF utility install

1. double click \storage card\RTS\wireless.AMRV4I > reset
2. remove program \control panel\remove program > reset
3. double click \storage card\RTS\RTS driverbin\AGDOUT > reset
4. turn on WLAN module \windows\wlan click insert module
5. copy \storage card\default.hex to my computer\
6. double click \storage card\RTS\RTS server
7. Runtime Init > Init success

