

TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)

FAX : 82-2-857-9583

PRO120

USER MANUAL

0.5 WATT FAMILY RADIO SERVICE

TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)

FAX : 82-2-857-9583

PRO120

TABLE OF CONTENTS

USER'S MANUAL

THEORY OF OPERATION

LIST OF TEST EQUIPMENT

LIST OF ACTIVE DEVICES

BLOCK DIAGRAM

SCHEMATICS

PCB MAP

LINE DRAWING

PARTS LIST

PARTS DATA

PHOTOGRAGH

TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)

FAX : 82-2-857-9583

1. FRS PRODUCT DESCRIPTION

The Family Radio Service (FRS) is the newest generation in personal two - way communications. FRS radios operate in a license - free band, on one license - free channels.

The PRO120 is a lightweight, palmsized two - way radio that you can carry almost anywhere - use it at shopping malls, sporting events, amusements, or any other activity where communications are needed for convenience or safety.

The radio provides about a 2miles range of communications - allowing you to keep in touch with family, friends or a neighborhood watch group.

The RPO120 is 1 channels model. You can talk to another person using any FRS radio, provided that you can on the same frequency with button.

TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)

FAX : 82-2-857-9583

2. CONTROLS AND FUNCTIONS

- Push-To Talk button - Permits radio transmissions
- Power switch - Used to turn the radio on/off
- Volume switch – Used to adjust the listening volume
- PTT switch –
- Red L.E.D – Lights in transmission
- Antenna
- Belt Clip - Used to secure the radio to a belt, or another convenient location.
- Battery Compartment - Houses 4 AAA size batteries which provide power to the unit.

(Located on back of unit)

TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)

FAX : 82-2-857-9583

3 . OPERATING INSTRUCTIONS

- . Install 4 new AAA size batteries, The (-) flat bottom of the battery rests on the (-) terminal of the battery compartment, and the (+) top contacts the (+) terminal. Refer to drawing below for proper battery installation.

Note : Always remove batteries if product will not be used for long periods of time.

- . Replace the battery compartment door.
- . Turn the power on rotating the power/volume knob clockwise. the radio will sound a melody tone.
- . To transmit, Hold the radio 2-3 inches from your mouth, Press the Push-To-Talk button on the radio side, and speak clearly into the microphone area of the radio. For best quality, Speak slowly and to a normal tone of voice. There is no need to speak loudly.
- . When your transmission is complete, Release the PTT button and listen for a reply.
- . When not using the radio, Conserve battery power by turning the unit off.

Rotate the Power/Volume knob counter-clockwise to detent.