



Electronics Limited

a member of the **Vitec** group

8015N Alphanumeric FLEX Pager User Manual

Version 0.0

(ENGINEERING DEPARTMENT)

Document No.: C 3G 8015 UM 01 N 0000 001 0

	Name	Signature	Date
Prepared by:			
Approved by			

Uncontrolled () Controlled () Copy No.:

Document History


[illegible]

Table of Contents

1.	OVERVIEW OF 8015N	4
2.	KEYS AND ICONS	5
2.1	Keys Overview	5
2.2	Status Icons	5
3.	OPERATIONS	6
3.1	To Power On the Pager	6
3.2	To Power Off the Pager	6
3.3	Receiving and Reading Messages	7
3.4	Duplicate Message	8
3.5	Erroneous Message	8
3.6	Message Removal	9
3.7	Message Protection	9
3.8	Accessing News Message	10
3.9	Enable/Disable News Alarm	11
3.10	Alert Mode Setting	12
3.11	User Name Entry	12
3.12	Scrolling Rate/Mode Setting	13
3.13	Low Battery Alert	13
3.14	Illumination	13

1. Overview of 8015N

 The dimensions of 8015N pager are 78.8mm(L) x 41.0mm(W) x 16.5mm(H).

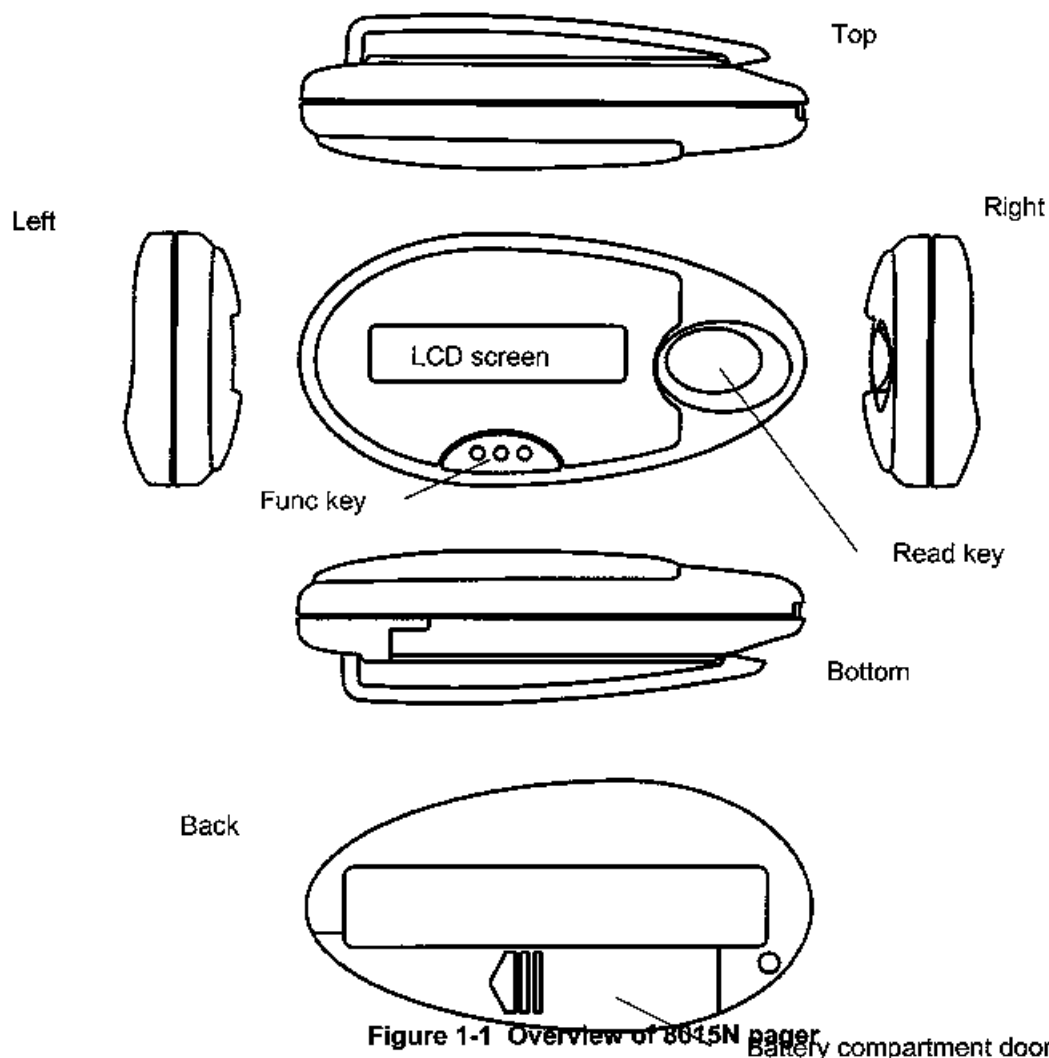

2. Keys and Icons

2.1 Keys Overview

A. Read key - ►

- To read messages
- To confirm pager function setting

B. Function (Func) key - ●

- To activate the back-light by pressing and holding the key for 2 seconds
- To toggle among available options for pager function setting

2.2 Status Icons

	The pager is outside the service area
	Audio alert mode
	Silent alert mode
	Vibration alert mode
	Low battery indicator
	Protected message indicator
	Duplicate message indicator
	Protected duplicate message indicator
	Unread news indicator
	Next page indicator

Figure 2-1 List of Icons

3. Operations

3.1 To Power On the Pager

- Press and hold the Read key (►) for 2 seconds.
- Either an audio beeping tone or pager vibration will be generated as the power on signal.
- Stop the power on signal by pressing any key, the pager will then display the status screen.



Figure 3-1 Status screen

- The pager will then enter the standby mode for power saving with the LCD turned off.
- The status screen can be displayed again by pressing any key.

3.2 To Power Off the Pager

- Press the Func key (●) to evoke the second function menu from the status screen.

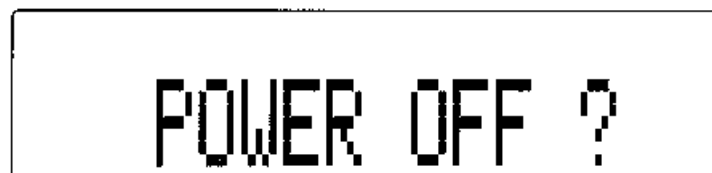 


Figure 3-2 The power off confirmation screen

- Hold the Read key (►) for 2 seconds to turn off the pager.

3.3 Receiving and Reading Messages

- The pager will generate an audio alert, a vibration alert or remain silent when receiving a call.
- The following screen will be displayed simultaneously.



Figure 3-3 The message receiving notification screen

- Press any key to stop the alert.
- Press the Read key (▶) read the latest message.
- Fast message scrolling can be invoked by holding the Read key (▶) for 2 seconds or more (all *unread* messages will be displayed first).
- Press any key to stop message scrolling and press the Read key (▶) again to resume.

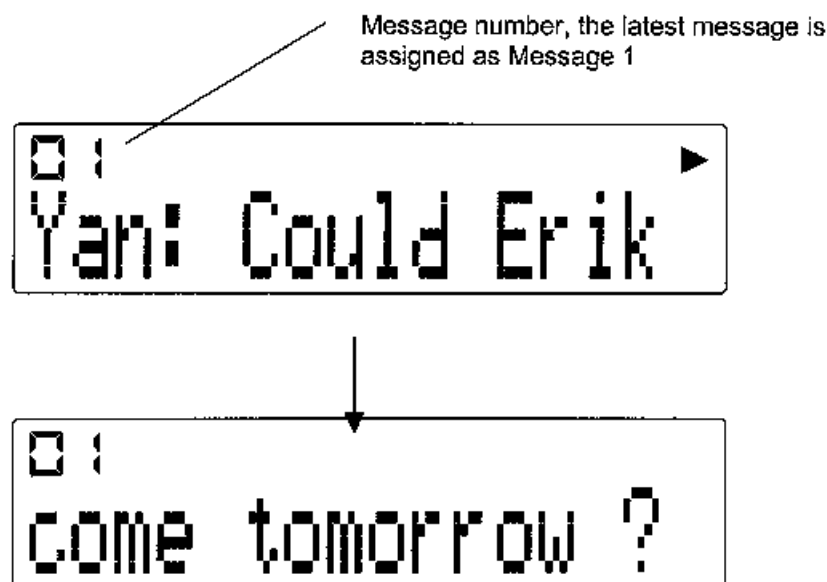 


Figure 3-4 Message scrolling

- A '▶' icon will be displayed at the top right hand corner of the screen if the message is too long to be displayed in one screen.