



WWF ATTITUDE RACING RADIO CONTROLLED CAR

 
For Ages 6 and Up
Asst. No.: 05990

INSTRUCTION SHEET

Before starting, your toy requires (1) 9 volt battery, (3) "AA" batteries and a Phillips screwdriver (not included) for assembly.


How to install the Batteries

Step 1 Remote Control

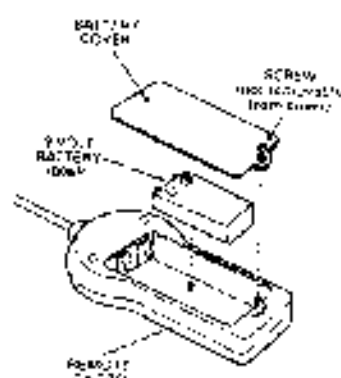

- Unscrew the battery cover on the back of the remote control, using a Phillips screwdriver and remove.
- Insert (1) 9 volt battery into the battery compartment, carefully noting the direction of the (+) and (-) symbols as shown.
- Replace the cover and tighten the screw.

 Step 2 Racer

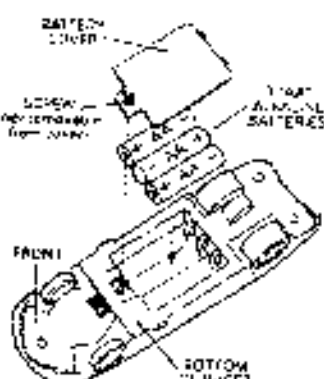


- Take the Racer and turn it upside down.
- Unscrew the battery cover on the bottom of the Racer and remove.
- Insert 3 "AA" size alkaline type batteries into the battery compartment as shown, carefully noting the direction of the (+) and (-) symbol.
- Replace the cover and tighten the screw.

How the Racer works



- Place the Racer on a smooth, hard surface.
- Slide the Switch in the bottom of the Racer to "ON" position. This will turn the Racer's power "ON" and Racer will start spinning around in circles.
- When the Racer faces the direction you want it to go in, switch and hold the steering wheel on the remote.
- The Racer will stop spinning, and go forward in a straight line.
- Release steering wheel and Racer will start spinning again.

 Note: Be sure to turn the Racer "OFF" when not in use.

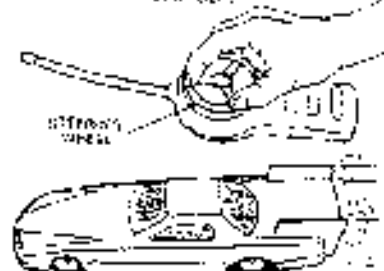

BATTERY SAFETY INFORMATION

CAUTION

- Take care of safety of all the batteries are installed correctly, observing (+) and (-) signs on battery and product.
- Removal and replacement of batteries should be carried out by an adult or under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be recharged from the before recharging.
- Batteries and single use of rechargeable batteries should be stored out by an adult or under adult supervision.
- Avoid short-circuiting the contacts in the battery compartment in the battery assembly.
- Remove or discard batteries from the toy.

- Do not mix old, used and new batteries or types of different types, eg. rechargeable and standard.
- Do not attempt to power battery pack with the introduction of any supply or recharge power supplies and do not attempt to plug any part of the product into the mains supply.
- Dispose of exhausted batteries safely and never dispose of batteries in a fire.
- Remove batteries from product after use and do not store long periods.
- Rechargeable rechargeable product for light or damage to heat or parts and do not store in fire, fire damage has been properly repaired.
- Use the batteries of the battery of your own type to keep your product.
- Please return the product to the manufacturer.

REMOTE CONTROL
DC 3V
1 X 3V
20mA, 200mW

RACER
DC 3V
3 X 1.5V
500mA, 2.25W

©1999 Road Champs Inc.,
a subsidiary of JAKKS Pacific, Inc.,
Malibu, CA 90263.
MADE IN CHINA

WARNING
Changes or modifications to this unit not expressly approved by the party responsible for correct operation could void the warranty and may be dangerous to the user.

THIS TOY HAS BEEN TESTED TO SAFETY STANDARD FOR ELECTRIC TOYS. ENSURE DO NOT USE RECHARGEABLE BATTERIES. Check the battery assembly instructions and follow the correct way to use the battery.