 


OTIC[®] Smart Finder

Works with Apple's Find My & Google's Find Hub

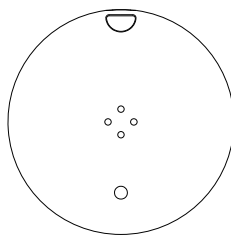

MODEL: BS-6407S



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance, such modifications could void the user's authority to operate the equipment.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

Safety Instructions

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) The compatible battery type is CR2032 3V.
- e) Non-rechargeable batteries are not to be recharged.
- f) Do not force discharge, recharge, disassemble, heat above 50°C/122° or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- g) Ensure the batteries are installed correctly according to polarity (+ and -).
- h) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- j) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



NO OBVIOUS SYMPTOMS: Unfortunately it is not obvious when a button or coin battery is stuck in a child's oesophagus(food pipe). There are no specific symptoms associated with this. The child might:

1. Appear to have an upset stomach or virus;
2. Cough, gag or drool a lot;
3. Be sick;
4. Point to their abdomen or throat;
5. Be tired or lethargic;
6. Be quieter or more clingy than usual or otherwise "not themselves";
7. Lose their appetite or have reduced appetite; and
8. Not want to eat solid food/ be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding. Another possible symptom of button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help. The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

1 Welcome

Thank you for choosing this product. We believe great products should be innovative, attractive, and affordable.

Our products have been carefully designed to be great at what they do and work straight out of the box – and this one is no exception.

Please read this manual carefully before using this product for your own safety.

 
2 Smart Finder

2.1 In the box

Carefully remove the unit from the packaging. Inside the box you will find:

- Smart Finder including CR2032 coin battery
- Keyring
- User manual

2.2 Front and back view

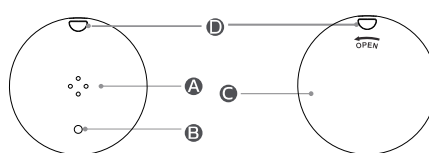

- Ⓐ Speaker
- Ⓑ Power On/Off and Function button
- Ⓒ Battery compartment
- Ⓓ Key hole

3 Quick Setup

 
3.1 Remove the battery film

There has a film to isolate the battery during shipping, this film must be removed before use.

1. Place the unit on your palm near the thumb position, with "OPEN" side up.




2. Use your right hand to press the unit and rotate it in the arrow direction.



3. When the battery cover cannot move anymore, it means the cover is open.
4. Take out the battery and remove the battery film.
5. Put the battery back, with positive '+' side up, cover up the battery compartment.

 Note: If the unit is not binding to your ID, you will hear a sound indicating the unit is switched on.



6. Use your right hand to press the unit and rotate it in the arrow direction, make sure the key holes are aligned and overlapped.

Note: Please make sure the key holes are aligned and overlapped. Otherwise, when the unit falls to the ground, it may affect the usage of the unit.



3.2 Power On/Off

1. Short press the Function button to Power On. Audible beeps will sound.
2. Short press the Function button twice quickly, then long press for about 3 seconds for the third time to Power Off. An audible double beep will sound.

Note: To check whether the unit is currently switched on, double-press the Power button: if it is switched on, you will hear a single beep. If the unit was switched off, you will hear a long beep and the unit is then switched on.

3.3 Apple Find My app

Before you put this unit in your wallet or attach to other important items with keyring (not included), let's get it connected to the Apple Find My app. And what you need to do on your phone is as follow:

- Turn on Bluetooth function.
- Wi-Fi and mobile network connection must be in good condition.
- Turn on 'Location Services' :
Open 'Settings' > 'Privacy & Security' > 'Location Services' > 'Find My' (To see the most accurate location for the unit, turn on 'Precise Location' for Find My app.)

Note:

1. It is better to update your Apple devices to the latest version of iOS.
2. Allow notifications from the App.

3.4 Google Find Hub App

1. Download and install 'Find Hub' App  from 'Google Play Store'.
Note: If your phone already includes the app (Find Hub), proceed to the next step.
2. Turn on Bluetooth function of your phone.
3. Connect your phone to the Internet and keep the network signal strong.
4. Allow 'Find Hub' to access the location of your phone.

Note: One unit can only be connected to one smart phone.

3.5 Apple Quick Setup

Scan the QR code with the Camera App on your device to directly search for the unit.



 
3.6 Connect the unit

Apple


1. Power on the unit.
2. Within the Find My App, select the 'Items' tab and tap 'Add item', followed by 'Other Supported item'.
3. Once the name 'Otic Smart Finder 6407S' has been found, tap 'Connect'.
4. Choose and enter a recognizable name and emoji for the unit, these will appear on the Map on your Apple device. Tap 'Continue'.
5. You will be asked to confirm the unit link to your Apple ID with supporting information about this unit. Tap 'Agree' and you will hear a beep.
6. A map will appear displaying the chosen emoji for the unit. Tap 'Finish'.
7. The unit is now set up and ready to be attached to whatever item you wish to locate, e.g. your house or car keys.

Google

1. Turn on the Bluetooth function of your phone and make sure the network is in good condition.
2. Open the Google 'Find Hub' app on your phone and log in your Google account. (If you do not have an account, please register one.)
3. Press the Function button on the unit to power on.
4. A connection window will automatically pop up on your phone, select to connect the unit and you will hear a beep.

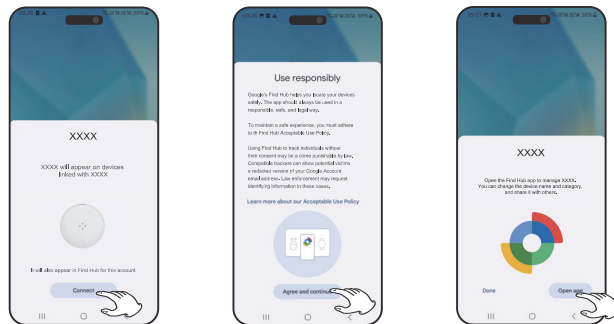

 5. After connection, you can tap on the icon  and change the device name and category in Device details.

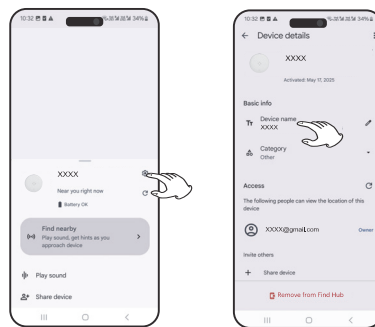


6. The unit is now set up and ready to be attached to whatever item you wish to locate, e.g. your bag or purse.

Note: The unit will automatically power off after 10 minutes if no connection is established upon startup.

3.7 Share the unit with your family and friend (Google)

You can share the unit with your friend that they can help to locate the unit when it is lost.

 1. Open the 'Find Hub' app on your phone and select the unit.
2. Select 'Share device' and send your family or friend a sharing link through messaging app, they can add the unit to their 'Find Hub' app.

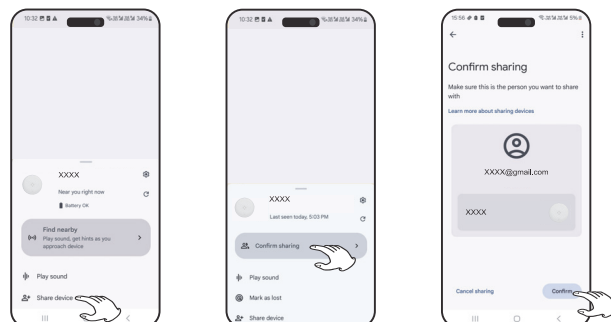

3.8 Find the unit when it is Nearby

Apple

1. Open the Find My app on your Apple device and select the 'Items' tab.
2. Tap on the unit from the list shown and tap 'Play Sound'.
3. The unit will beep.
4. Tap on 'Stop Sound' to stop the unit to beep.

Google

1. Open the 'Find Hub' app on your phone and select the unit.
2. Select 'Find nearby' then 'play sound' to get hints as you approach device.



3. Stop playing sound when you found the unit.

3.9 Find the unit's Last Known Location (Apple)

1. Open the Find My app on your Apple device and select the 'Items' tab.
2. Tap on the unit from the list shown.
3. The unit's last known location will be shown on the map using the emoji you chose during the connection set up.
4. To navigate to the unit's last known location, tap 'Directions' to open the Maps app and tap 'Go'.
5. Tap 'End Route' when you have located the unit.

3.10 Notify When Left Behind (Apple)

1. Open the Find My app on your Apple device and select the 'Items' tab.
2. Tap on the unit from the list shown.
3. Pull up the App options and enable 'Notify When Left Behind' and tap 'Done'.
4. You will receive a notification on your Apple device when you leave the unit behind and it's no longer in range.

3.11 Notify when the unit has been found in Lost Mode (Apple)

1. Open the Find My app on your Apple device and select the 'Items' tab.
2. Tap on the unit from the list shown.
3. Pull up the App options and under 'Lost Mode' tap on 'Enable'.
4. Information about Lost Mode will be displayed, tap on 'Continue'.
5. Enter a contact phone number or email address and tap 'Next'.
6. Tap 'Activate' to enable Lost Mode and Notify When Found.

Note: When 'Lost Mode' is enabled and 'Notify When Found' is switched on, the unit will be locked and unable to pair to a new Apple device. Operations may vary depending on the mobile version. Please refer to the actual version for details.

 
3.12 Find the unit when it is lost (Google)

When the unit is lost:

1. Open the 'Find Hub' app on your phone and select the unit.
2. Select 'Mark as lost' and leave your contact information.

Note: If someone finds the unit, they will receive a notification on their phone. They can learn about the contact information you left and contact with you to return the unit to you.

3. The last location of the unit will be shown on the map. You can select 'Get directions' to navigate and look for it.

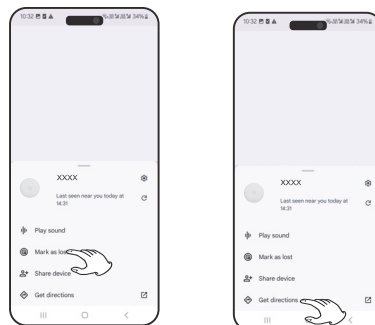

4. When you arrive at the last location of the unit, your phone will receive a notification that indicates you have been to the location. You can choose 'End Route' and 'play sound' to get some hints for finding.
5. Once the unit has been found, you can mark it as found.

 
 
3.13 Remove the unit from Device

Apple

1. Open the Find My app on your Apple device and select the 'Items' tab.
2. Tap on the unit from the list shown.
3. Pull up the App options and scroll to the bottom screen, tap on 'Remove Item'.
4. A 'Remove Item?' check screen will appear, tap on 'Remove'. Tap 'Remove' again.
5. The unit will be unlinked from your Apple ID and it will automatically turn off, you need to power it on before connecting it to other Apple ID.

Google

1. Open the 'Find Hub' app on your phone and select the unit.
2. Select the icon  to enter Device Details.

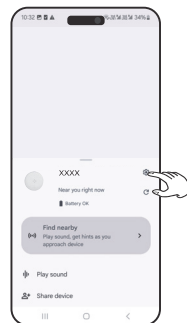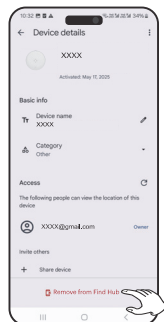

3. Select 'Remove from Find Hub' to remove the unit from Find Hub app.
4. When the unit is removed successfully, it will automatically turn off. You need to power it on before connecting it to other Google ID.

3.14 Reset the unit

After you have successfully removed the unit from the Find My app or Find Hub app, you can reset it, so that it is ready to be paired to a new device.

 
Short press the unit function button 4 times very quickly, then press and hold the function button on the 5th press until you hear an audible chime. The unit has now been reset.

3.15 Unwanted Tracking Detection (Apple)

If your Apple device detects that an unknown Finder, that has not been linked to your Apple ID is travelling with you, it will send you a notification. A sound will start playing so that you will be able to find it. These alerts are only activated when a Finder is not connected to its owner's Apple device, so your partner's Finder will not trigger a sound if they are with you.

3.16 Replace the battery

1. Place the unit on your palm near the thumb position, with "OPEN" side up.

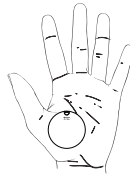


2. Use your right hand to press the unit and rotate it in the arrow direction.



3. When the battery cover cannot move anymore, it means the cover is open.
4. Remove the old battery and put a new CR2032 battery with positive '+' side up.

 Note: If the unit is not binding to your ID, you will hear a sound indicating the unit is switched on.



5. Cover up the battery compartment, use your right hand to press the unit and rotate it in the arrow direction until the key holes are aligned and overlapped.



4 Maintenance

4.1 Cleaning

Wipe the unit with a soft, damp cloth and allow to dry thoroughly.
Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the unit.
Do not immerse the unit in water or any other liquid.

5 Troubleshooting

Problem	Possible Cause	Solution
Play a Sound does not work within the app.	The battery is low. Or the unit is out of Bluetooth range.	Replace the CR2032 battery. Or get directions to the unit via the app and then tap Play Sound again.
The unit does not turn on.	Delay to power on.	Short press the function button, then wait, audible beeps will sound.
	The battery is low.	Replace the CR2032 battery.
The Find Nearby option is not available within the app.	Location Access is not turned on.	Turn on Location Services within the app. Settings > Privacy & Security > Location Services
Cannot connect to the unit.	The unit is powered off.	Short press the function button, audible beeps will sound.
	The unit's battery is low.	Replace the CR2032 battery.
	The version of the app is low.	Update the Apple Find My app.
		Reset the unit or reboot your phone.

6 Technical Specification

Battery	CR2032 (included)
IP rating	IPX4 Dustproof Waterproof

7 Customer Support

If any defect should occur due to faulty materials or workmanship, please return the goods, along with your receipt to the store you purchased the item from.

8 Declaration

Find Hub helps you find and connect to what matters in a single, secure place. Find your belongings quickly and safely – even if your devices are offline. Plus, seamlessly and securely share your location with friends & family for peace of mind.

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android™ 9 and above on select devices [devices or phones] and in certain countries for age-eligible users.

To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android is a trademark of Google LLC.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

MADE IN CHINA



Get 24/7 Assistance at



Use camera or QR scanner to scan

Visit: <https://otic.afterservice.vip>
Call: +1 (833) 970 1885 (Toll-free)
Email: otic@afterservice.vip

Shenzhen Junlan Electronic Ltd.
Add: No. 277 PingKui Road, Pingshan District,
Shenzhen, CHINA After Service:
<https://otic.afterservice.vip>
Tel: +1 (833) 970 1885
Email: otic@afterservice.vip

