

尺寸：280*200mm
折叠后：70*50mm



OTIC®

Luggage Belt

Works with Apple's Find My & Google's Find Hub

Model: BS-9828S



 
⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.




ACTIVATE/REPLACE THE BATTERY

Activating the battery

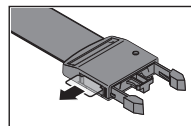


Remove the insulating strip to activate the battery. Pull it out of the battery compartment in a straight line, but do not pull on it too hard.

 
Replacing the battery

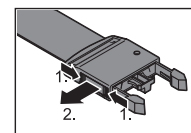

 1. Respectively press the two small levers in and pull out the battery holder.

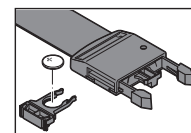

 2. Replace the flat battery with a new one, ensuring that the polarity is correct (+/-). The positive pole (+) must be facing upwards.

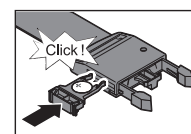

3. Push the battery holder completely into the mount in the buckle. You should feel and hear it click into place.

FIND MY SETUP (Apple device)

BEFORE CONNECTION

 
Before you connect the belt to the Apple Find My app, you should:

1. Turn on Bluetooth function on your Apple device.
2. Connect Wi-Fi or mobile network and ensure it is in good condition.
3. Open **Settings App > Privacy & Security > Location Services > Find My > Precise Location**
4. It is better to update your Apple device to the latest iOS version.

Note: The unit can only be connected to one Apple account at a time.

CONNECTION

1. Press **Find My button** to activate Find My function, it will emit a series of sound.
2. Open the Find My app on your phone.
3. Tap **"Items"** - **"Add Items"** - **"Other Supported Item"**.
4. Select **"OTIC Luggage Belt 9828S"** when it appears.

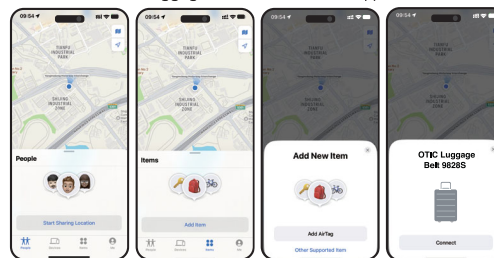

5. Follow the prompts to name and connect the unit.
6. You can now track the unit's location in real time.

SAFETY INSTRUCTIONS

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. The compatible battery type is CR2032 3V.
5. Non-rechargeable batteries are not to be recharged.
6. Do not force discharge, recharge, disassemble, heat above 50°C/122° or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
7. Ensure the batteries are installed correctly according to polarity (+ and -).
8. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
9. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
10. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

 
SAFETY INSTRUCTIONS

NO OBVIOUS SYMPTOMS: Unfortunately it is not obvious when a button or coin battery is stuck in a child's esophagus(food pipe). There are no specific symptoms associated with this. The child might:

1. Appear to have an upset stomach or virus;
2. Cough, gag or drool a lot;
3. Be sick;
4. Point to their abdomen or throat;
5. Be tired or lethargic;
6. Be quieter or more clingy than usual or otherwise "not themselves";
7. Lose their appetite or have reduced appetite; and
8. Not want to eat solid food/ be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding. Another possible symptom of button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help. The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

PRODUCT OVERVIEW

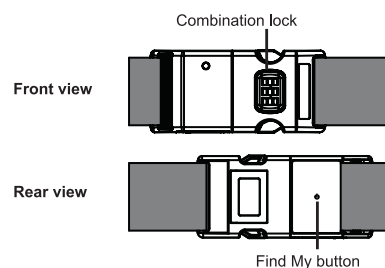

Find My button

Function	Operation
Turn on	press once
Turn off	press twice quickly, then press and hold the third time for about 3 seconds.
Check power status	double press to check whether the device is turned on: if it is turned on, you will hear a single beep. If it is turned off, you will hear a long beep and then it is turned on.
Reset	press four times in quick succession, then press and hold the fifth time until you hear a sequence of beep, now the device is reset and ready for a new connection.

Note: This luggage belt can be connected to your Apple device or Android device.

 
CONNECTION (CONT.)

Use camera on Apple device to scan the QR code for quick connection.



FIND THE ITEM


1. When the belt is lost nearby: Open "Find My" app, tap on **"Play Sound"** to get some sound hints to find the belt.
2. When the belt is lost in other places: Open "Find My" app, tap on **"Directions"** to get the route of the belt. When you get close to the belt, tap on **"Play Sound"** to find it.

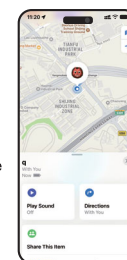

REMOVE AND RESET

If you want to connect the luggage belt to another Apple device, you should first remove it from the current account.

 1. **Remove the Item:** Open "Find My" app, tap the item and pull up the screen to bottom, select **"Remove Item"** tab to remove item and it will turn off.
2. **Reset the Item:** When the luggage belt cannot be detected by a new account, press the **Find My button** on the belt four times in quick succession, then press and hold the fifth time until you hear a sequence of beep. Now the device is reset and ready for a new connection.

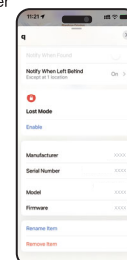


FIND HUB SETUP (Android device)

BEFORE SETUP

1. Download and install **"Find Hub"** App from **Google Play Store**.
 2. Turn on Bluetooth function of your phone.
 3. Connect your phone to the Internet and keep the network signal strong.
 4. Allow **"Find Hub"** app to access the location of your phone.
 5. It is better to update your phone system to the latest version.
- Note:** The unit can only be connected to one Google account at a time.

CONNECTION

 1. Open the Google **"Find Hub"** app on your phone and log in your **Google account**. (If you do not have an account, please register one.)

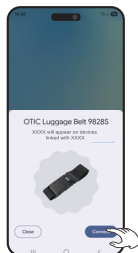


2. Press the **Find My** button on the belt to power on.
3. A connection window will automatically pop up on your phone, tap **"Connect"**.

4. The luggage belt is now set up and you can observe the trajectory of the belt in real time.

Note: The luggage belt will automatically power off after 10 minutes if no connection is established upon startup.

FIND THE ITEM

 
1. When the unit is lost nearby:
 - Open the **Find Hub** app and select the unit.
 - Tap on **Find nearby** and **Play sound** tab to get hints as you approach device.
2. When the unit is lost in other places:
 - Open the **Find Hub** app on your phone and select the unit.
 - The last location of the unit will be shown on the map. You can tap on **Get directions** tab to navigate.
 - When you arrive at the last location of the unit, your phone will receive a notification that indicates you have been to the location.
 - Tap on **End Route** and **Play sound** tab to get some hints to find it.

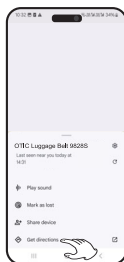

REMOVE AND RESET

If you want to connect the unit to another device, you should first remove it from the current account.

 
1. **Remove the Item:**
Open "Find Hub" app, tap the item and tap the icon , select **"Remove Item"** tab to remove item and it will turn off.
2. **Reset the Item:**
When the luggage belt cannot be detected by a new account, press the **Find My** button four times in quick succession, then press and hold the fifth time. Now the device is reset and ready for a new connection.

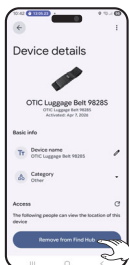


BINDING METHOD OF CROSS LUGGAGE BELT



 
1. Positioning: Place your luggage belt horizontally over the top of your suitcase ensuring that the lock body is facing upwards.

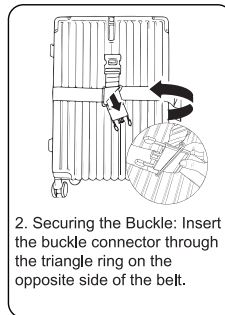

 2. Securing the Buckle: Insert the buckle connector through the triangle ring on the opposite side of the belt.

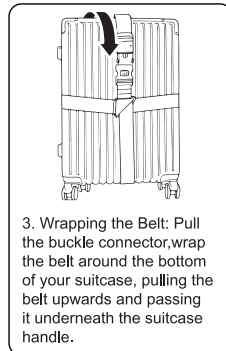


 3. Wrapping the Belt: Pull the buckle connector, wrap the belt around the bottom of your suitcase, pulling the belt upwards and passing it underneath the suitcase handle.

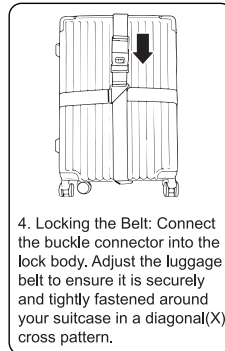


4. Locking the Belt: Connect the buckle connector into the lock body. Adjust the luggage belt to ensure it is securely and tightly fastened around your suitcase in a diagonal(X) cross pattern.

 
PASSWORD SETTING

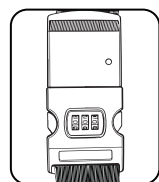

 1. The combination of the lock is factory set to 000. The three digits must exactly be centered in a line in the windows.

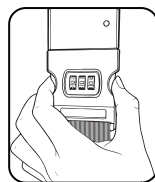

 2. Press the tabs on either side of the locking clip and hold them down.

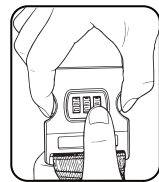

3. Set the desired number combination then release the tabs.



4. After successful setup, scramble two or three digits to lock the buckle to avoid others to open. The three digits must exactly be centered in a line in the windows.

TROUBLESHOOTING

Find My function		
Problems	Possible Causes	Solutions
The Find my function of the belt cannot be activated.	/	Press the Find My button to switch on and wait for the confirmation beep.
	The battery is flat.	Replace the battery if necessary.
The app cannot request a signal beep from the belt.	The belt is out of Bluetooth range.	Search for the route of the belt in the app.
	The battery is flat.	Replace the battery if necessary.
The location of the belt cannot be found in the app.	Location Access is not turned on.	Turn on Location Services : in the Settings app (Settings > Privacy & Security > Location Services)
The belt cannot be connected to your device.	The Find my function is turned off.	Press the Find My button to switch on.
	The belt's battery is low.	Replace the CR2032 battery.
	/	Reset the belt or reboot your phone.

Combination lock buckle		
Problems	Possible Causes	Solutions
The buckle cannot be opened with the set password.	The buckle is closed by force when the digits are scrambled.	Try each combination one by one.

SPECIFICATION

Single-use battery: 1 x 3V  CR2032
Bluetooth version: 5.2
IP code: IPX4 waterproof

Support@otic.shop

Shenzhen Junlan Electronic Ltd.

Add: No. 71 Lijing South Road, Pingshan District, Shenzhen, CHINA



MADE IN CHINA

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Find Hub helps you find and connect to what matters in a single, secure place. Find your belongings quickly and safely – even if your devices are offline. Plus, seamlessly and securely share your location with friends & family for peace of mind.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android™ 9 and above on select devices [devices or phones] and in certain countries for age-eligible users.

This device can work with either the Apple Find My network or Find Hub, but these two services cannot operate simultaneously. Activating one will automatically disable the other.

Android is a trademark of Google LLC.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.