

INSTRUCTIONS

FULL FUNCTION RADIO CONTROLLED STUNT VEHICLE STORM HOPPER


MODEL NO: 3003
27.145 MHz

- Ages : For 8 and up
- Make sure to read the instructions carefully in the seal before beginning to play
- Adult guidance is strongly recommended

FEATURES


TRANSMITTER

- * Full function:
Forward, Backward, Left Turn, Right Turn, Stop
- * Frequency: 27.145 MHz
- * Battery: 1 x 006P (9 volt)

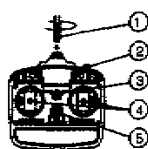


TRANSMITTER

1. Telescopic Antenna
2. Jumping button
3. Indicator Lamp
4. Control Levers

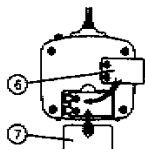

5. On / Off switch
6. 9 V (006P) Battery
7. Battery Case Cover

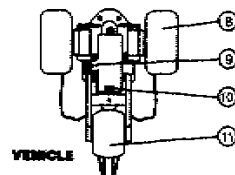

VEHICLE


8. Front Wheel
9. DC 7.2V Recharging Socket
10. On / Off switch
11. Rear Wheel

BATTERY RECHARGING

1. Plug charger into household outlet.
2. Then plug the output plug of the charger into the socket on vehicle.
3. Appropriate recharging time is 6 to 8 hours.

CAUTION

Do not charge in excess of one day. Charging 6 to 8 hours will bring your batteries to full capacity. Additional charging will not improve the output of the batteries.

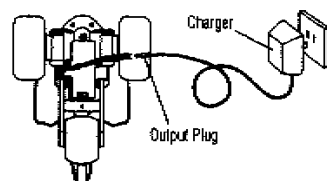

SAFETY RULES

- *Not suitable for children under 8 years.
- *Keep fingers, hair and loose clothing away from the tires and the wheels while the vehicle is switched "ON".
- *Don't pick up vehicle while in motion.
- *Don't put your vehicle and transmitter near any sources of heat.
- *Don't operate your vehicle in dangerous place.
- *Don't let the vehicle get wet. Don't run through water.
- *Avoid driving on sand.
- *Avoid all possible collisions, check the road ahead and watch for obstacles.
- *Children should not disassemble this vehicle.
- *If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used by children until checked by adults that no sharp edges are exposed.
- *Be sure to keep the vehicle switch "OFF" when not in use.



OPERATION

1. Extend the transmitter antenna to its full length.
2. Turn "on" the vehicle and transmitter.
3. Drive the car by operating the sticks of the transmitter.

① DRIVING AT HIGH SPEED



② DRIVING AT HIGH SPEED



③ STRONGLY SPINNING



④ FORWARD MOVING IN SMALL CIRCULAR PATH



⑤ REVERSE MOVING IN SMALL CIRCULAR PATH



 
⑥ JUMPING



forward for 8~15m, then



press



⑦ GETTING UP WHEN TURNED OVER



after few seconds



NOTE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.