


DTAC55005

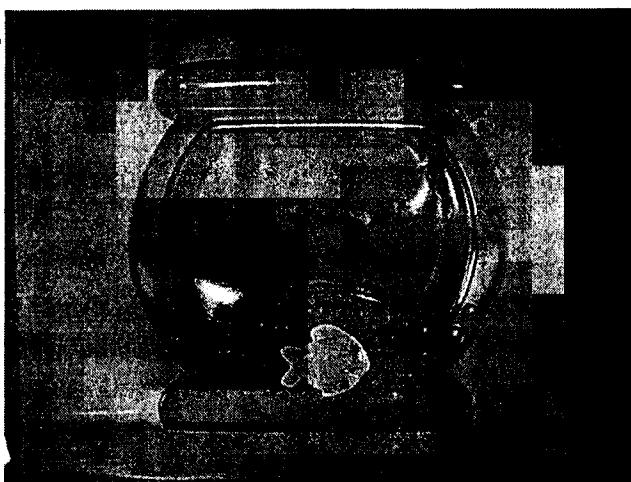

Soft Senses Funtime Fishbowl

Time for Learning Fun with Soft Sea Creatures



- To start activation, first slide the switch from TRY ME to NORMAL.
- (SHOW) This turns off the in-package mode and turns on the normal play mode.
- Push the big green fish button to start the fishbowl fun (SHOW).
- Each sea creature activates certain phrases when placed through the rim of the bowl, teaching colors, patterns and other interesting "creative trivia".
- This fishbowl even asks questions when there is a pause in play, prompting your child to find the animal the bowl asks for.
- Featuring an automatic turn off, activation begins again each time the green fish button is pushed.

NOTE: If the fishbowl doesn't make sound when the green fish button is pushed, it's probably time to replace the batteries !

CARE: To clean, wipe the surface of this toy with a damp cloth.

Do not immerse this toy. Each soft creature is also surface washable.




Soft Senses Funtime Fishbowl

- Please keep these instructions for future reference.
- Requires 3 "AA" batteries for operation (batteries included).
- Batteries must be installed by an adult.
- Tool needed for battery installation: Phillips screwdriver (not included).

BATTERY INSTALLATION

- Locate the battery compartment cover on the underside of the base.
- Loosen the screw in the battery compartment cover with a Phillips screwdriver and lift to remove the cover.
- Insert 3 "AA" alkaline batteries as indicated inside the battery compartment.
- Fit the tab on the battery compartment cover into the slot in the base and close the cover.
- Tighten the screw with a Phillips screwdriver. Do not overtighten.

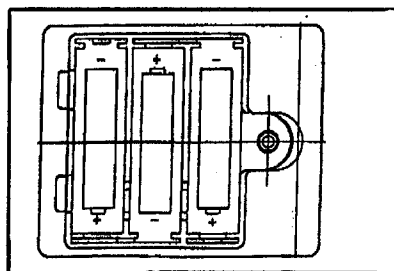

BATTERY TIPS

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-Zinc) or rechargeable (nickle-Cadmium).
- Remove the batteries during long periods of non-use.
- Always remove exhausted batteries from the toy. Battery leakage and corrosion can cause damage. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Insert batteries as marked and always follow the toy and battery manufacturers instructions.
- Use only the same or equivalent type of battery as recommended.
- Do not dispose of batteries in fire, batteries may explode or leak.



Soft Senses

Funtime Fishbowl

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.