




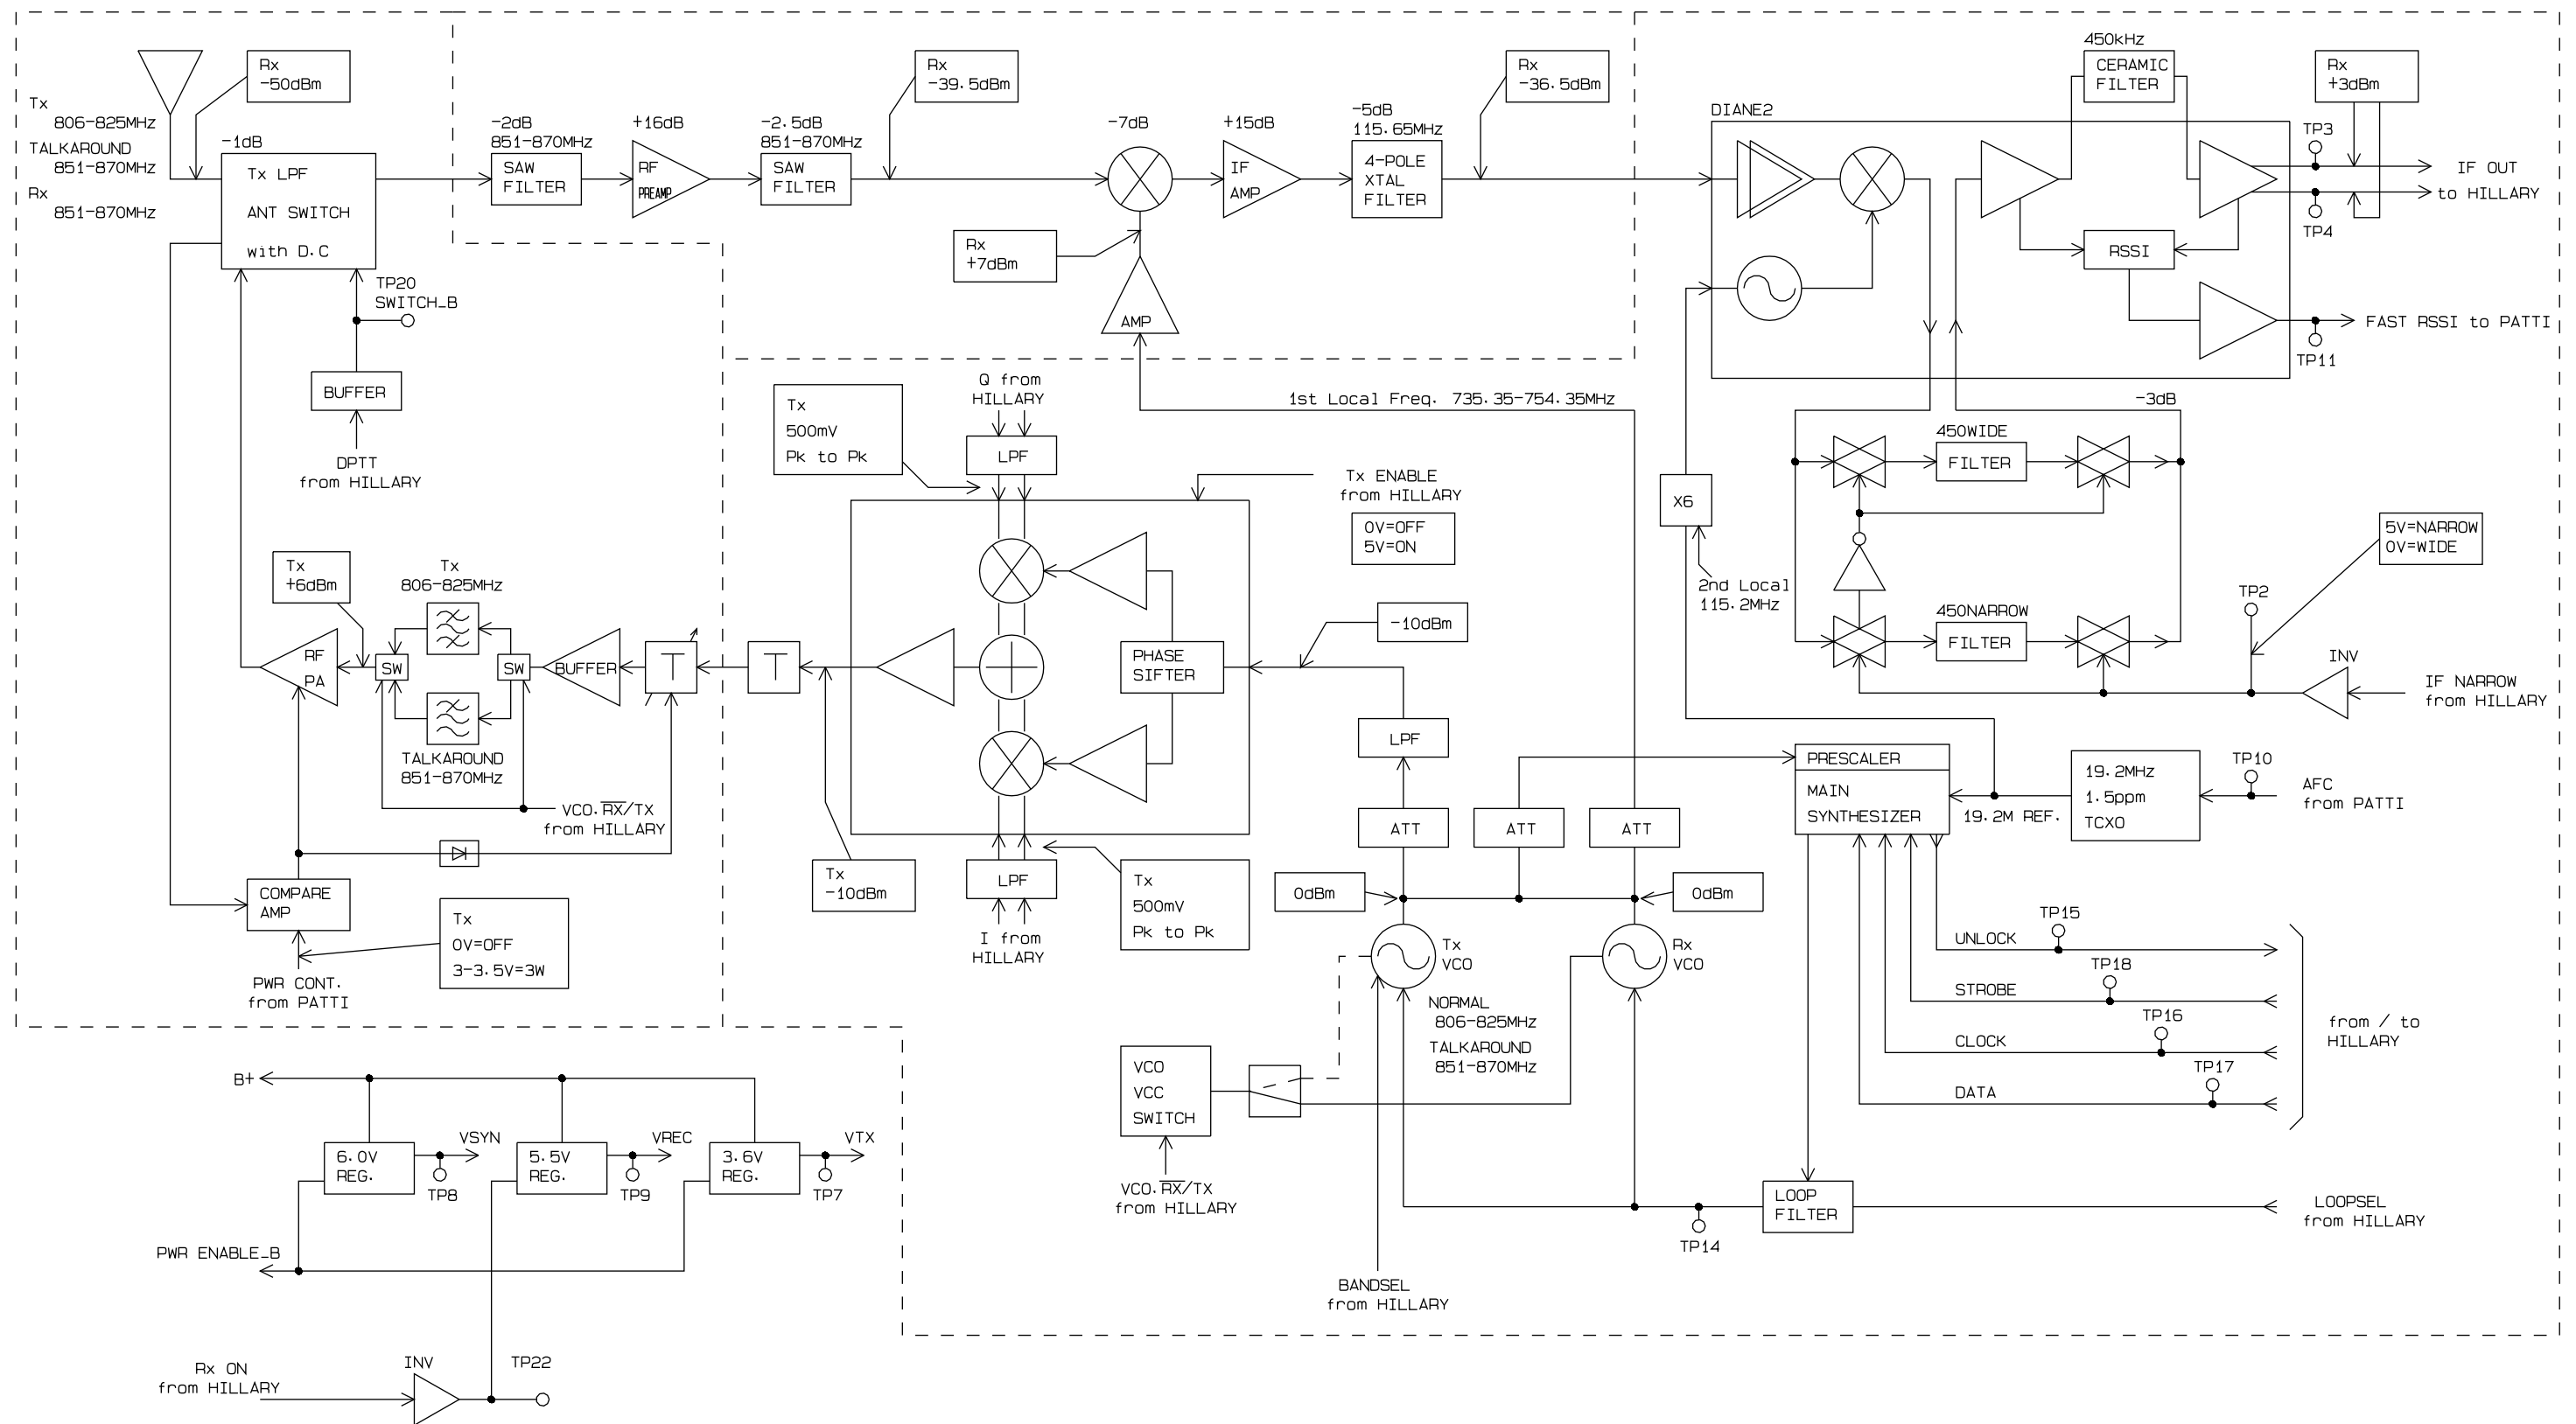


Jaguar 700P 800M Transceiver Block Diagram

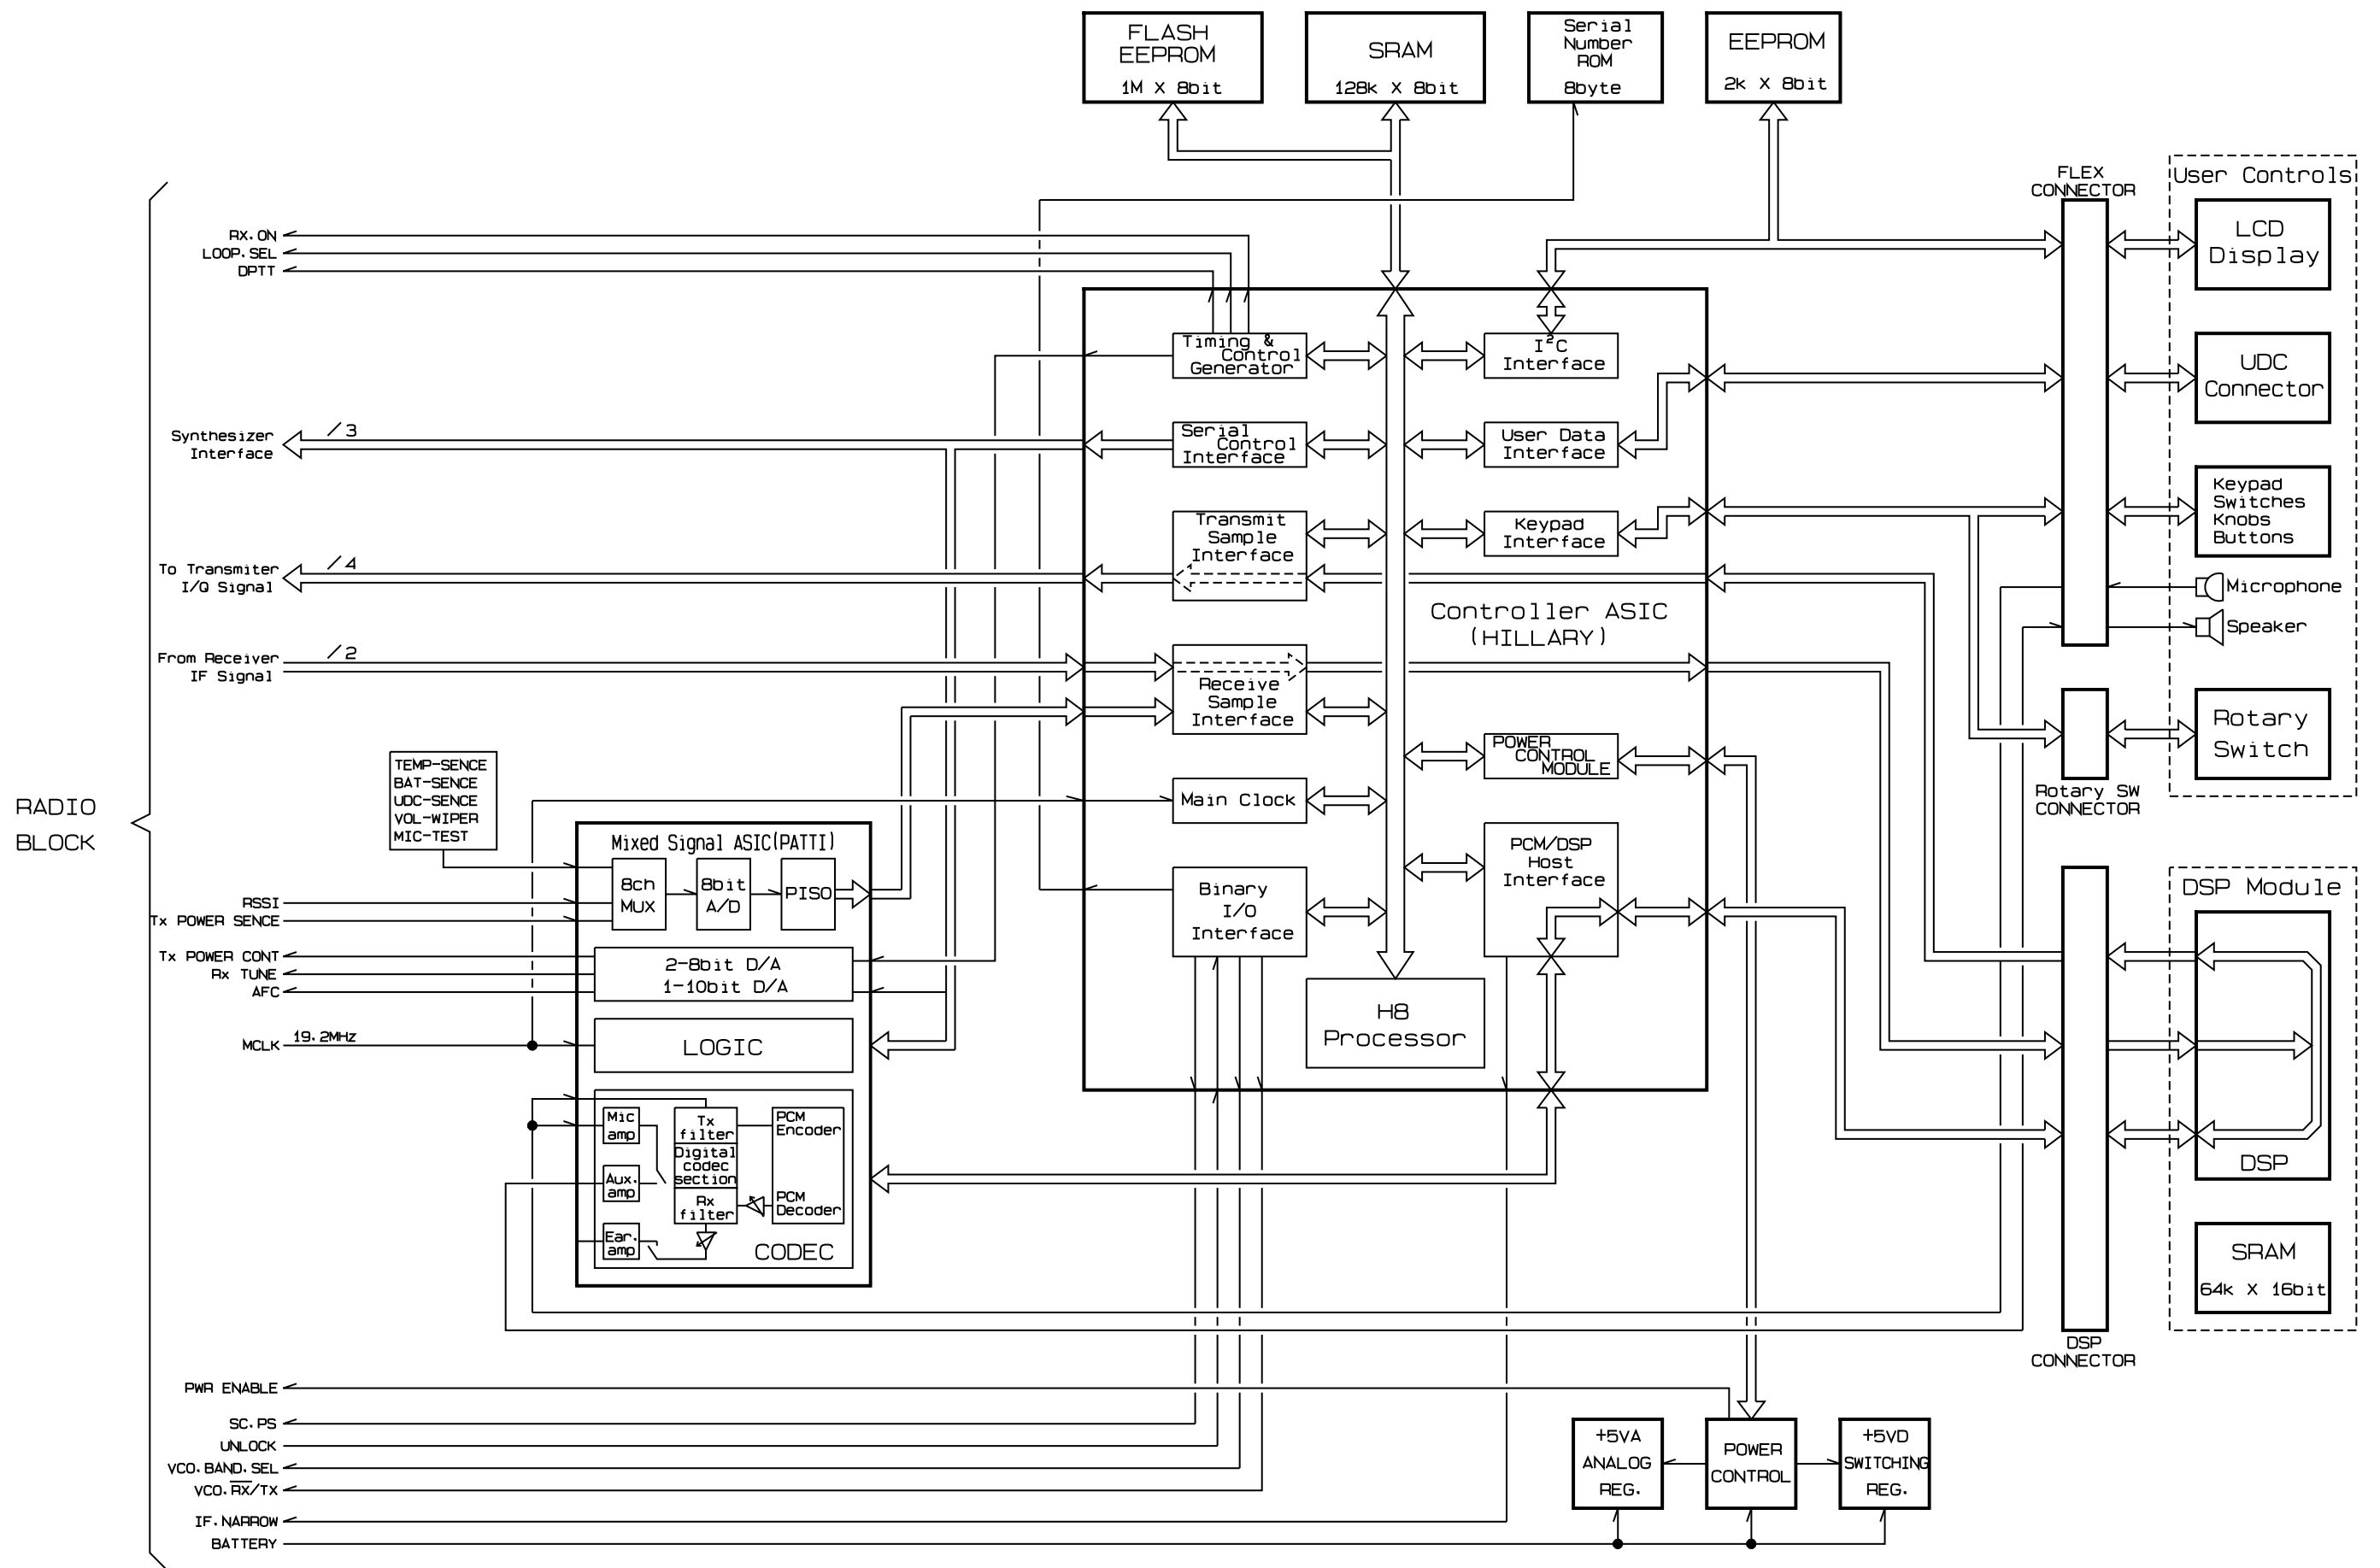

Jaguar 700P Logic Block Diagram

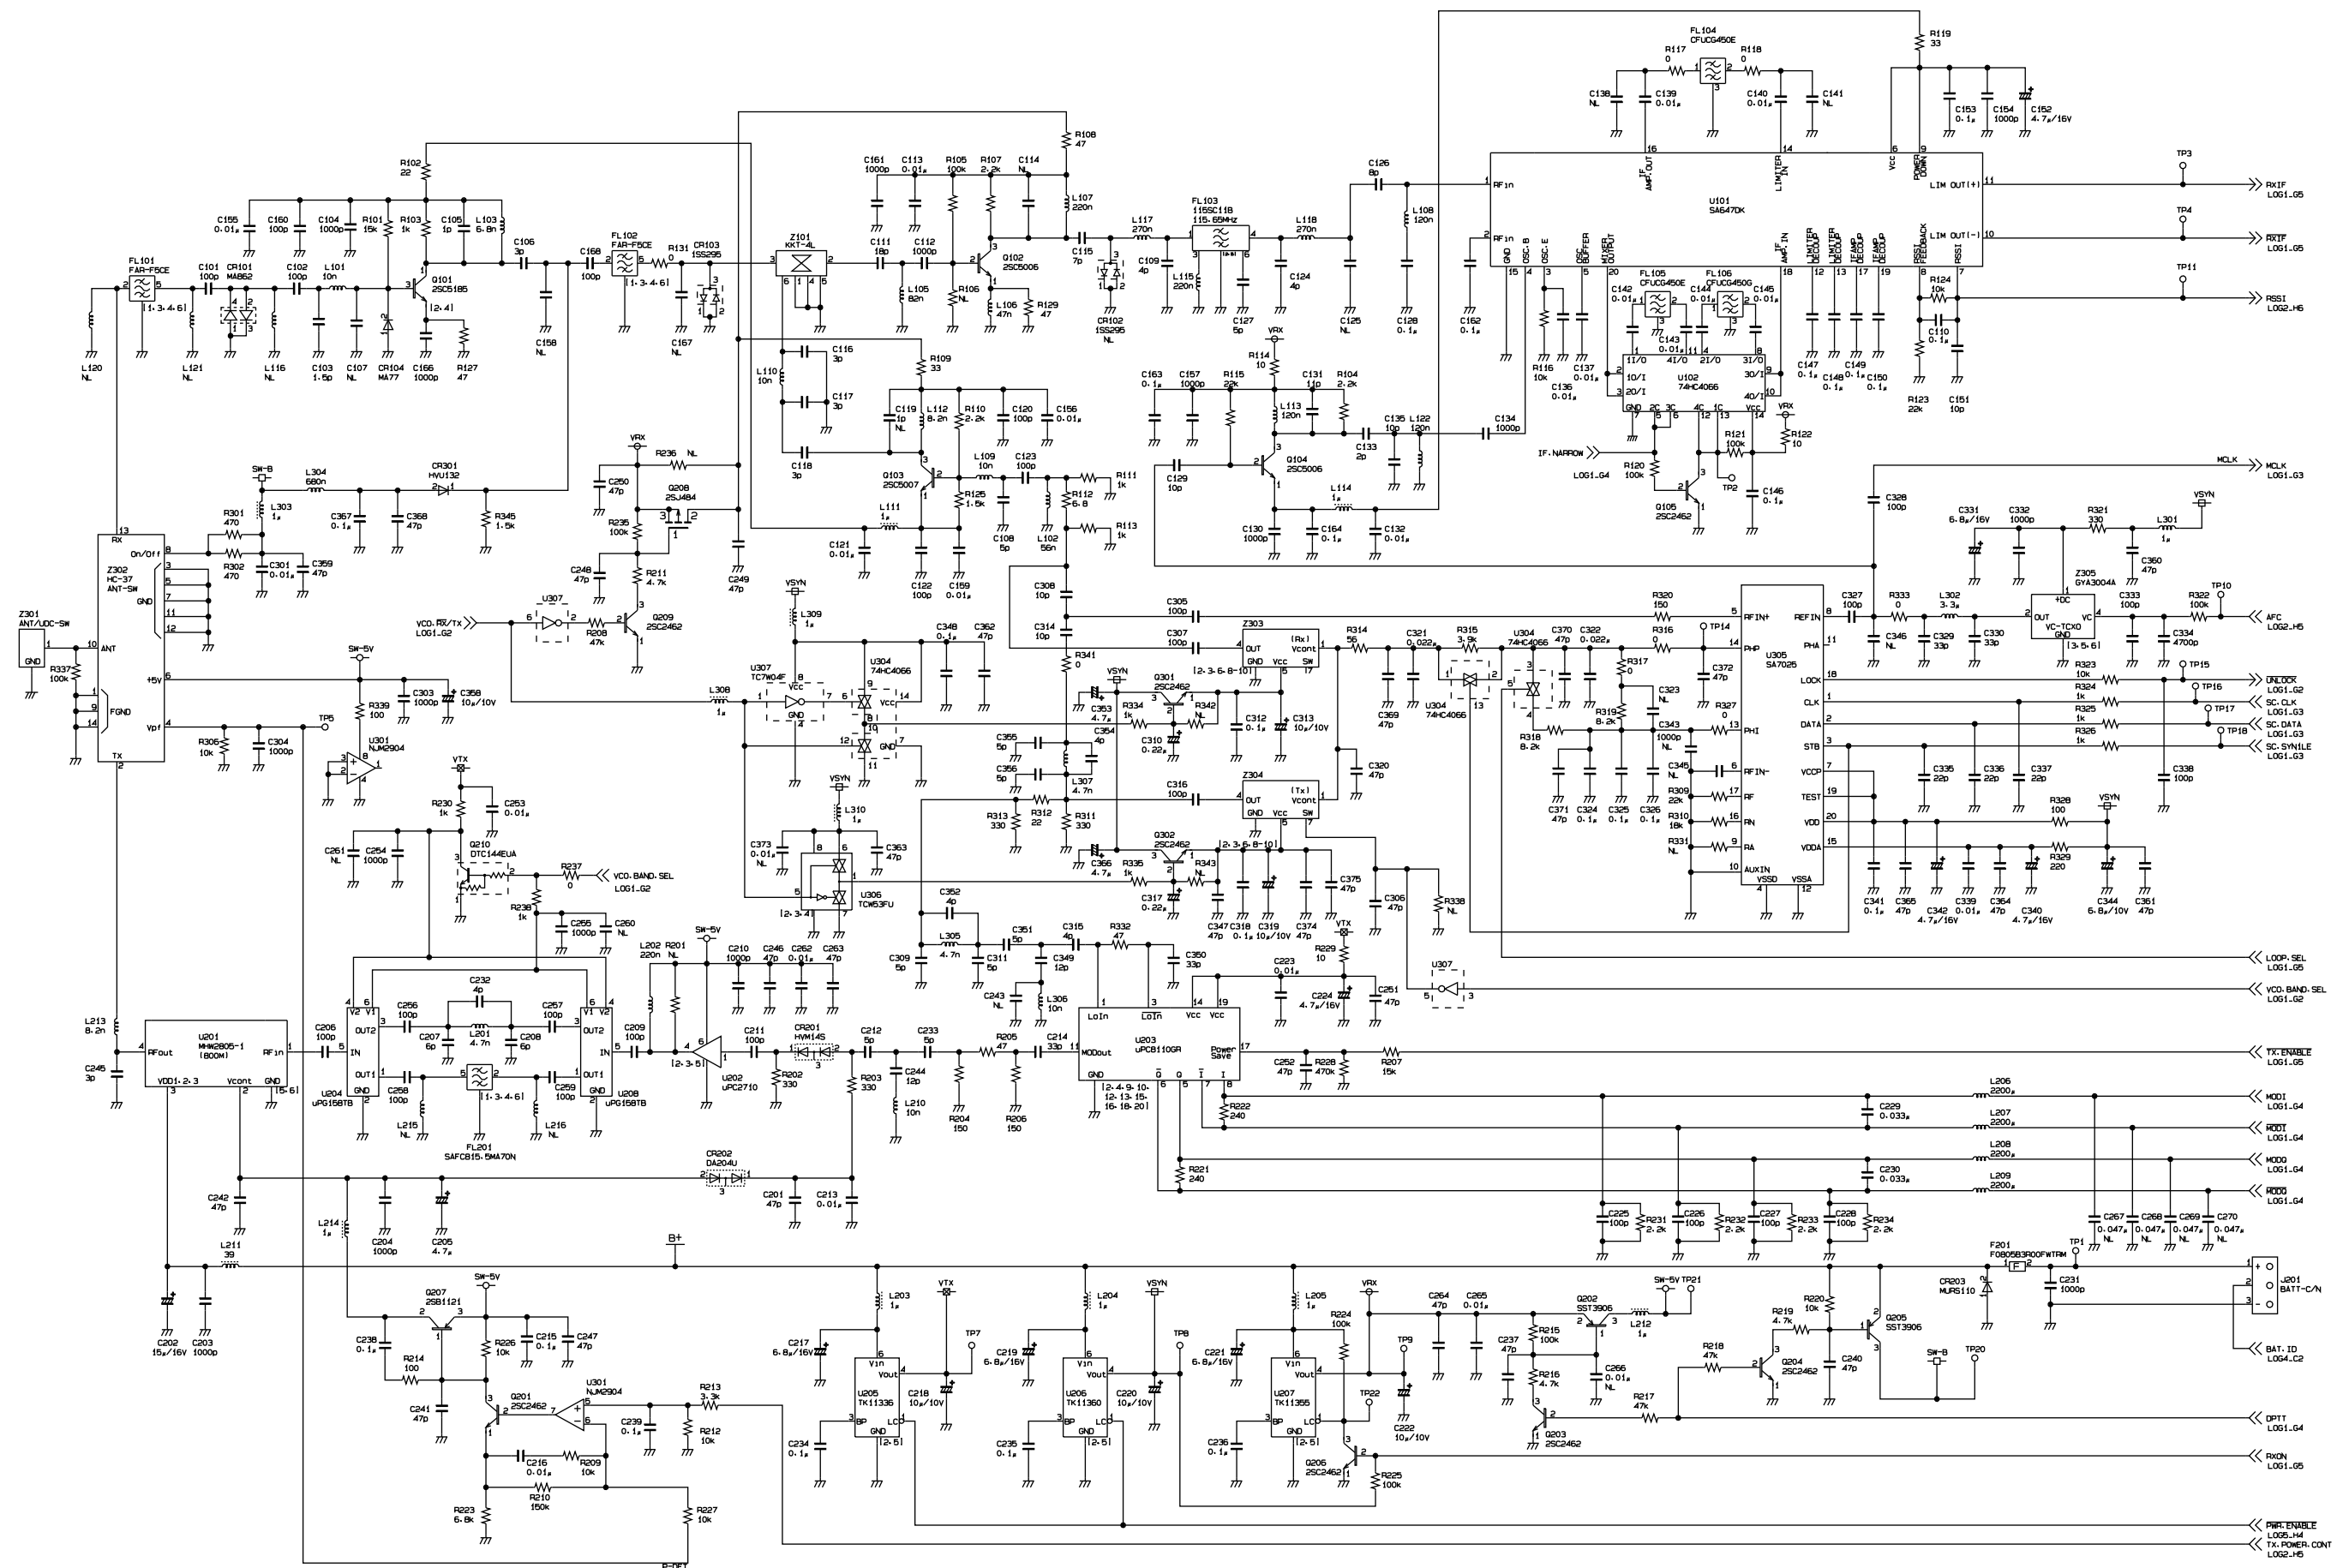


Jaguar 700P 800M Main Radio Block Schematic Diagram

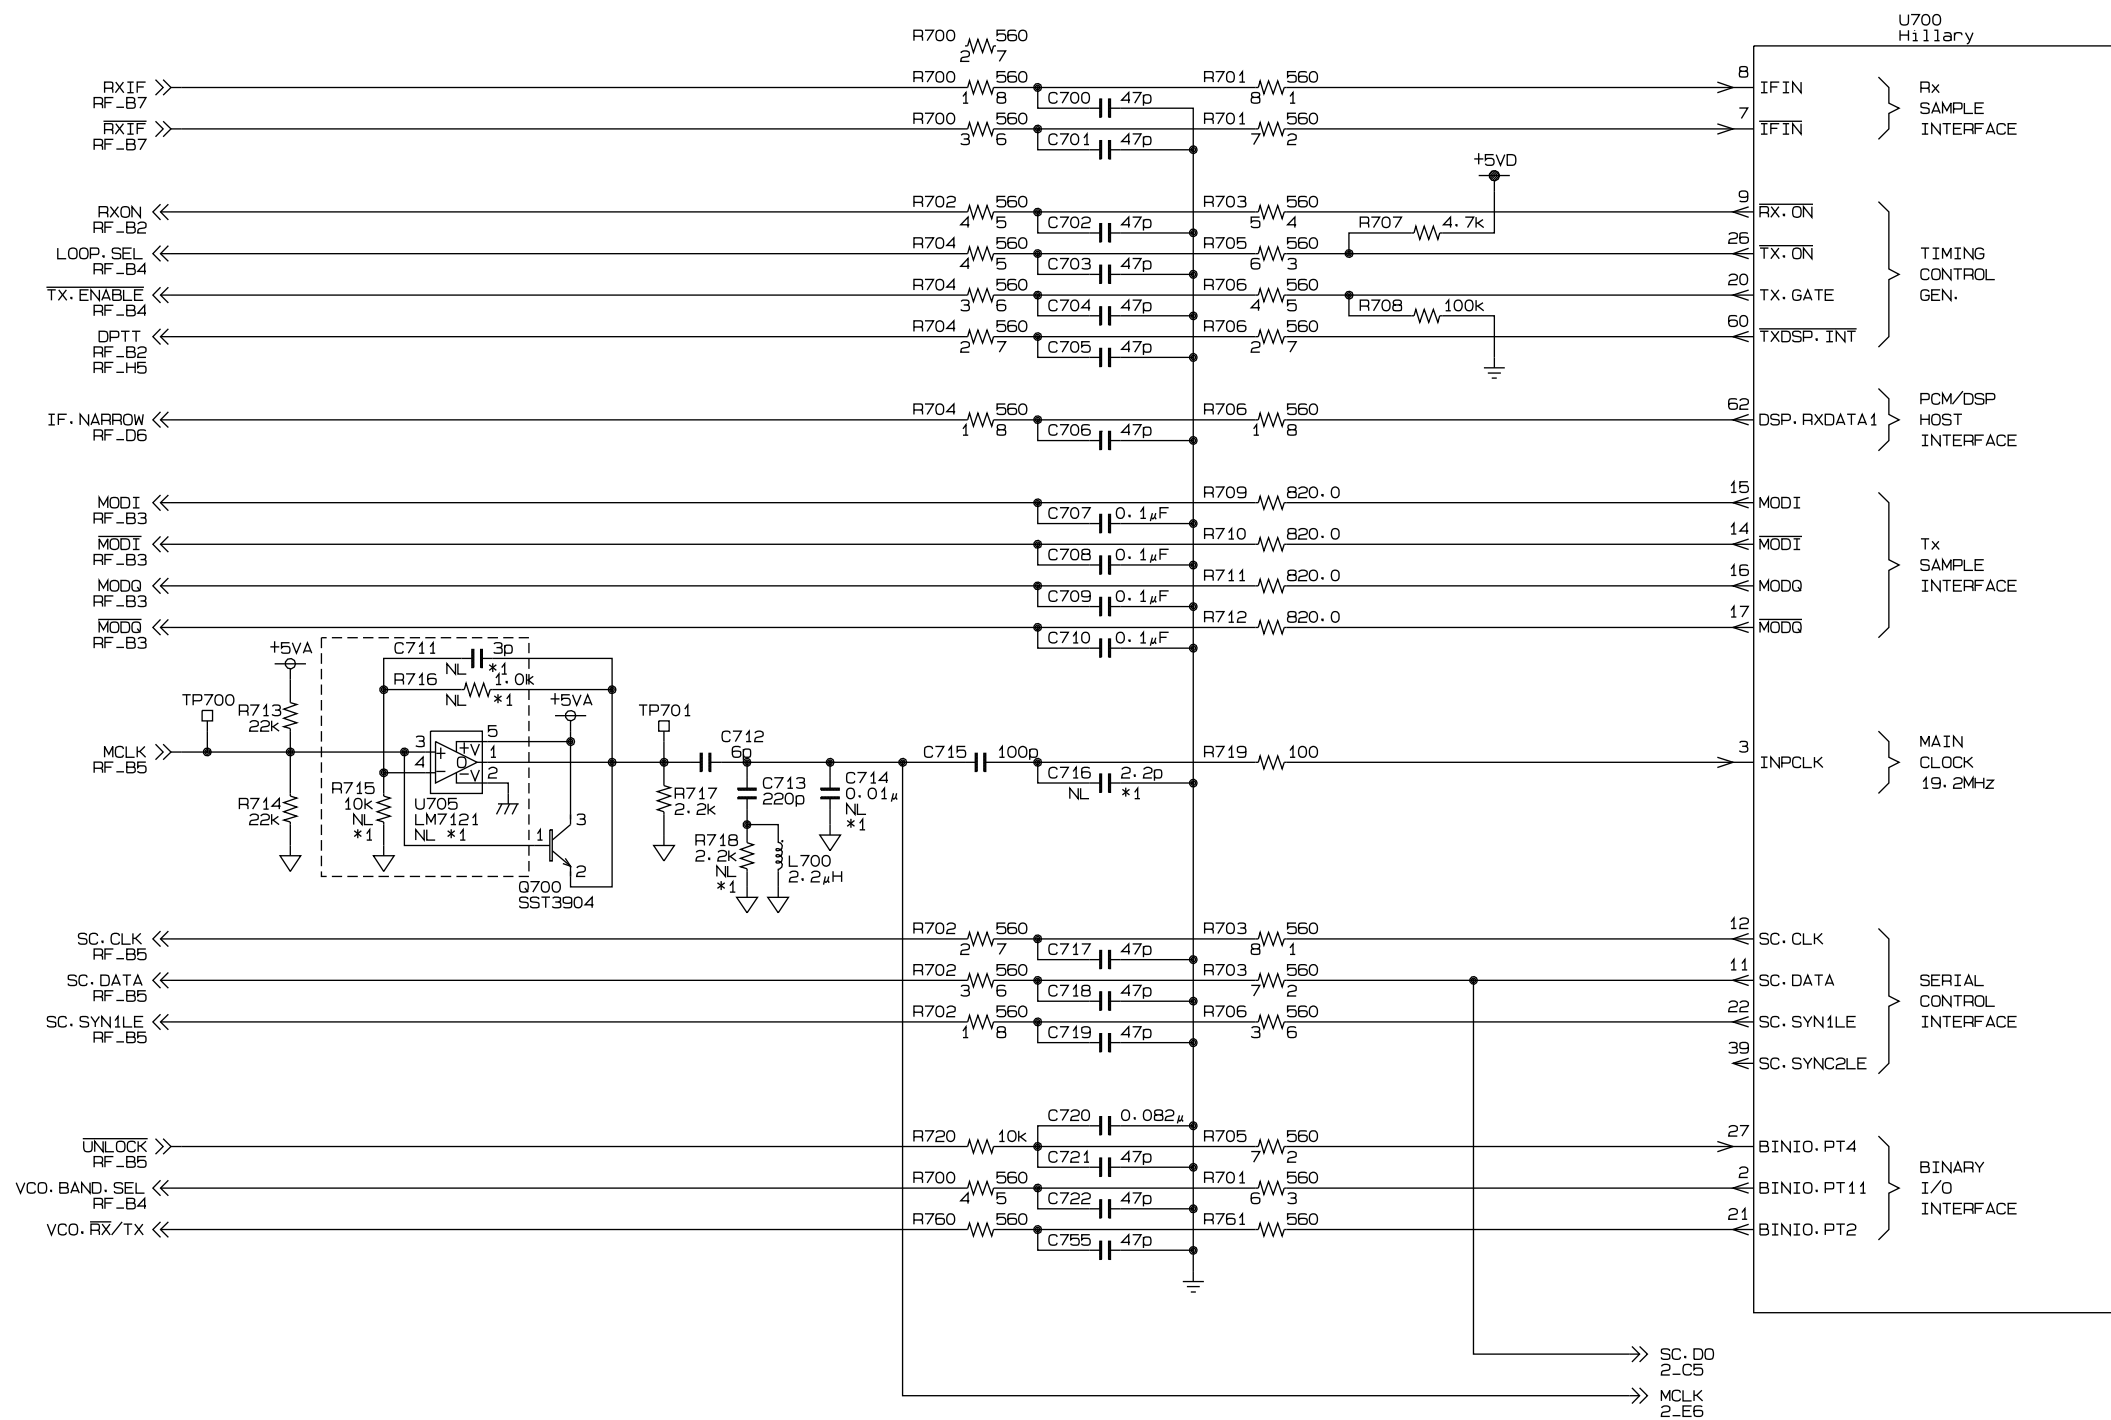


*1 U705, R715, R716, R718, C711, C714, C716 Not Used


Jaguar 700P 800M Main Logic Block Schematic Diagram (1/6)

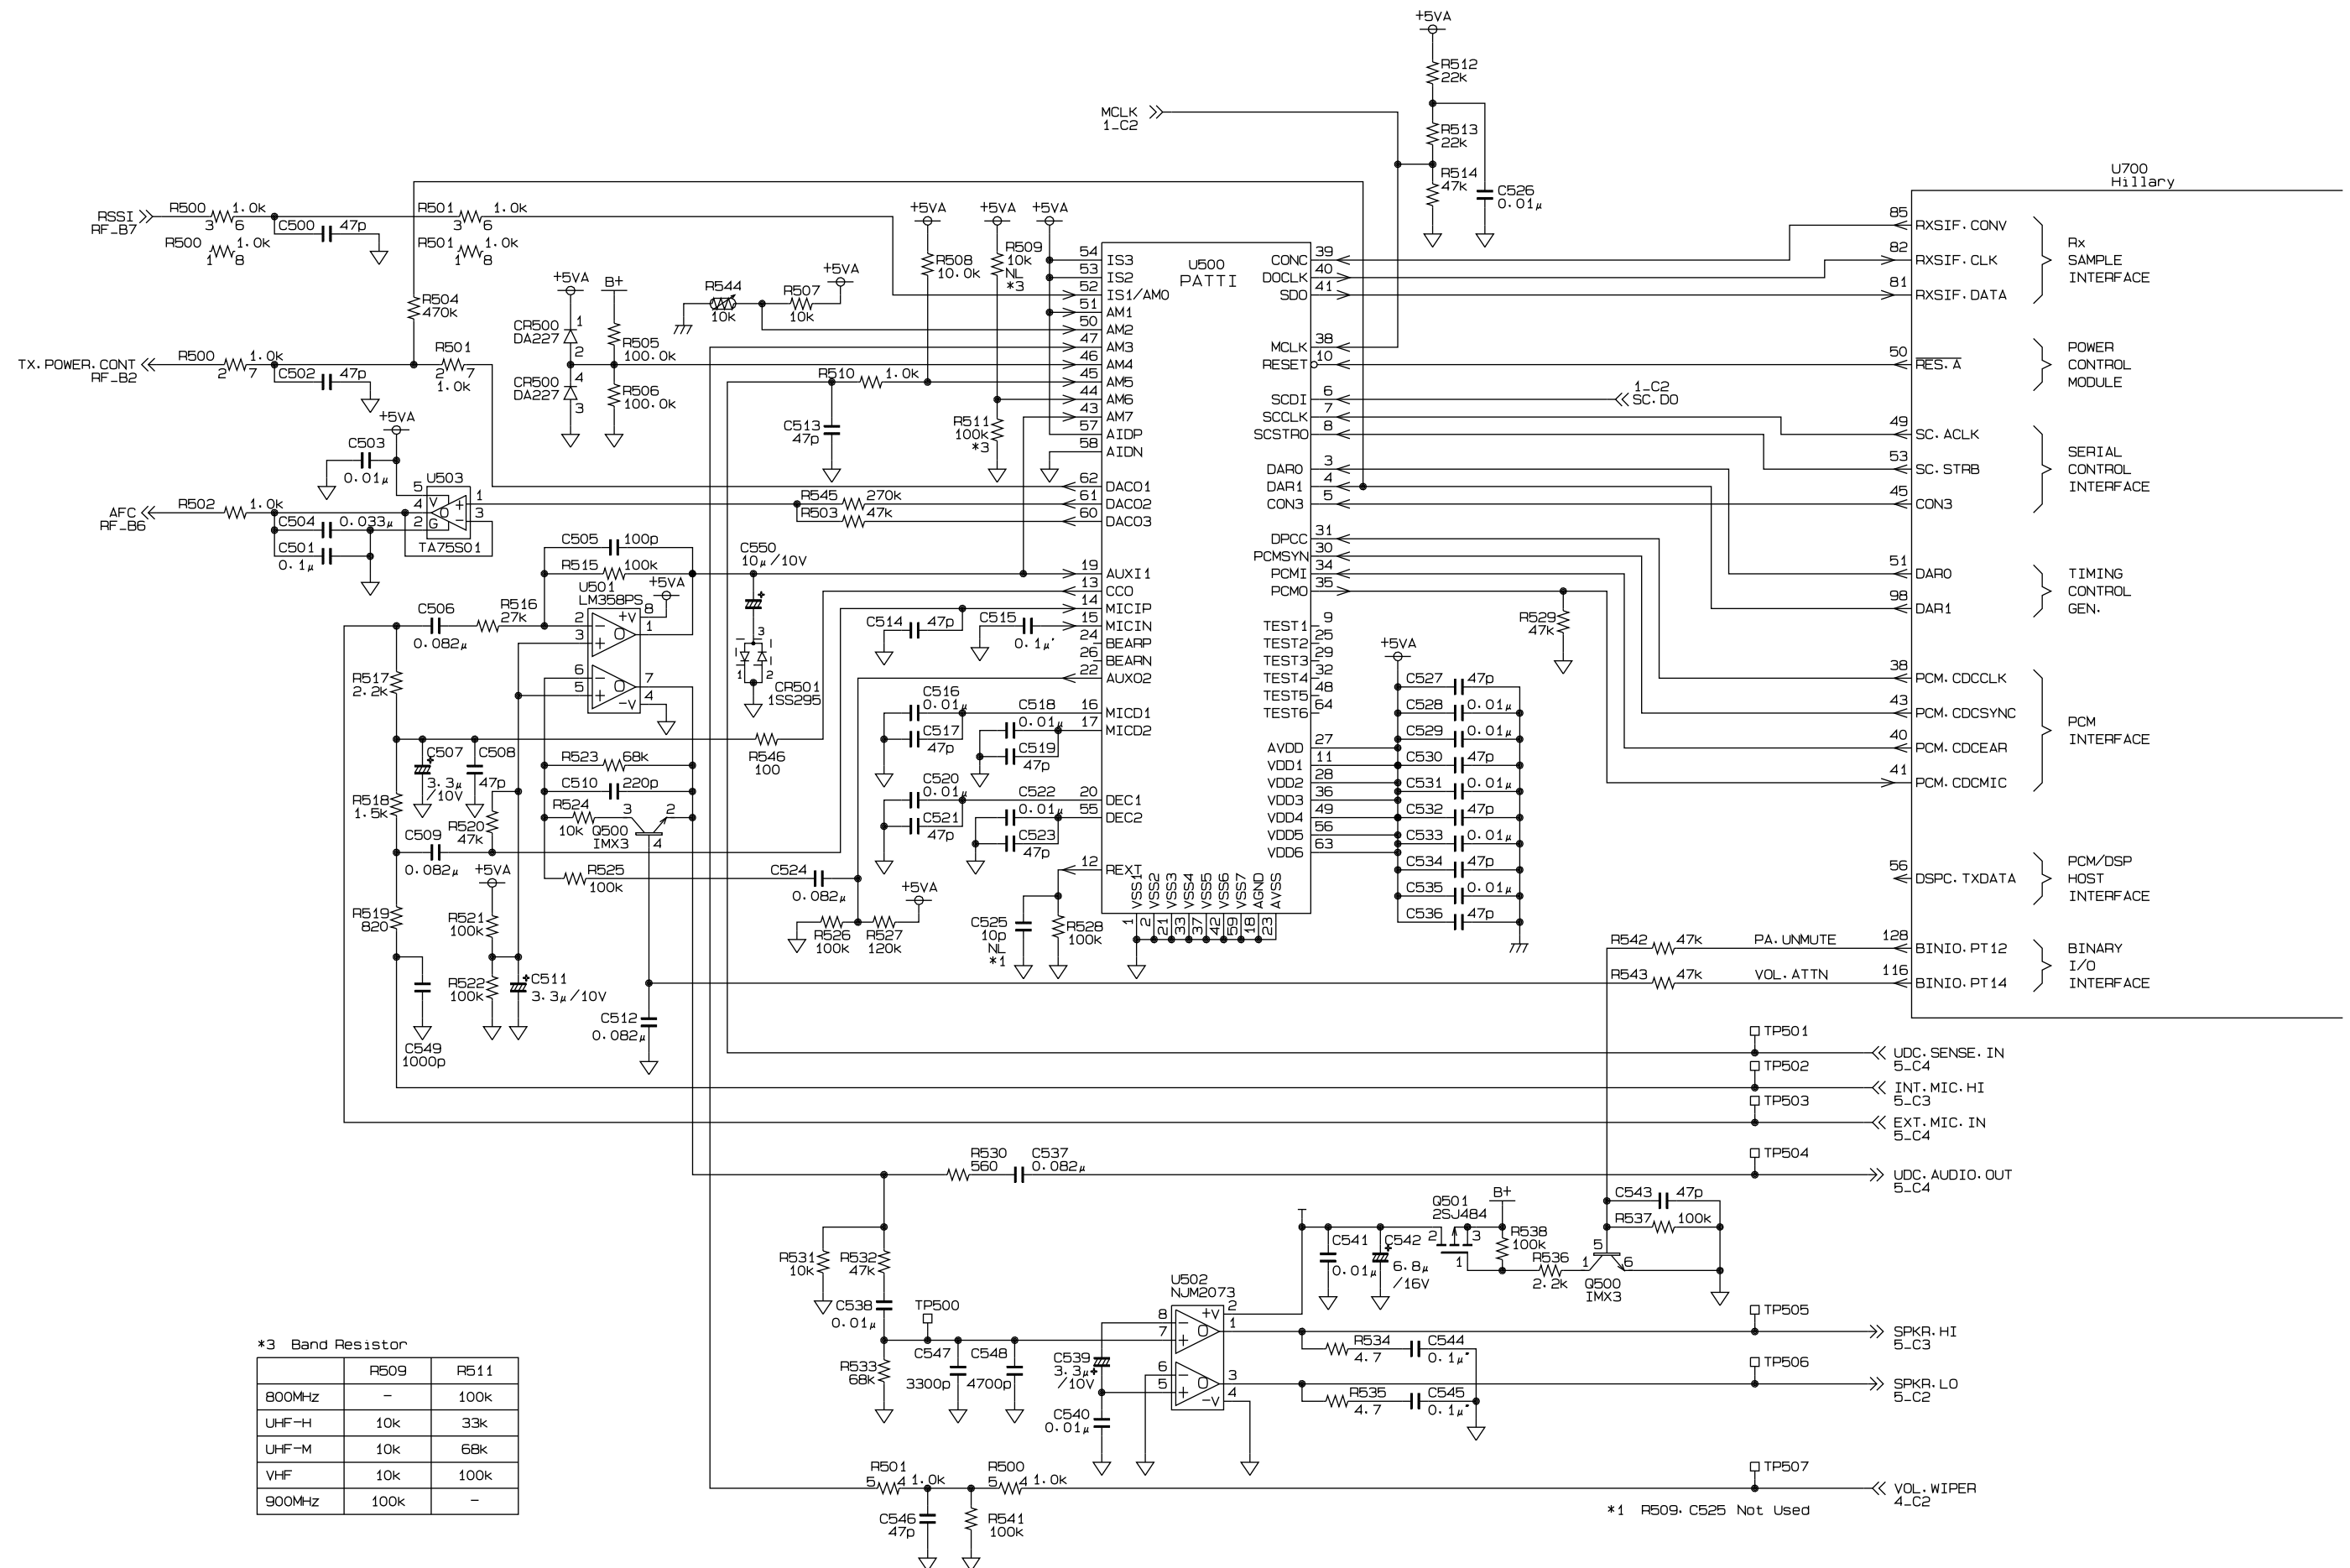


Jaguar 700P 800M Main Logic Block Schematic Diagram (2/6)

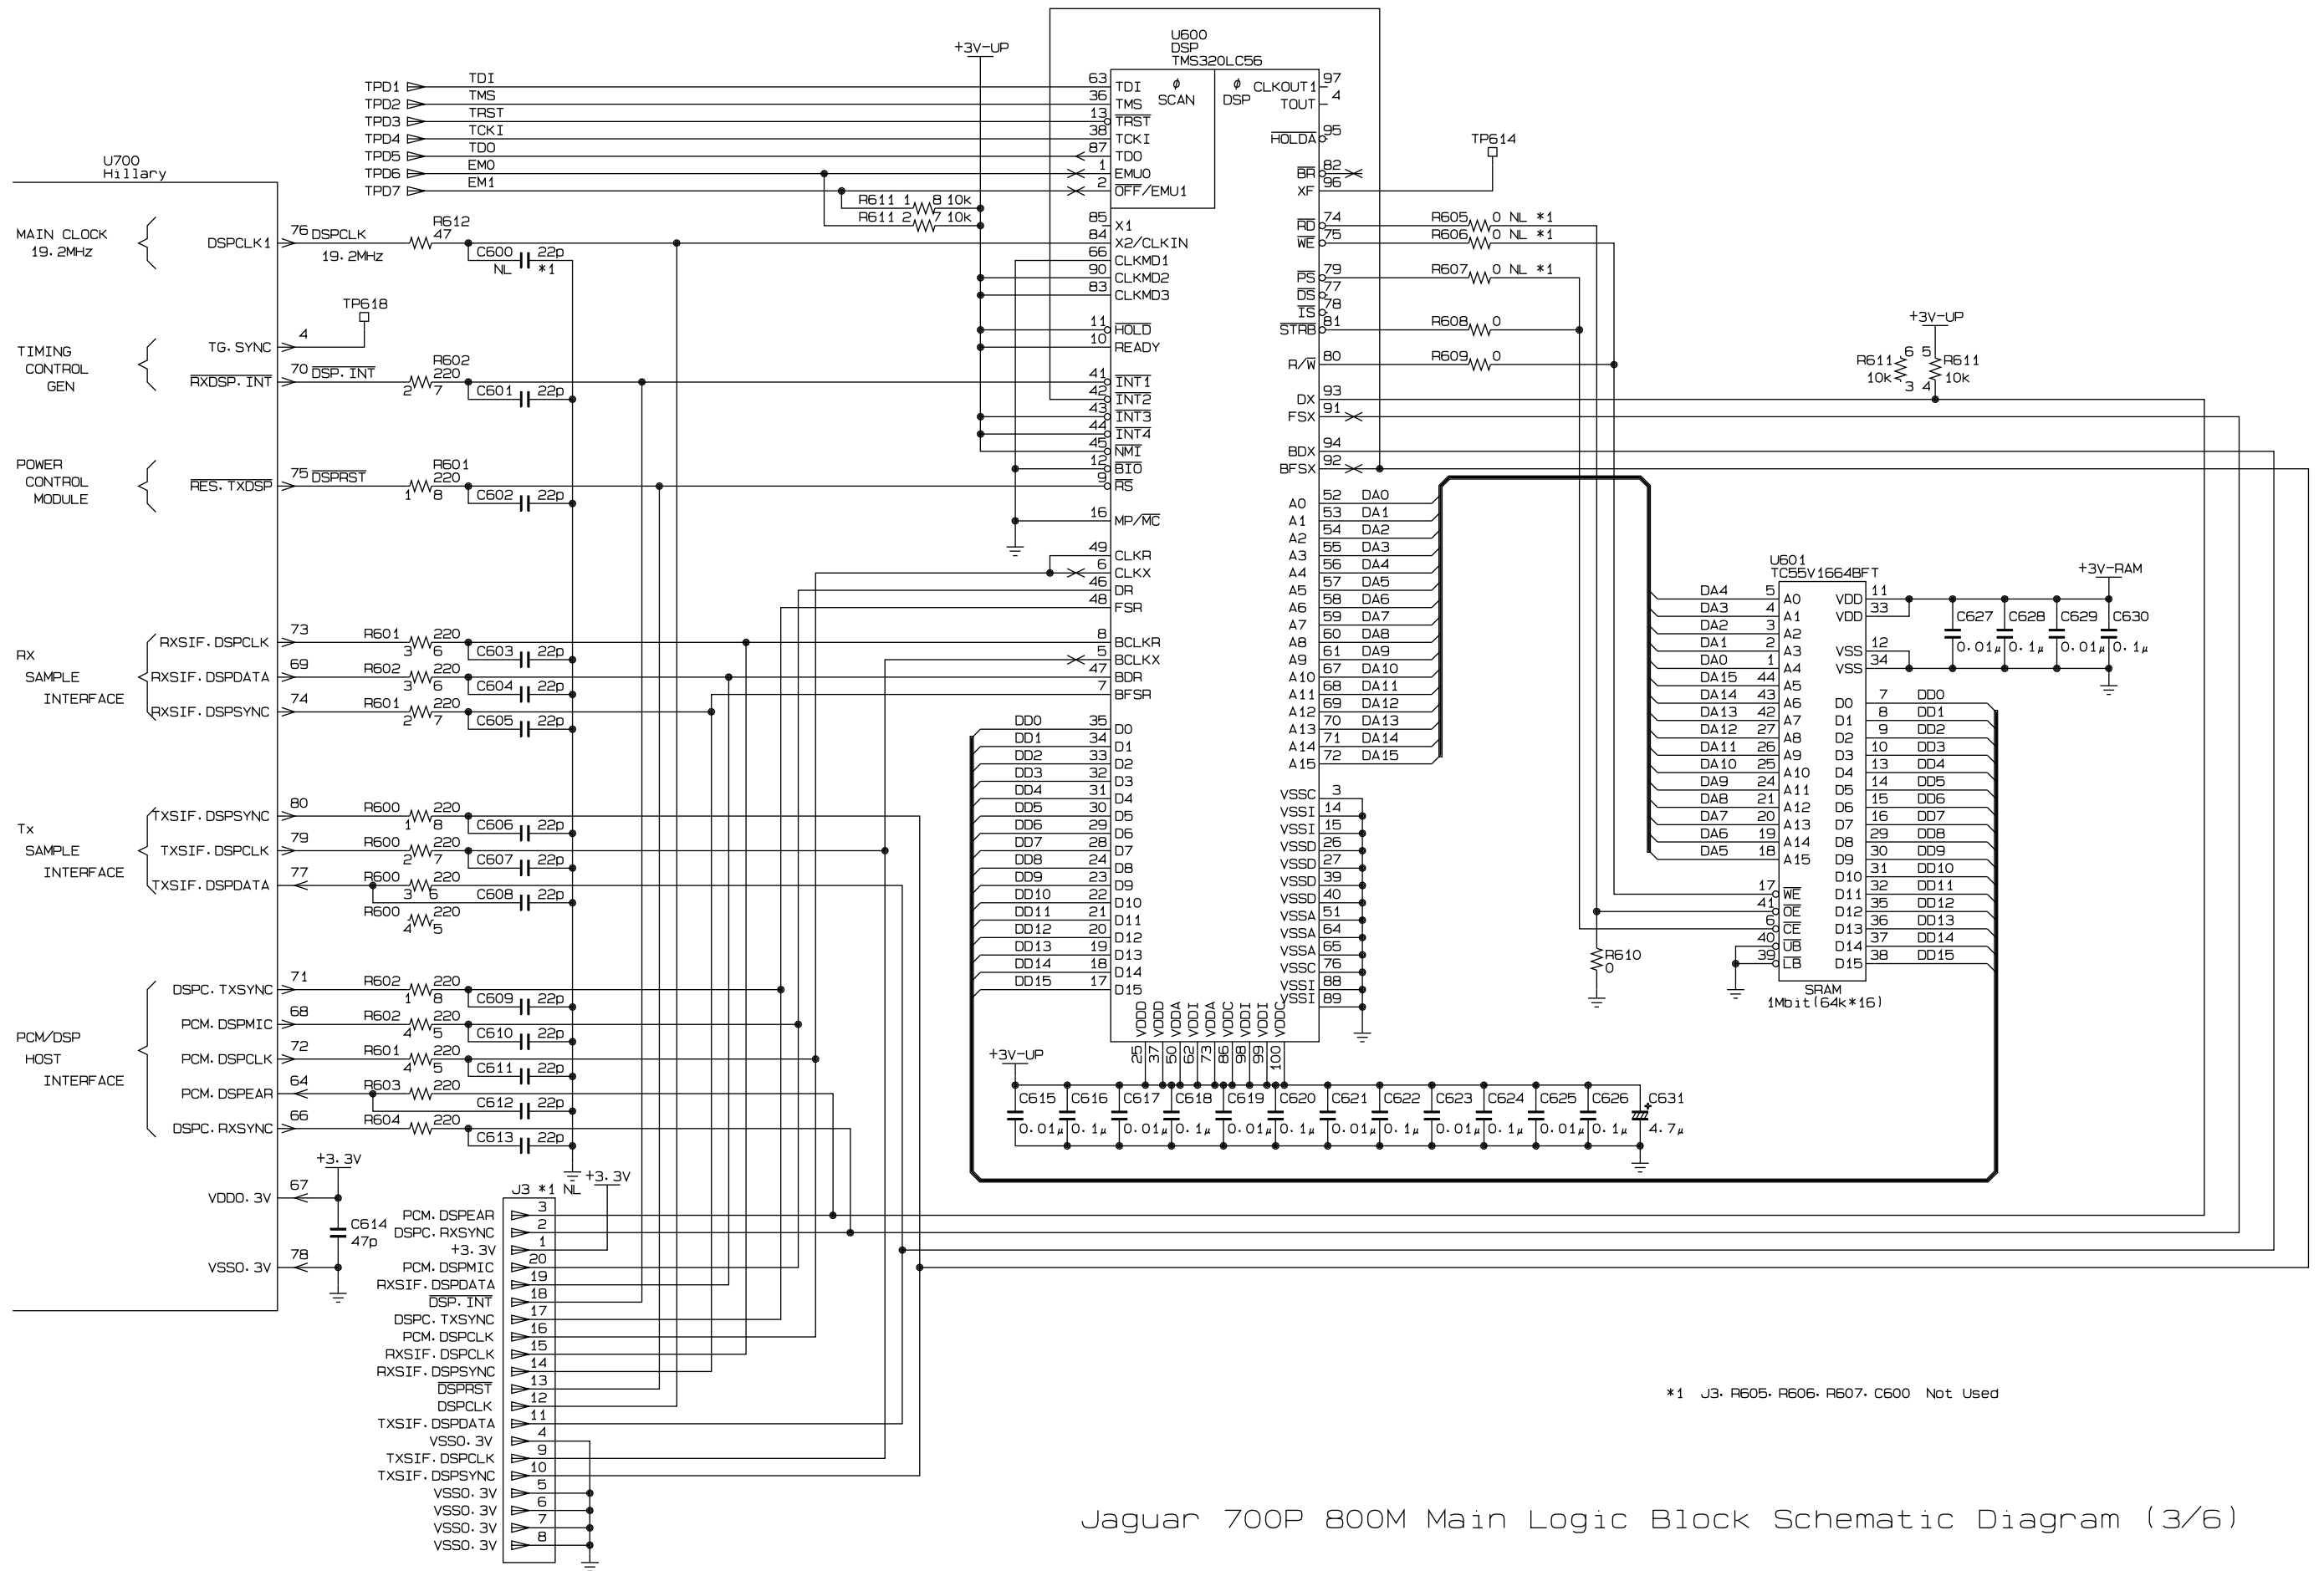

Jaguar 700P 800M Main Logic Block Schematic Diagram (3/6)




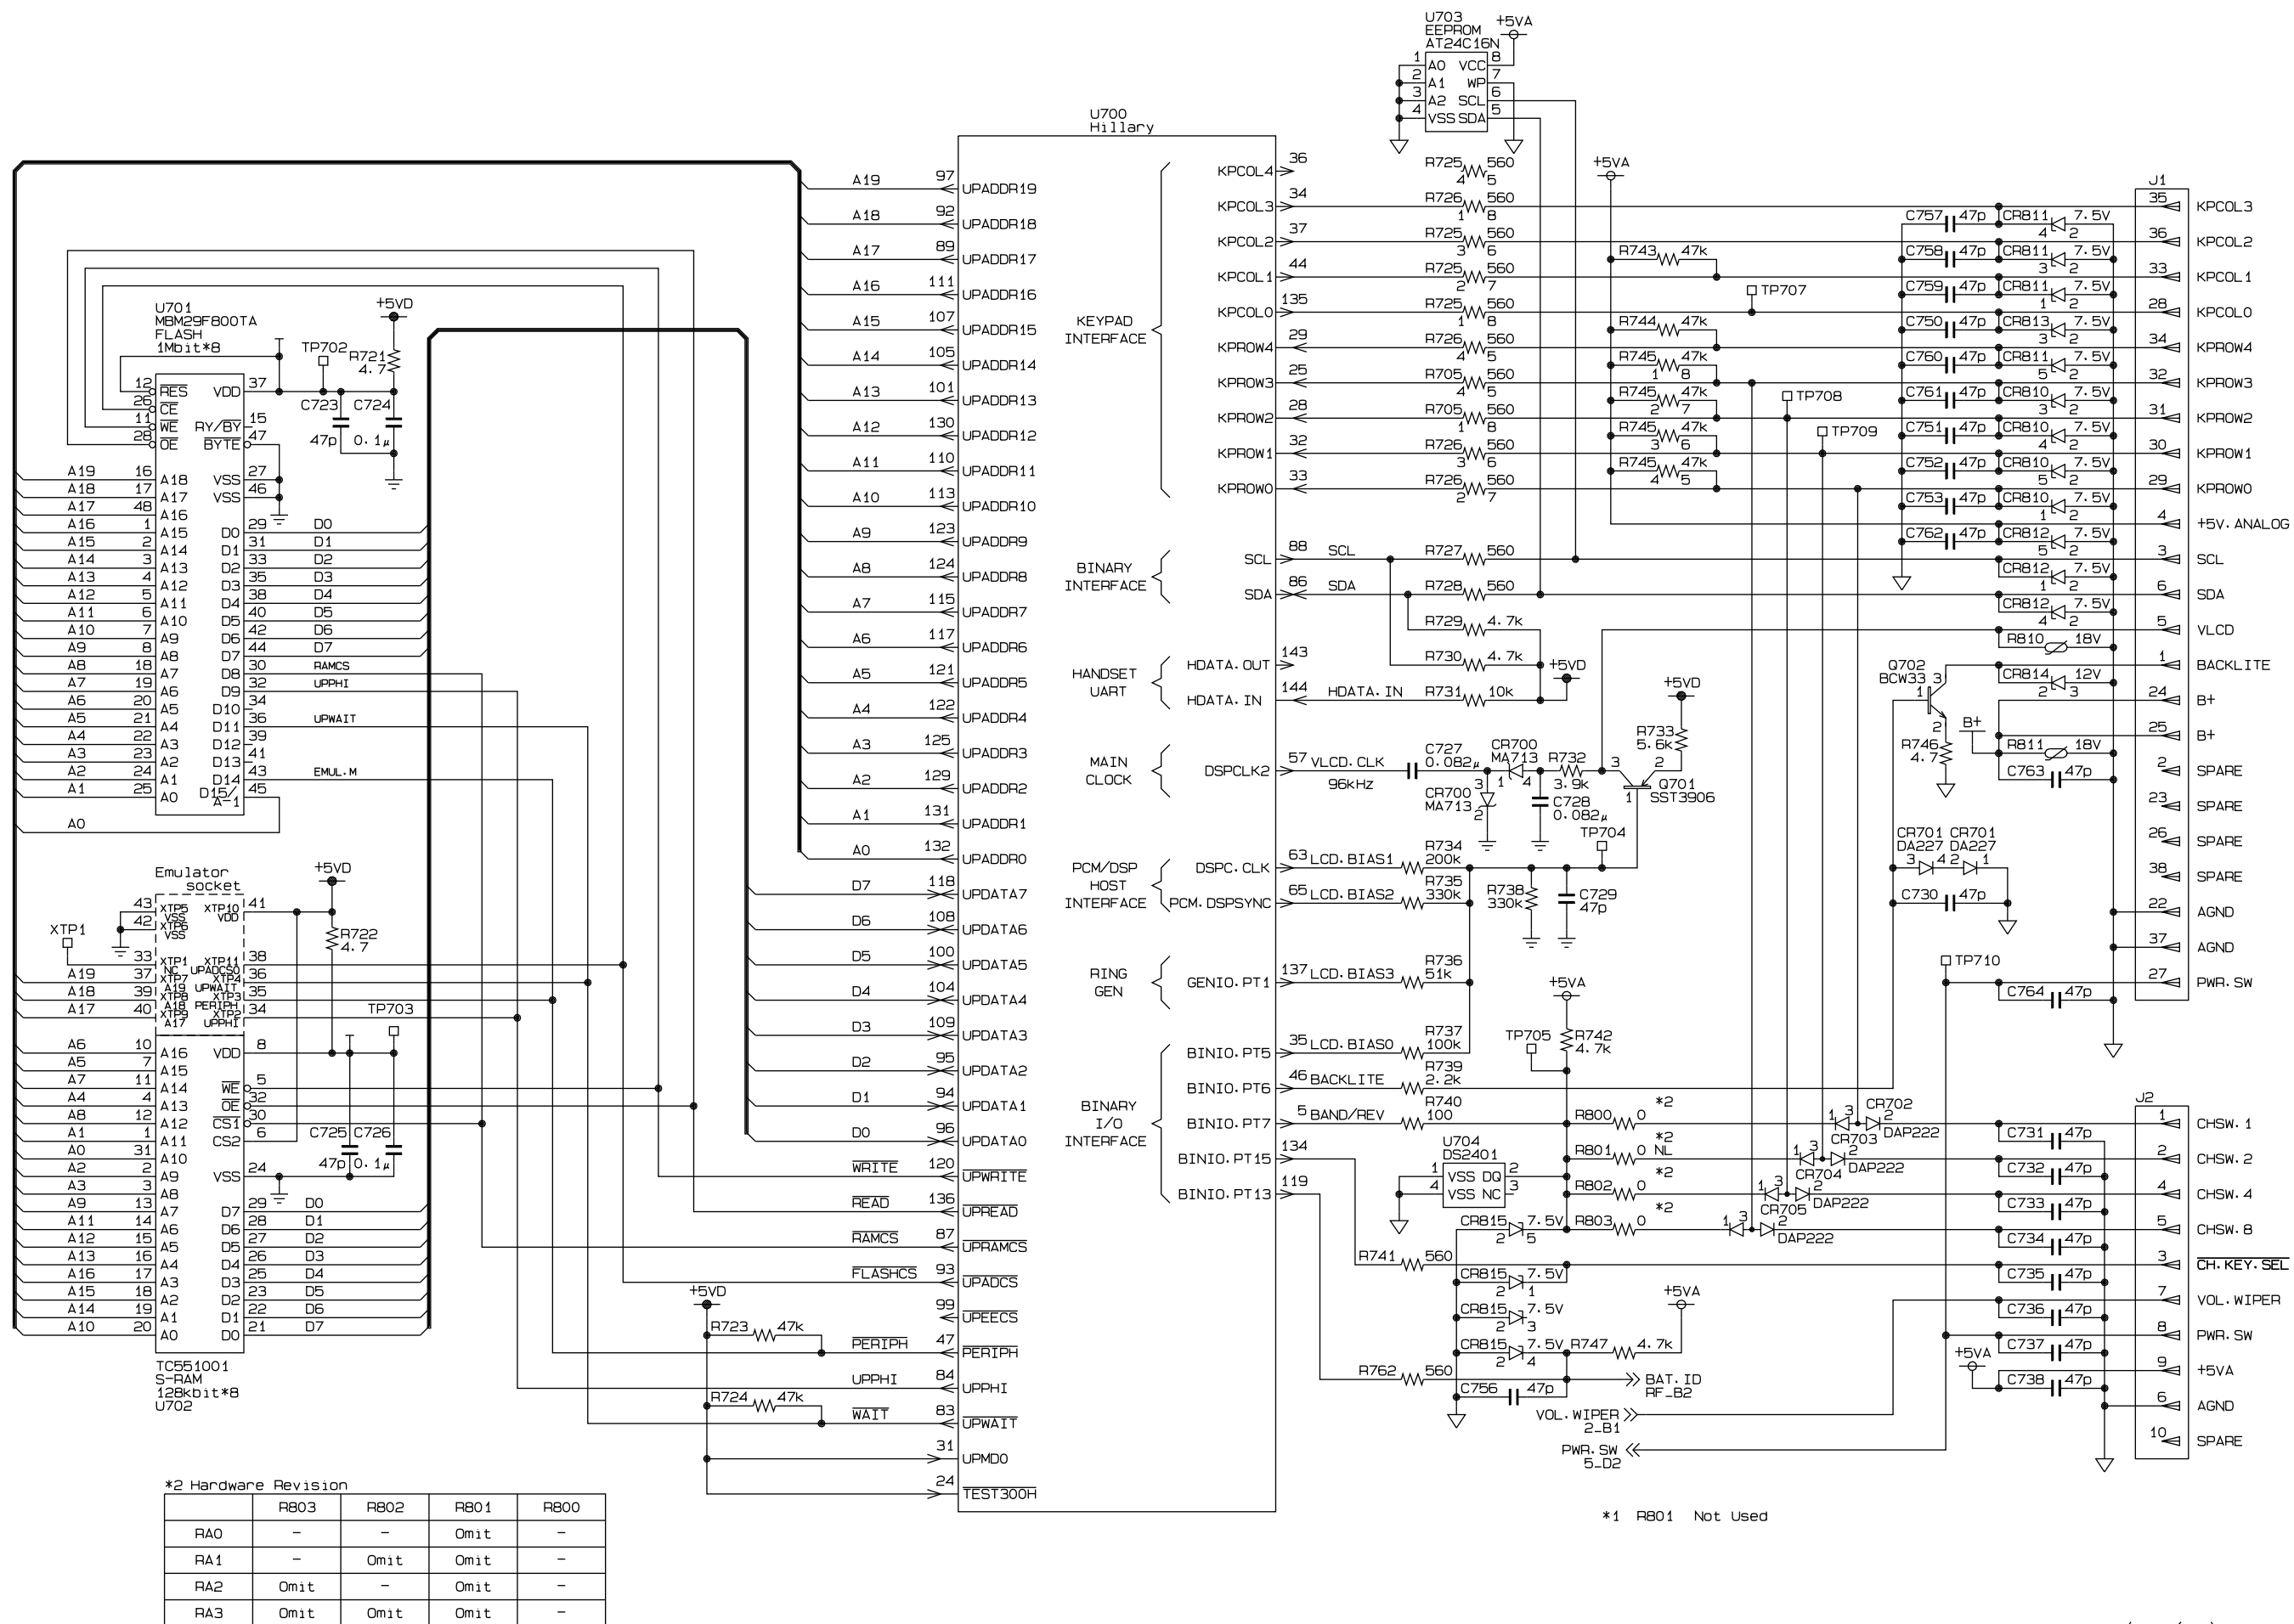


Jaguar 700P 800M Main Logic Block Schematic Diagram (4/6)

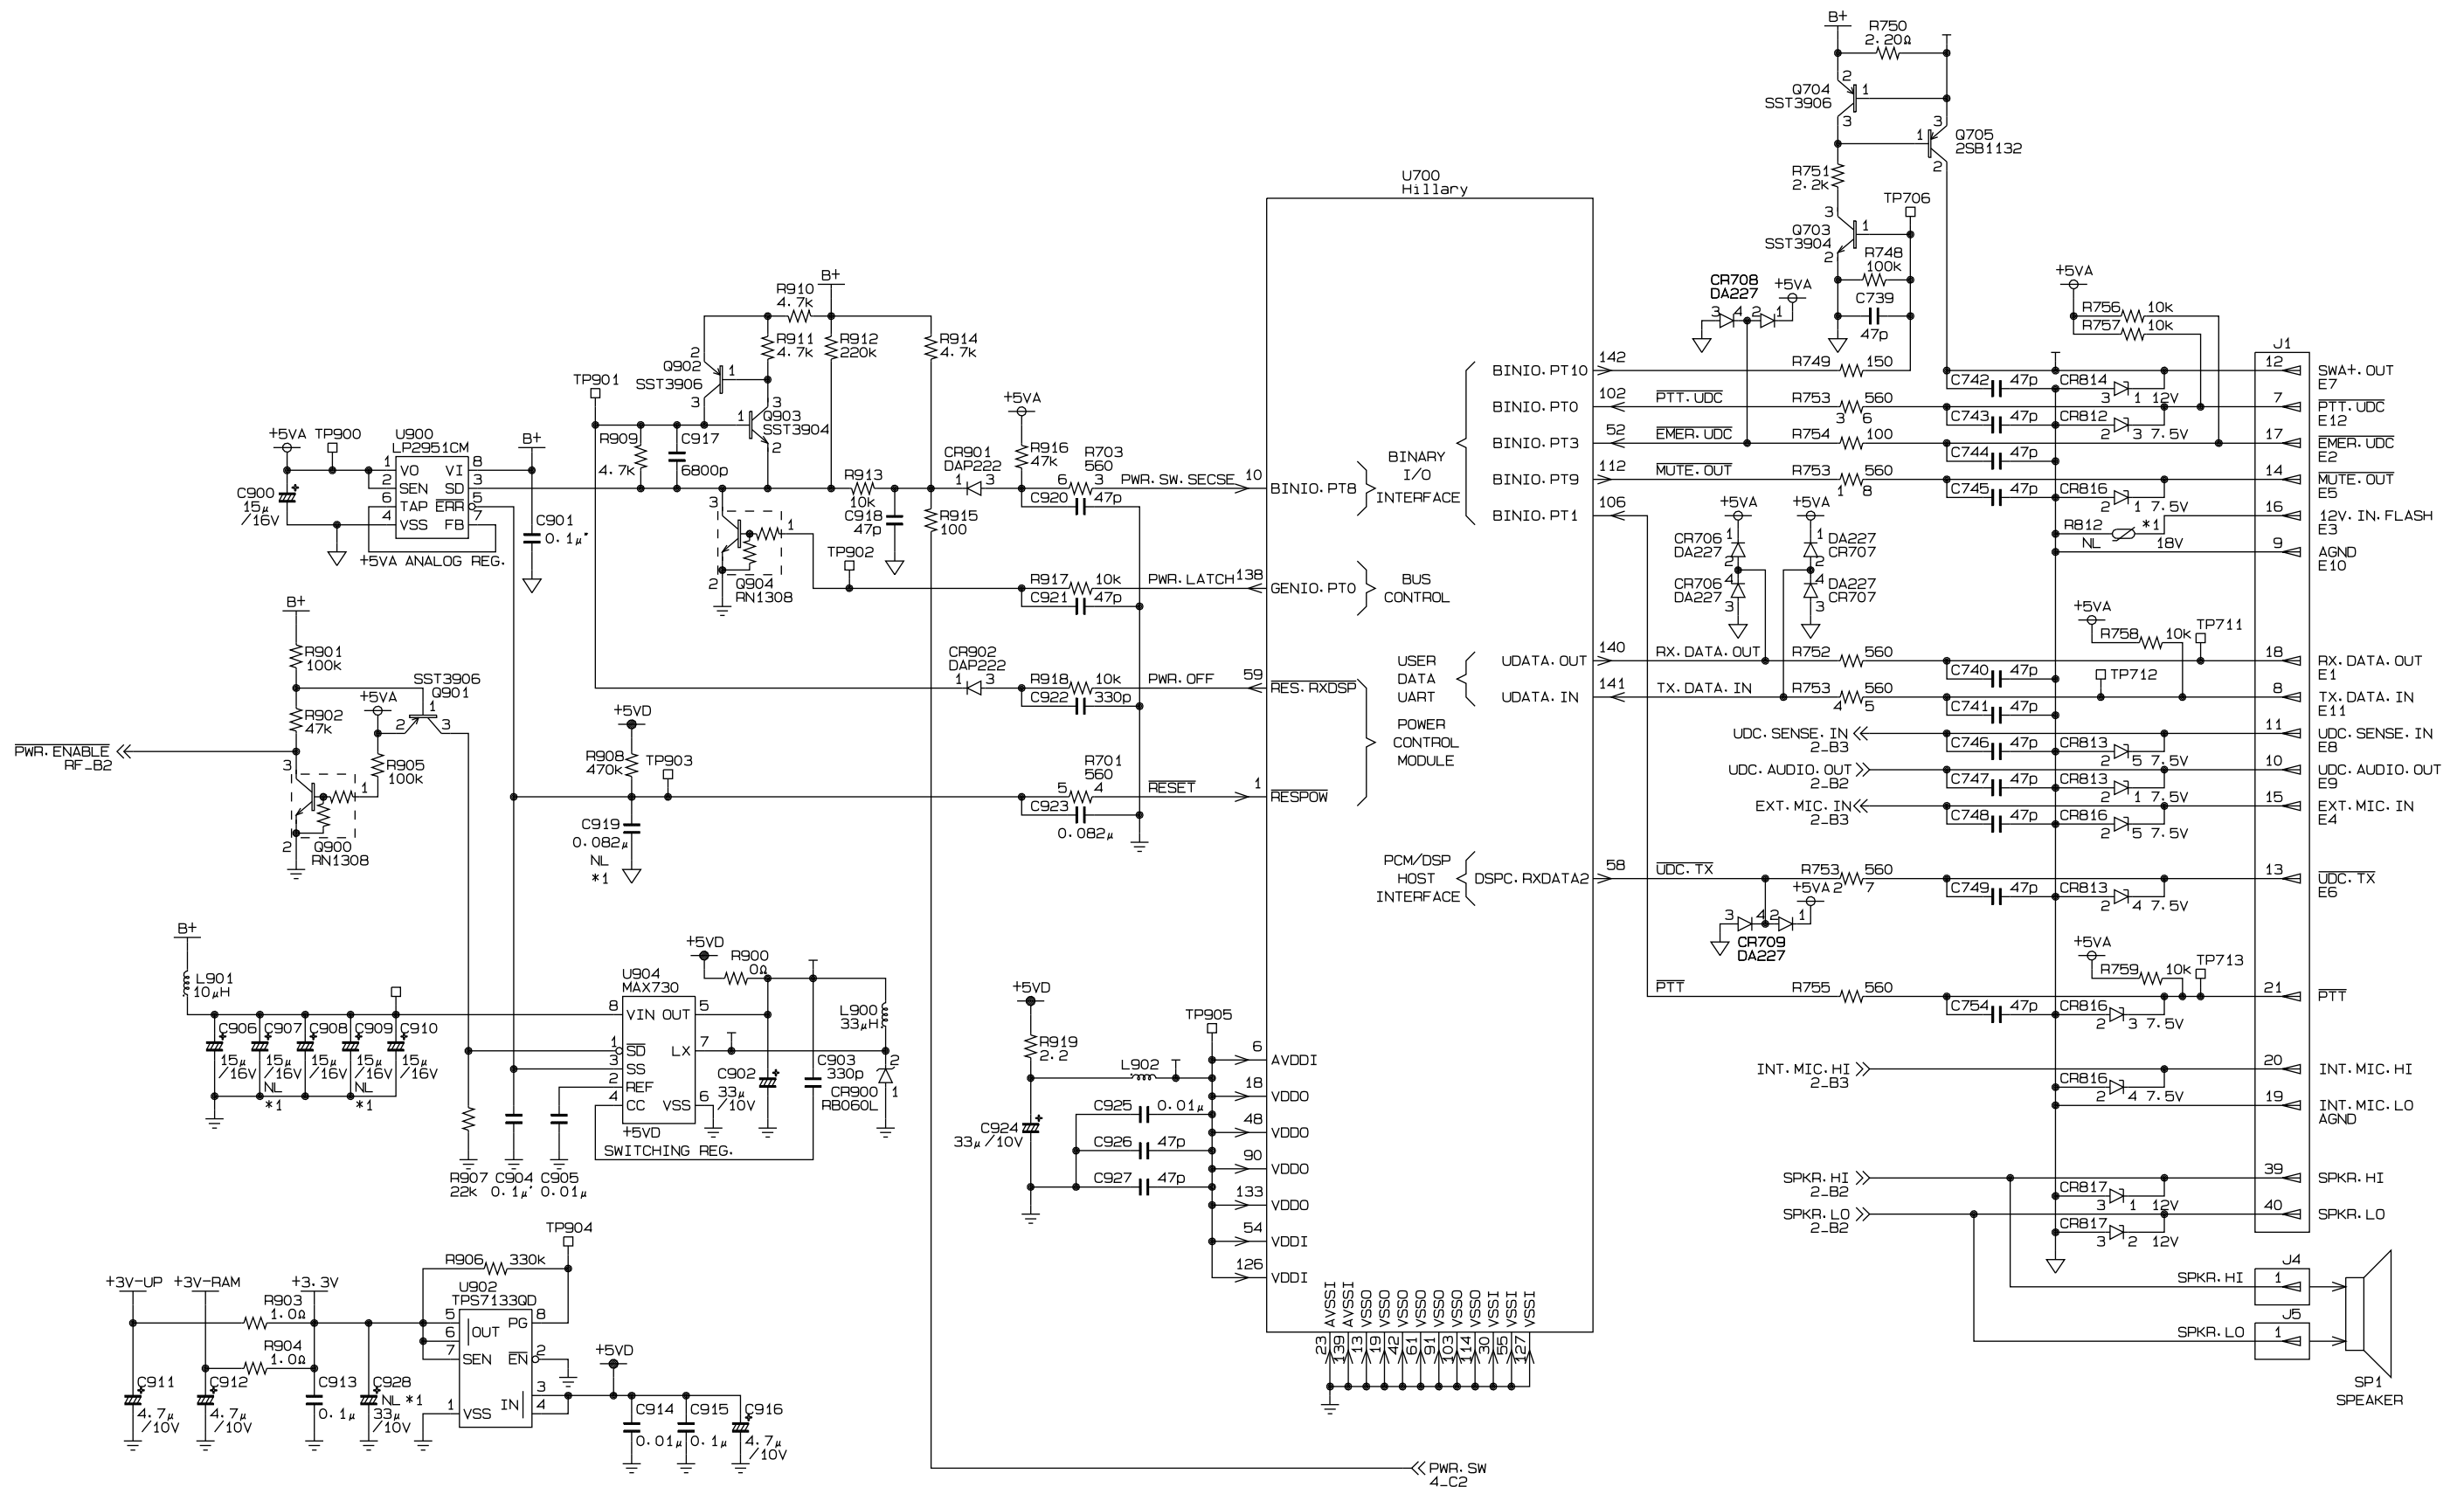


*1 R812, C907, C909, C919, C928 Not Used


Jaguar 700P 800M Main Logic Block Schematic Diagram (5/6)

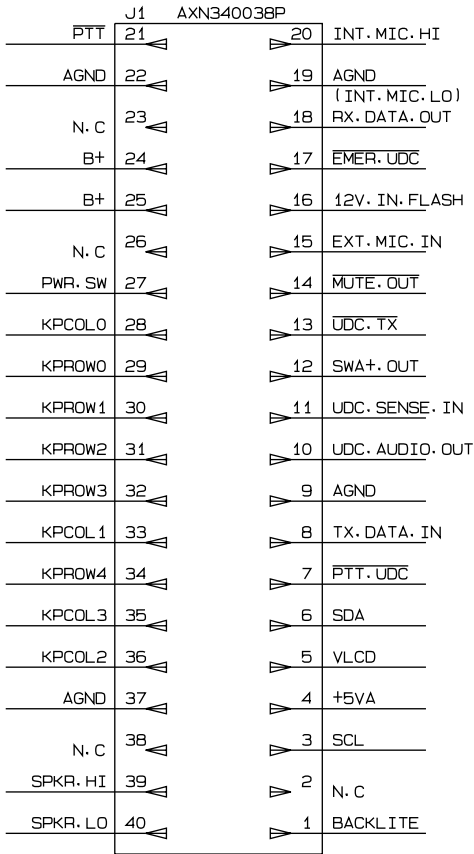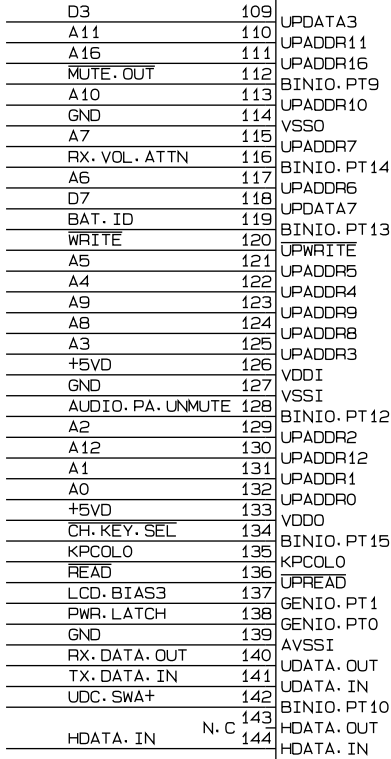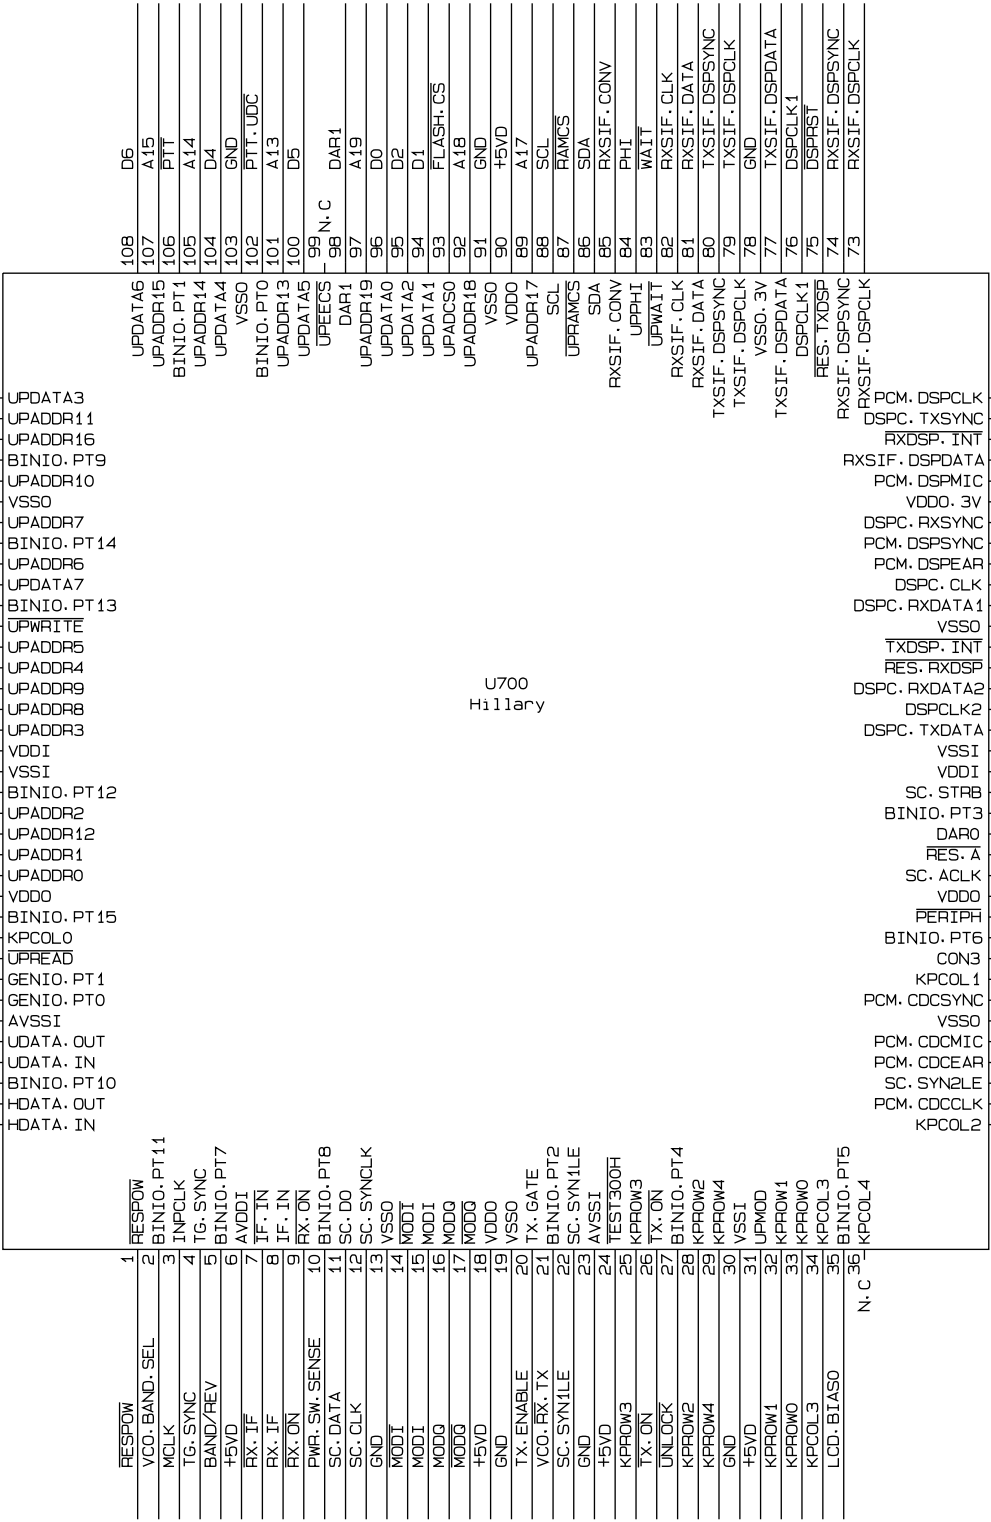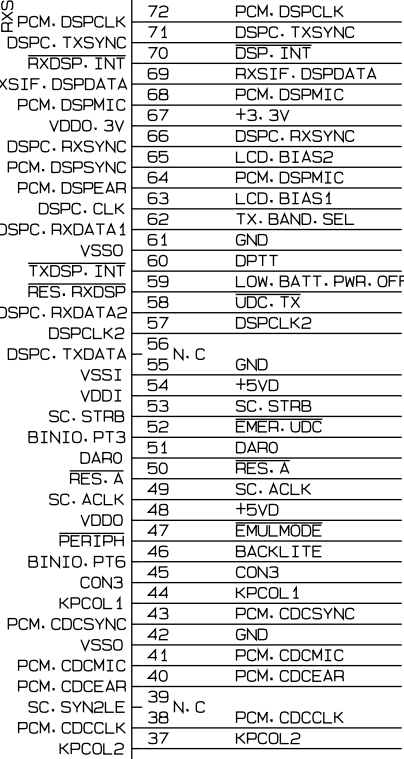


Jaguar 700P 800M Main Logic Block Schematic Diagram (6/6)

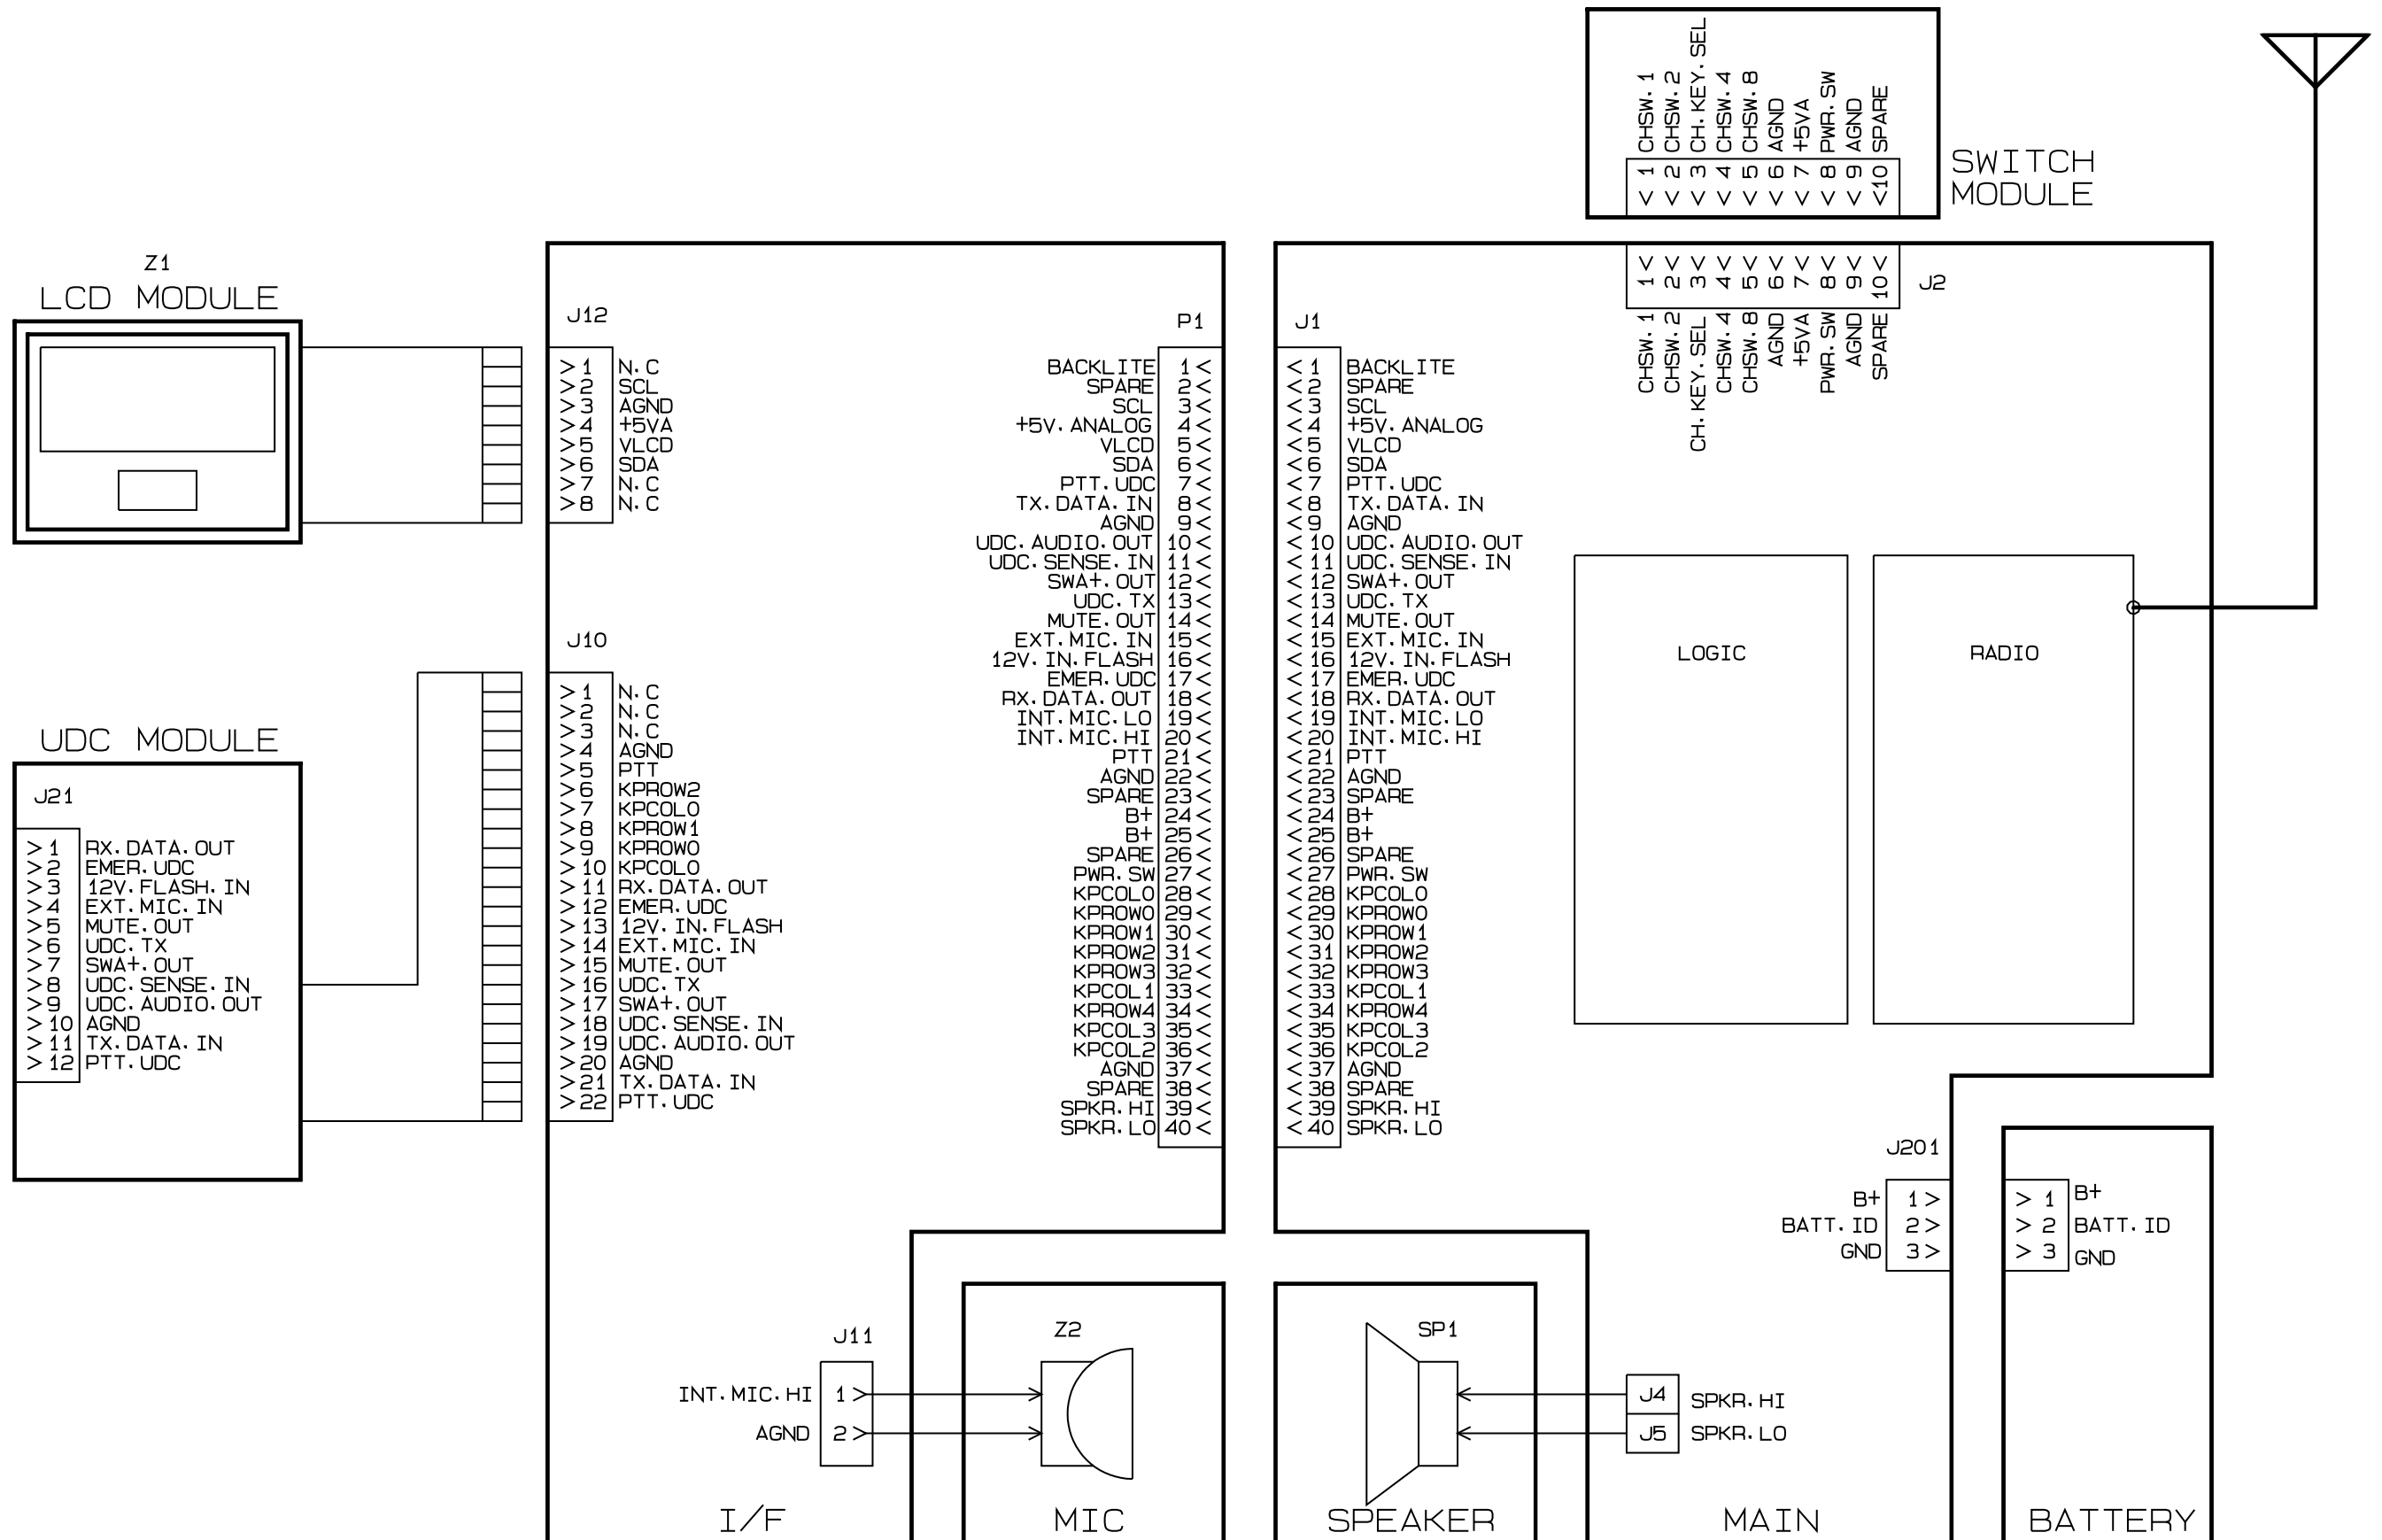

Jaguar 700P Interconnection Schematic Diagram

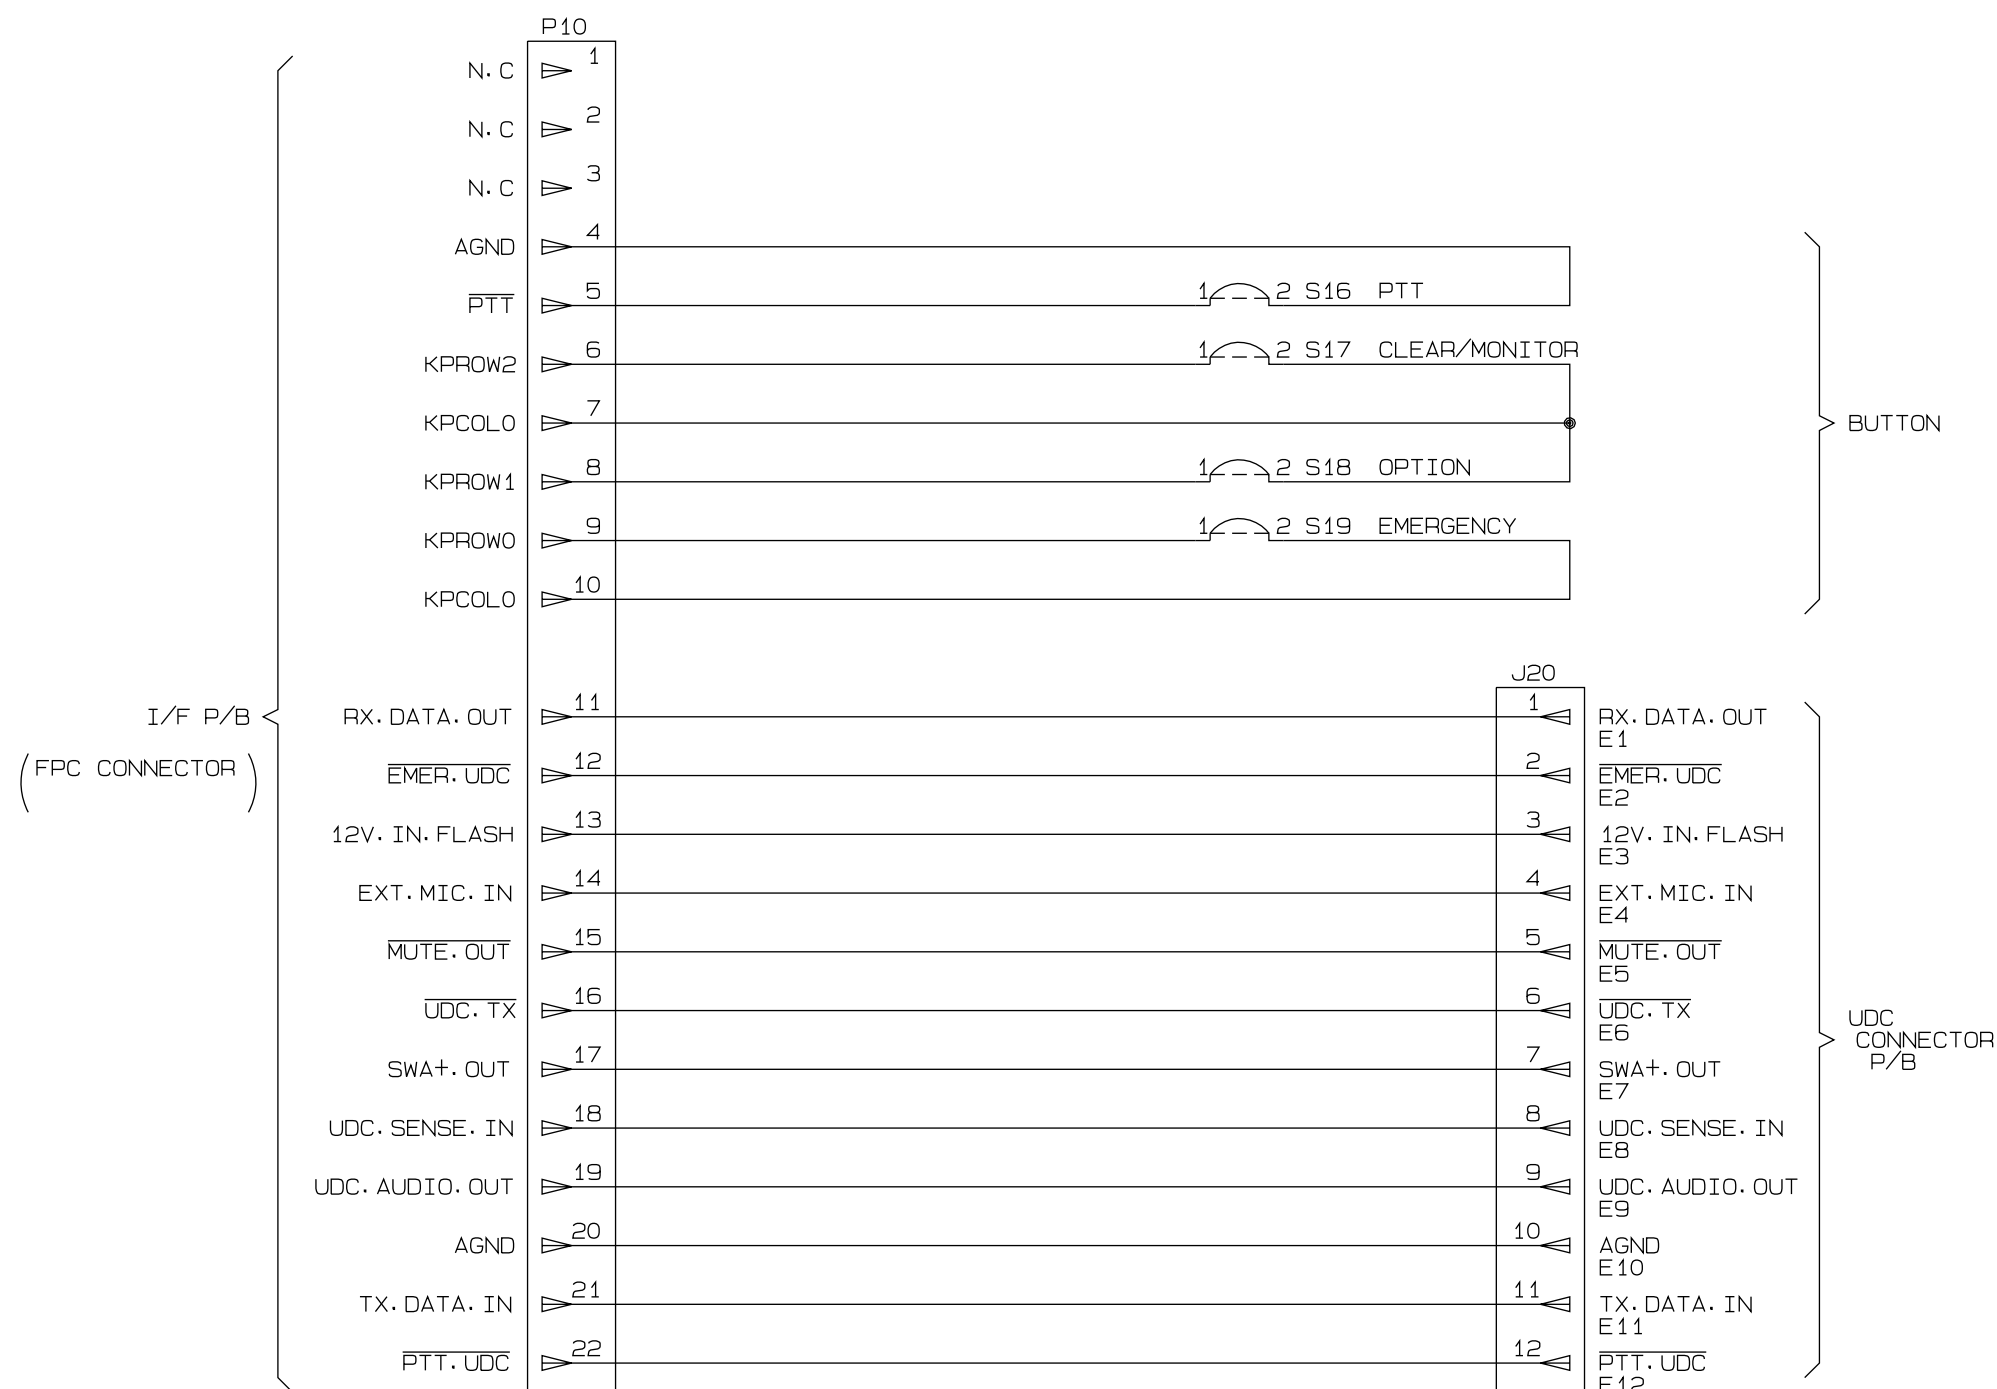

Jaguar 700P Flexible P/B Schematic Diagram

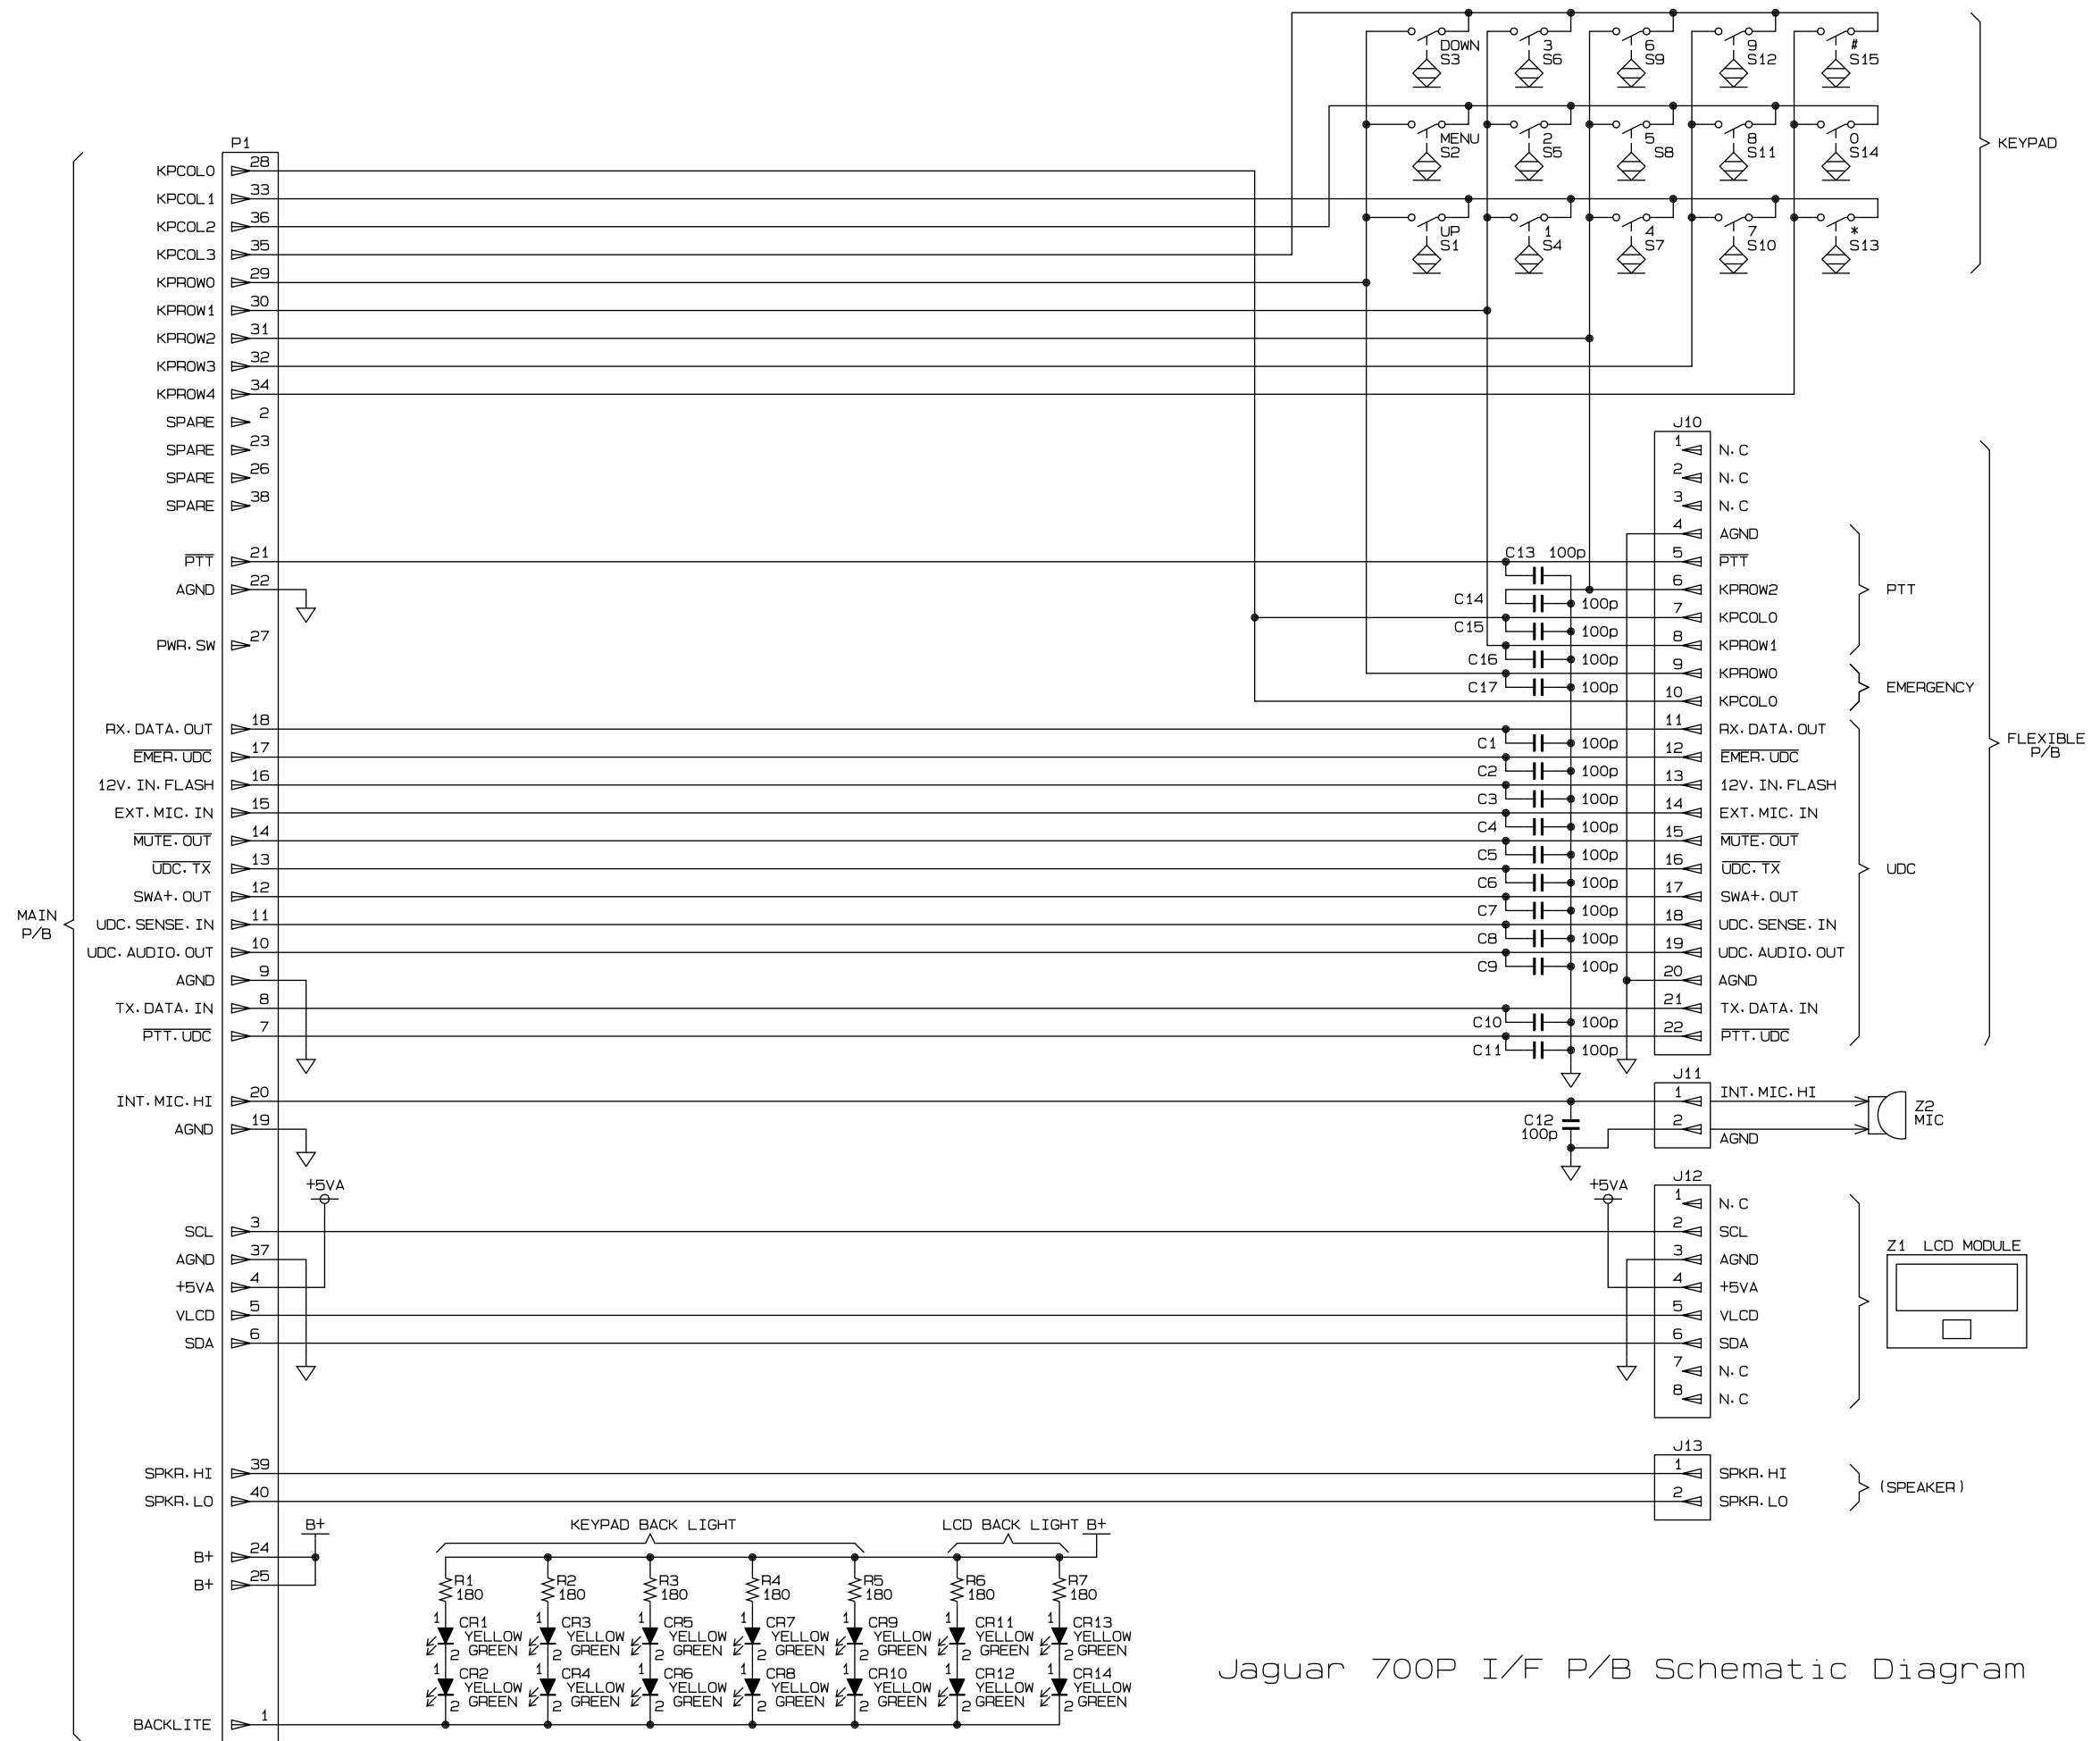

Jaguar 700P I/F P/B Schematic Diagram

