

These read this guide carefully before using the device to ensure your safety and correct use of the device. For information about the device configuration, please refer to the contract or information related to the device and the seller of the device to you.

The pictures in this guide are for reference only. If some pictures do not match the actual products, please refer to the actual products. Many network functions described in this document are special services provided by network service providers (ISPs). The availability of these network functions depends on the ISPs that provide the services to you.


No part of this Manual shall be reproduced, excerpted, copied up, modified, transmitted, translated into other languages, or used in whole or in part for commercial purposes in any form or by any means without the permission of the Company.

Item	Amount
A80 Unattend Payment Terminal	1
Mounting bracket	1
Screw	4
Quick operation guide(including warranty card and certification)	1

Item	Features
Light sensor and night vision	Identify people approaching, detect changes in lighting
Audio and video	Stream video, audio transcripts and generate voice commands
Camera	Identify people and objects in the room
Indicator lights	Identify people and objects in the room
Connects to other devices	Integrate into a smart home ecosystem
Voice control	Interacts with Alexa, Google, and Siri
It can control	It can control
OSM2 port	Connects to the network
USB port	For connecting USB
DC port	Power the equipment
MSB port	Power the equipment
USB port	For connecting USB
LAN port	For connecting Ethernet
MSB port	For connecting Ethernet
Display (DC port)	Used for device status and information
MSB port	Used for device status and information
USB port	Used for device status and information
LAN port	Used for device status and information

1 Install the SIM/ SAM (PSAM) card:
 ① Open the cover.
 ② Follow the **silkscreen** indication and place each of the needed SIM/ SAM card separately into the right slot following the direction as the picture showed.

[Cautions]
 (1) When installing or removing the SIM/ SAM card, please confirm that the device is power-offed, otherwise the cards may be damaged.
 (2) When installing the SIM/ SAM card, the chip faces toward the internal side of the device;
 (3) SIM/ SAM card can not paste stickers, tags, or other materials that may change the thickness of the card in order to prevent non-proper installation or no response.

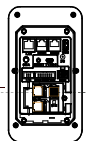

Troubleshooting	Troubleshooting
Failing to turn on the device when pressing the power key	1. The battery is depleted and cannot be recharged. Please charge the battery. 2. The battery is damaged. Please replace the battery.
Display screen shows error message about network or internet	1. The device may lose the ability of receiving signal when you are in a place where the signal is weak or there is no signal. Please move to a new place and try it again. 2. The network conditions may not be stable to use because of the lack of reservation. Please contact your service provider.
Touch screen slow or no response	1. If the device has a lock screen, and the screen resolution is incorrect, please try with the following steps: 1. Take off the protective film on the screen because it may affect the device recognize input correctly. We do not recommend to use any type of protective film for touch screens. 2. Please ensure that the screen is clean. Please use a soft, lint-free cloth to clean the screen. Do not use your fingers dry and clean when touching the screen. 3. Please reset the device to solve any type of temporary software errors. 2. If the screen is scratched or damaged, please contact the agent or distributor selling the device for repair.

Troublesh	Troubleshooting
Short standby duration	1. Please turn off some functions for saving power when do not using them, such as Bluetooth/WiFi/Data service, etc. 2. Turn off non-usage applications on the background will help to save power.
Cannot find another Bluetooth device	1. Please ensure that Bluetooth and wireless functions have been turned on. 2. Please ensure that the connected device has turned on the Bluetooth wireless functions. 3. Please ensure that the POS terminal and the connected device are within the maximum Bluetooth range of 10 meters.
Device is frozen or has serious mistakes	If the device is frozen or suspended, it may need to be shutdown or restarted to resolve the function. If the device is frozen or has slow reaction, please press the power key for 6 seconds, and the device will be restarted automatically.

If the problem remains the same, please contact customer

■ If you have any questions, please contact your local dealer.

Warranty card

Product Name: _____

Product Model: —

Warranty terms:

1. Our company will provide you with high quality after-sales service.
2. If the user causes product damage due to human factors, the company will charge maintenance fee when repairing.
3. Please take good care of this card, which will be the warranty basis of our company.

Certificate

Inspector: _____

Date: _____

Caution for use

Unauthorized disassembly of this device will cause the device to be rendered inoperable. If the power adapter plug or power cord is damaged, do not use it. Please do not use them in case of electric shock or the power adapter is damaged. Please do not use the power adapter (the pulling power cable), the power cord, or the power adapter with wet hand in case of short circuit, malfunction, or electric shock.

After stop using the power adapter and contact sales representatives for exchanging if the power adapter is caught in the rain, getting wet, or affected with damp.

The charge must be certified by BAA regulations and meet the charging specifications of the device.

Only the power adapter with the USB-IF identification, and the USB cables qualified with the USB-IF requirements can be used.

Operating environment

Do not use the device in thunderstorms which can cause lightning strikes.

Avoid pulling the terminal in direct sunlight, high temperature, moist, or dusty environment.

Do not touch the terminal.

Before insert the card, please check internal and around of IC card slot when you found some suspicious objects.

Address: 3/F, No.2 Building, Aiauo Information Park, No.18A,
Xingshihou Road, Haizhen District, Beijing.
Zip Code: 100195.
Email: info@vavastone.com.cn
Manufacture Name: Vavastone Electronic(Huizhou)Co.,Ltd.
Manufacture Address: 4/F, No.12 Building, Aerospace Science
And Technology Industrial Park, No. 51, Zhongkai Road, Huizhou
City, Guangdong Province, China.
Company Website: <https://www.vavastone.com.cn/en>

- A door or cover intended only for occasional use by the ordinary person such as for the installation of accessories, may not be suitable for use as a structural support for the removal and/or replacement of the door or cover.
- Do not place the device in a cold environment. When the temperature of the device rises, moisture may form inside the device, which may damage the control board.
- Please do not use any sharp objects to scratch the device. Please do not use any rough objects such as sandpaper, stone, non-professional cleaner may damage the device.
- Do not use any objects which may scratch the screen with pens, pencils or other sharp objects.
- Do not strike, throw, step on, or subject devices to severe physical shock.
- Accessories requirements
 - Please use the battery, power adapter and other accessories that are authorized by product manufacturer and match to the device. Using unauthorized and incompatible accessories may cause damage to the device and may lead to dangers.
 - If using unauthorized accessories, the user may discontinue warranty rights and customers' related regulations and may lead to lawsuits. If you want to cause authorized accessories, please contact your sales agent or distributors.
- Power adapter safety
 - When the device is charged, the power socket should be installed near the device and should be easy to touch. The charging area of the equipment must be clean and dry.

- When charging is over or uncharged, please cut off the connection between the power adapter and the device, and **please unplug the charger from the power socket.**
 - Please do not touch the metal shell of the power adapter. Once the metal shell of the adapter is damaged, please contact the agent or distributor so you can get the power adapter to be replaced.
 - **Battery safety**
 - Do not short circuit batteries, do not melt metal objects or other conductive objects in contact with the battery terminals.
 - Dispose of a battery under fire or a hot oven, or mechanically damage or cutting of a battery, that can result in an explosion.
 - Do not insert foreign bodies into the battery, immerse or immerse in other liquids, expose to fire, explosion or other hazard.
 - Leaving a battery in an extremely high temperature environment for a long time can result in an explosion or fire.
 - The use of **leakage of harmful liquids**
 - If there is a battery fluid leakage, avoid contact immediately or, in case of contact with eyes or skin, rinse with eyes or skin immediately with clean water.
 - Do not use damaged batteries.
 - When the standby duration of the battery is obviously shorter than the original specification, please change a new battery.
- Caution:**
- There will be a surge of explosion using the wrong model of battery.

FCC compliance statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver,


- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Quick Operation Guide

A80 Unattended Payment Terminal

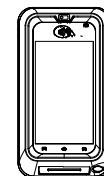

The pictures and descriptions in this guide are for reference only. Always consult a local