

Please read this guide carefully before using the device to ensure your safety and correct use of the device. For information about the device configuration, please refer to the contract or information related to the device and the seller of the device to you.

The pictures in this guide are for reference only. If some pictures do not match the actual products, please refer to the actual products. Many network functions described in this document are special services provided by network service providers (ISPs). The availability of these network functions depends on the ISPs that provide the services to you.

No part of this Manual shall be reproduced, excerpted, backed up, modified, transmitted, translated into other languages, or used in whole or in part for commercial purposes in any form or by any means without the permission of the copyright owner.

Components Name	Quantity
A99 Android POS terminal	1
Lithium battery	1
Power adapter	1
USB cable	1
Quick operation guide (Certificate of qualification and Warranty card)	1

Diagram illustrating the controls and features of the Sony Cyber-shot DSC-WX100 camera:

- ① Connection port cover
- ② Flipping cover switch
- ③ Zoom lever
- ④ Connection indicator light
- ⑤ Front camera
- ⑥ Magnesium case cover
- ⑦ Display screen
- ⑧ Function key
- ⑨ Type-C (USB) port
- ⑩ Battery charging indicator light
- ⑪ Viewfinder
- ⑫ Flash light
- ⑬ Rear Camera
- ⑭ Touchscreen
- ⑮ Power key
- ⑯ Call city bracket
- ⑰ SD card slot
- ⑱ Slot cover
- ⑲ Micro slot
- ⑳ IC card reader

[illegible]

Take out the POS terminal, lithium battery, the power adapter, and other necessary parts from the packing box, then follow the steps below for a quick installation.

1 Install the printing paper:

- ① Pull up the printing paper container cover to open the container.
- ② Strip off the printing paper. Hold one side of the paper and put it into the container. Leave a bit of the paper on the top of the scudding knife.
- ③ Close the cover when hearing the "tick" sound.

[Cautions]

Please be careful with the direction when installing the thermal printing paper, and please do so by following the figure below, otherwise it will cause a failure of printing.

【 Cautions 】

- 1) When installing or removing the SIM/ SMM card, please confirm that the device is power-offed, otherwise the cards may be damaged;
- 2) When installing the SIM/ SMM card, the chip faces toward the internal side of the device;
- 3) SIM/ SMM card cannot paste stickers, tags, or other materials that may change the thickness of the card in order to prevent non-smooth installation or disassembly.



Install the battery:


1. Open the battery cover;
2. Insert the plug side of the battery into the battery socket;
3. Put the battery into the battery container;
4. Close the battery cover.

Remove the battery:

1. Open the battery cover after power-off;
2. Pull off the battery by grasping the line at the plug and pulling it up and off;
3. Gently remove the battery from the battery container.



The diagram illustrates the process of removing the battery. It shows a top-down view of the battery compartment with the cover open. A hand is shown pulling the battery out of the compartment by the top edge, which is connected to a plug. The battery is shown being lifted out of the compartment.

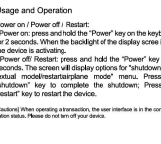

Troubleshooting	Troubleshooting
Falling to sleep on the device when pressing the power key	The battery is exhausted and must be recharged. The battery software is in hibernation. Please recharge the battery.
Display screen shows abnormal screen such as network error	The device may meet the ability shortage signal when you are in a place where the signal is weak or the power is unstable. Please restart and try again. The device may not be able to use because of the lack of resources. Please restart your service providers or more information.
Screen shows slow or frozen screen	If the device has a touch screen, and the screen operation is incorrect, please try the following: 1. Turn off the protective film on your screen because it may prevent the device recognize the touch operation. 2. Turn off the screen lock. 3. Turn off the screen lock and touch the screen for protection first for touch screen. 4. Press the power key for 10 seconds to restart the device. 5. Press the power key when the screen is not always dirty. 6. When often touching the screen, please clean your finger.
Device is frozen or has service interrupts	Please restart the device in the following way: 1. Press the power key for 10 seconds. 2. If the screen is scratched or damaged, please contact the agent or distributor where the device is used. 3. If the device is frozen or suspended, it may need to be shut down. 4. Press the power key for 10 seconds to restart the device. 5. If the device is frozen, it may need to be restarted. 6. If the device is frozen, it may need to be restarted. 7. If the device is frozen, it may need to be restarted. 8. If the device is frozen, it may need to be restarted. 9. If the device is frozen, it may need to be restarted. 10. If the device is frozen, it may need to be restarted.

If you have any questions, please contact your local dealer.

Warranty card

Product Name: _____

Product Model: _____

Warranty terms:

1. Our company will provide you with high quality after-sales service.
2. If the user causes product damage due to human factors, our company will charge maintenance fee when repairing.
3. Please take good care of this card, which will be the warranty basis of our company.

Certificate

This product has passed inspection and is authorized for factory release.

[illegible]