

Components Name	Quantity
A99 Lite Android POS terminal	1
Lithium battery	1
Power adapter	1
USB cable	1
Quick operation guide (Certificate of qualification and Warranty card)	1

[illegible]

Take out the POS terminal, lithium battery, the power adapter, and other necessary parts from the packing box, then follow the steps below for a quick installation.

- 1 Insert the SIM/SAAM/PSAM card.
- ① Open the battery cover.
- ② Follow the siliconicon indication and place each of the needed SIM/SAAM card separately into the right slot following the device as the picture showed.

[Cautions]

- 1 When installing or removing the SIM/SAAM card, please confirm that the device is power-offed, otherwise the cards may be damaged.
- 2 When installing the SIM/SAAM card, the chip faces towards the same side as the device.
- 3 SIM/SAAM card cannot paste stickers, tags, or other materials that may change the thickness of the card in order to prevent non-smooth installation or disassembly.

Usage and Operation

Power on / Power off / Restart:

- **Power on:** press and hold the "Power" key on the keyboard for 2 seconds. When the backlight of the display screen is on, the device is activating.
- **Power off / Restart:** press and hold the "Power" key for 2 seconds. The screen will display options for "shutdown/von line" and "restart". Press the "shutdown" key to complete the shutdown; Press the "restart" key to restart the device.

[Caution] When operating a handheld, heavier interface is in the control column state. Please do not turn off your device.

Trainers	Trained Technology
Falling to the ground after pressing the device once	1. The battery is exhausted and cannot be recharged. Please check the battery. 2. The device is not fully charged. Please charge the battery.
Display screen shows no signal when the device is turned on	1. The device may not be able to receive signal when you are in a place where the signal is weak. Please move to a place where the signal is strong and try again. 2. The device may not be able to receive signal because of the kind of network. Please contact the service providers for more information.
Touch screen shows slow or unresponsive	1. There may be a touch screen, and the touch screen needs to be touched, please try the device again. 2. Turn off the application if on the screen because it may prevent the device recognize touch screen. Please try again. 3. Please try to use the touch screen with any type of protection film for touch screen. Please remove the protection film from the screen without glass film. Please keep fingers dry when touch when handling the device. 4. Please proceed if the device is solved any type of temporary software issues. 5. If the screen is scratched or damaged, please contact the agent or distributor selling the device to you.
Device is frozen or has service malfunctions	1. If the device is frozen or unresponsive, it may need to be restarted or reset. 2. Please restart the device. If the screen is frozen, please hold the power button for 10 seconds, and the device will be restarted automatically.

If you have any questions, please contact your local dealer.

Warranty card

Product Name: _____

Product Model: _____

Warranty terms:

1. Our company will provide you with high quality after-sales service.
2. If the user causes product damage due to human factors, the company will charge maintenance fee when repair.
3. Please take good care of this card, which will be the warranty basis of our company.

Certificate

Inspector: _____

Date: _____

[illegible]