


Bluetooth Connection

10. How to Connect the Blu-Bot

- Search and download the Blu-Bot App in App store or google play store.
- Turn on the Blu-Bot.
- Turn on your mobile device.
- Go to "Setting" menu, turn on Bluetooth function, search and connect with the device "BLU-BOT".
- Then launch the Blu-Bot app to play with the Blu-Bot via Bluetooth control.

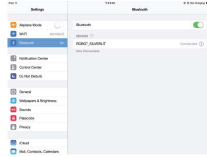

11. Start the App

- Start up the Blu-Bot app and there are 3 icons in main page.
- Link**
Press to enter into main menu page.
- Info**
Press to enter information page.
- Setting**
For option setting.



12. Link to Blu-Bot

- Press the "Link" button.
- The screen will show main menu with following 4 mode selections.
- Program mode
- Gesture Control mode
- Robot Dance mode
- Voice Change mode



13. App - Program mode

- Drag and drop the "Walking" icon to Column A.
- Drag and drop the "Head movement" icon to Column B.
- Drag and drop the "Facial Expression" icon to Column C.
- Drag and drop the "Clear" button to Column D.
- Press "Start" button to send commands to the Blu-Bot.
- Press "Stop" button to stop the program.
- Press "Save" button to save the program.
- Press "Load" button to load the program.
- Press "Play" button to start the program.



14. App - Gesture Control mode

- Follow the gesture diagram below and press the "Start" button to control the Blu-Bot's movement.
- Press "Talk" button to record your voice. Then press "Play" button to playback the recorded voice.
- Press "Clear" button to clear up the recorded voice.
- Press "Save" button to save the recorded voice.
- Press "Load" button to load the recorded voice.
- Press "Play" button to start the playback.
- Press "Stop" button to stop the playback.
- Press "Save" button to save the recorded voice.
- Press "Load" button to load the recorded voice.
- Press "Play" button to start the playback.
- Press "Stop" button to stop the playback.



15. App - Robot Dance mode


- Press "Dance Music" button to select one of the dance music.
- Press "Start" button to start the dance.
- Press "Stop" button to stop the dance.
- Press "Save" button to save the dance.
- Press "Load" button to load the dance.
- Press "Play" button to start the dance.
- Press "Stop" button to stop the dance.
- Press "Save" button to save the dance.
- Press "Load" button to load the dance.
- Press "Play" button to start the dance.
- Press "Stop" button to stop the dance.



16. App - Voice Change mode



- Press "Record" button to record a message.
- Move the voice change cursor to the position you want to press "Voice Change" button to record effect.
- Press "Play" button to start voice change playback.
- Press "Voice Change" button to change the recorded voice.
- Press "Save" button to save the voice change message.
- Press "Load" button to load 3 of the saved messages.

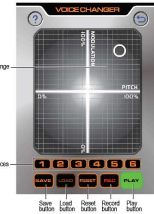

17. Operating Tips

- Only operate the Blu-Bot on flat, smooth (but not slippery) and dry surfaces or low pile carpets. Hair, carpet or dirt can affect the operation of the Blu-Bot.
- Do not operate the robot on sand or through water or snow. If your Blu-Bot gets wet, wipe it with a towel and allow it to dry completely.
- Do not operate near concrete walls which may disturb Bluetooth transmission.

18. Troubleshooting

Symptom	Cause	Solution
Blu-Bot does not move or react properly to the remote dance.	High frequency interference occurred near to high-voltage lines, transformers and area of power lines. - Bluetooth, iPhone or iPad batteries are weak. - Bluetooth is not in connection with your robot. - The top is in stand-by mode.	Avoid these if possible, or choose another place to operate the vehicle. Switch off the top and turn it on again. Recharge the battery. Press or Pull Change all buttons in vehicle with new volume battery. Recharge your iPad/iPhone or iPad connects with your vehicle to Bluetooth.
Loss of control.	Bluetooth signal of remote device was obstructed.	Play in a more open place.
The Blu-Bot moves slowly, erratically or does not move.	Power switch is not in "ON" position. Wheel calibration.	Switch on the power. Recharge the battery.
Bluetooth connection unsuccessful.	Other Bluetooth device connected.	Disconnect other Bluetooth device and try again.