

A Installing batteries in the transmitter:

- 1 - Open the battery compartment.
- 2 - Insert batteries, respecting the + and - polarities.
- 3 - Replace the cover.

B Installing the vehicle battery:

- 1 - Make sure the ON/OFF switch is set to OFF.
- 2 - Open the battery compartment.
- 3 - Insert AA batteries, respecting the + and - polarities.
- 4 - Replace the cover.

Inflate tires with air pump !

Please pump the tires before using. The air pump just for inflate tires on this vehicle only, please do not use for another purpose.

C Starting:

- 1 - If necessary, screw the antenna into the hole on the top of the remote control.
- 2 - Extend the antenna fully. Start the car.
- 3 - To move the car forwards or backwards, push the throttle lever forwards or backwards or press the trigger (depending on the model).

- 4 - To turn the vehicle left or right, press the steering lever to the left or right. Or, depending on the model, turn the steering wheel or move the 2 levers in opposite directions to turn.
- 5 - To stop the vehicle, release the throttle lever.
- 6 - If the car tends to drift to the left or right on its own, move the trimmer (beneath the car) to the right or left respectively to adjust the steering.
- 7 - For best performance, always point the antenna towards the car.

TROUBLESHOOTING GUIDE :

- Make sure the vehicle power is on.
- Make sure the batteries in transmitter and vehicle have sufficient charge.
- Check if the batteries in transmitter and vehicle are inserted with correct polarity.
- Check if the distance between transmitter and vehicle will not exceed more than 20m.
- Two or more vehicles of the same frequency will interference with each other. In such a case, move to another place or try after a while.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Silverlit®

SLT (USA) Inc. 21680 East Copley Drive, Suite 220 Diamond Bar, CA 91765, U.S.A. Tel: (877) 502-6687
©2017 Silverlit. All rights reserved.

P 4

EI-7583

INSTRUCTIONS

EXOST™

360 TORNADO

This product complies with the 2006/95/EC standard



MRF No. SK17004

 
Age category: 5+

Manufacturer:
Silverlit Toys Mfy Ltd.
Rm 1102, 98 Granville
Road, Kowloon,
Hong Kong




WARNING:
CHOKING HAZARD- Small parts.
Not for children under 3 years.

The symbol showing a crossed-out rubbish bin indicates that ordinary batteries (non-rechargeable batteries, button batteries, etc.) are not to be disposed of in the household waste. Batteries are dangerous for health and the environment. Help to protect the environment against health risks. Ask your child to dispose of batteries clearly by taking them to your local collection points. In this way, batteries can be recycled safely.




 
Waste electrical and electronic equipment (WEEE):
When this device reaches the end of its life, please remove all batteries and dispose of them separately. Take electrical devices to a collection centre for electronic equipment and household appliances. Other components can be disposed of with household waste.

**SAFETY CIRCUIT:**

During use, the internal power in the electric circuit can get quite high (for example during a 360 spin). In such a case, safety circuit will shut down the motor and the car will stop moving. This is not a defect but a safety measure to protect the electronic circuits. After this period, the car will resume normal operation.

Safety precautions:

  - Parents: please read the instructions with your child before using the product for the first time.
- Do not use the vehicle with the remote control before the child has reached the age of 5 years.
- Keep hands, hair and clothing away from moving parts when the toy is operating.
- Do not use the vehicle with the radio control in the vicinity of people, animals and furniture.
- Warning: any change or modification made to this product that is not expressly approved in the relevant section of the declaration of conformity must be made under the supervision of a qualified person.
- The wires are not to be inserted into socket outlets and rechargible batteries.

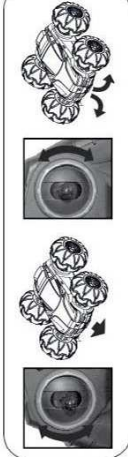

Please keep these instructions as they contain important information.

GB ENGLISH

Care and maintenance:

- Always remove the batteries from the toy. It is not used for a long time.
- Do not use the toy in the rain or in wet clothes.
- Keep the toy away from direct sources of heat.
- Do not immerse the toy in water, as this could damage electronic components.
- Do not use the batteries when they become less powerful.
- Operation temperature 5 - 35°C.

Receiver Category 3

Batteries required for the car:

Power supply: DC 12V / 18W / 8x 1.5V AA / LR6 / AM3 included

Batteries required for the transmitter:

Power supply: DC 9V / 0.5W; 1x 9V 6F22 / 006P included

P 2

P 3