


TURBO TransZorner™

EI-92

Contents:

- Turbo TransZorner Vehicle
- Transmitter
- Removable battery drawer for 6 "AA" size batteries
- Instruction manual
- Plastic antenna tube
- Antenna

1 Name of Parts

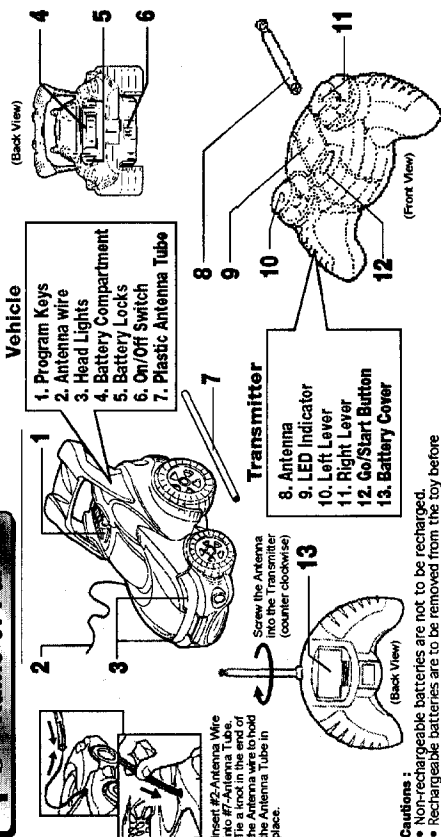

- Cautions:**
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the toy before being recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - If using rechargeable battery, it must be NiCd in type and have the capacity below 700mAh.
 - Different types of batteries or new and used batteries are not to be mixed.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with correct polarity.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short-circuited.

- Notes:**
- Parental guidance is recommended when installing or replacing batteries.
 - New and alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
 - You are advised to replace with new batteries as soon as the function becomes impaired.
 - When used in vicinity of control or uncontrolled running of vehicles, electronic devices or other radio control devices, monitors, electronic devices or other radio control devices, frequency 27MHz, another one with frequency 49MHz, if you buy 2 vehicles with the same frequency, their signals will interfere.
 - Users should keep and retain this information for future reference.
 - Users should keep strict accordance with the manufacturer's instructions while operating the product.

Power Supply:

DC 9V, 6.3W	Power Supply
6 x 1.5V "AA" LR6 / AM3	Rating
Batteries	Requires
6 x "AA" size alkaline batteries	Requires
(not included)	

WARNING:

CHOKING HAZARD - Small parts.
Not for Children under 3 years.

2 Battery Installation

Batteries requirement:

- Vehicle: 6 x "AA" size alkaline batteries (not included)
- Transmitter: 1 x 9V alkaline battery (not included)

Vehicle:

- Make sure the power switch is in the "OFF" position.
- Slide the battery compartment out by turning the battery locks at both sides as indicated.
- Install 6 x "AA" size batteries with polarity as shown inside battery compartment.
- Insert Battery drawer and close the battery compartment by turning the battery locks in opposite directions.

Transmitter:

- Remove the battery cover by using a coin
- Install 1 x 9V size alkaline battery as indicated with polarity as shown inside battery compartment.
- Replace the battery door back in position.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Trouble Shooting:

SYMPTOM	PROBLEM CAUSE	CORRECTION
Vehicle runs slowly or does not run.	• Loose battery connection or main switch not in the "ON" position. • Batteries not placed in compartment correctly. • Batteries are exhausted.	• Check battery connector and vehicle main switch. • Check that the batteries are put in compartment correctly following "+, -" signs • Replace all with new "AA" size batteries.
Vehicle doesn't work after going through water.	• Water in electronics area.	• Vehicle will take several hours to dry.
Error sound during programming.	• Program Actions entered exceed more than 32 steps	• Key-in no more than 32 steps
The car does not receive any command operations	• Batteries of the vehicle are running low or exhausted.	• Replace all 6 "AA" size new batteries.
Loss of control	• Another radio controlled vehicle using the same frequency is operated near this vehicle.	• Move to another area, away from radio frequency interference from another device.

Silverlit®

Silverlit Toys (U.S.A.) Inc. P.O. Box 90808, City of Industry, CA 91715-0808
©2000 Silverlit Toys Manufacturing Limited. All rights reserved.