


『This manual was prepared for the certification test.』

■ Product Specifications

Item		365Plus
Size	Exterior Unit	58mm(W)×113mm(H)×16.8mm(D)
	Interior Unit	70.4mm(W)×163.8mm(H)×38mm(D)
	Card	85.5mm(W)×54.0mm(H)×0.9mm(D)
Voltage		4 AA Alkaline 1.5V Batteries (LR6) (6V)
Emergency Power Source		9V Battery(6LF22) (Separately sold)
Battery Life		10 Months (based on an average of 6 uses per day)
Support Card Standard		ISO14443A (Mifare®), ISO 15693

■ Exterior/Interior Parts

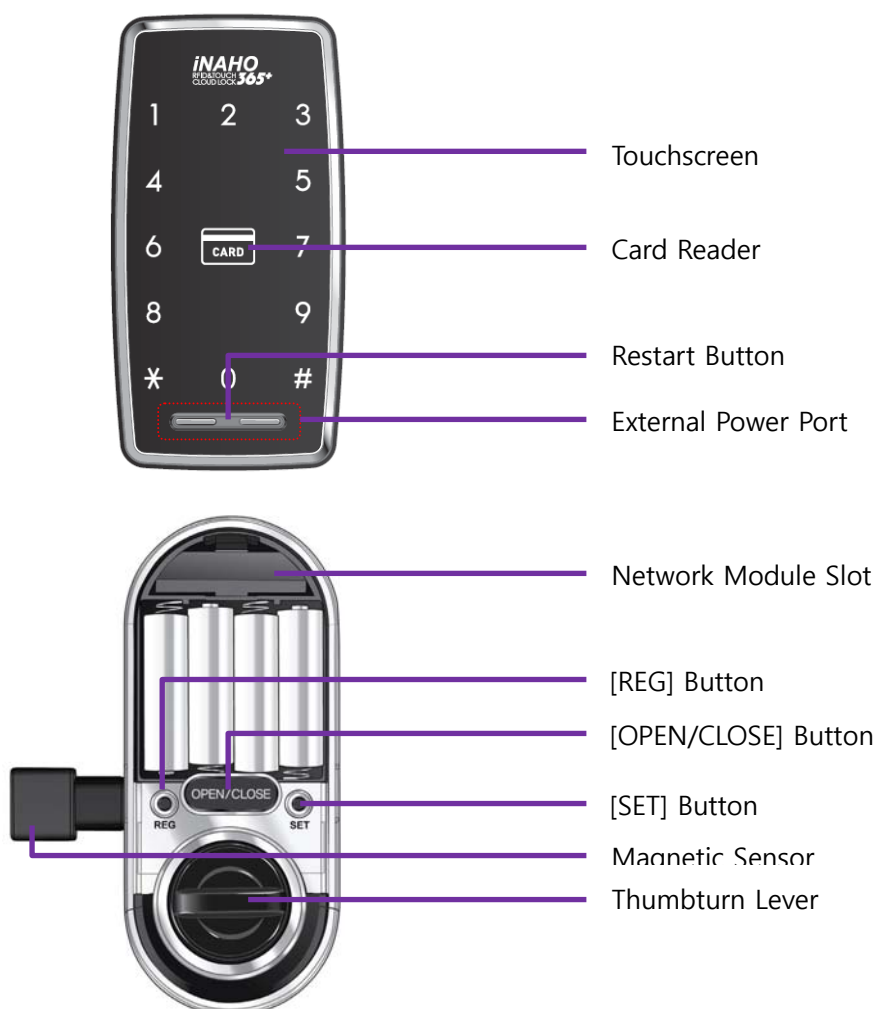

“You could register the Master card and user PIN code/card after changing default Master PIN code and user PIN code.”

■ Basic Functions

1. Initialization

1.1 User Initialization

All registered User data(user PIN Code/Card) will be deleted, and Super User PIN Code is set to '5678'. The Master data and Paring information aren't delete.

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [4] button.
- ③ Press the [*] button after pressing the [3] button.
- ④ Enter a Master PIN Code or Super User PIN Code, and press the [*] button.

1.2 Master Initialization(Reset to Factory Default)

All registered Master/User data will be deleted, and Master PIN Code is set to '1234', User PIN Code is set to '5678'. Also Paring information is deleted.

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [4] button.
- ③ Press the [*] button after pressing the [1] button.
- ④ Enter a Master PIN Code, and press the [*] button.

2. Changing the Master PIN Code

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [1] button.
- ③ Press the [*] button after pressing the [2] button.
- ④ Enter the current Master PIN Code, and press the [*] button.(default '1234')
- ⑤ Enter the new Master PIN Code, and press the [*] button.(4~10digits)

3. Registering a Master Card

You can register up to 9 Master Cards.

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [1] button.
- ③ Press the [*] button after pressing the [1] button.
- ④ Enter the Master PIN Code, and press the [*] button.
- ⑤ Press the [*] button. Then ID Number is displayed. (242~250)
- ⑥ Place the Card on the Card Reader.
- ⑦ Press the [*] button for the additional registration or press the [REG] button to quit.

4. Deleting a Master Card

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [1] button.
- ③ Press the [*] button after pressing the [3] button.
- ④ Enter the Master PIN Code, and press the [*] button.
- ⑤ Enter the ID Number(242~250) and press the [*] button. Or place the card to be deleted.
- ⑥ Enter another ID Number or press the [REG] button to quit.

5. Changing the User PIN Code

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [2] button.
- ③ Press the [*] button after pressing the [2] button.
- ④ Enter the current User PIN Code, and press the [*] button.
- ⑤ Enter the new User PIN Code, and press the [*] button.(4~10digits)

6. Registering a User PIN Code/Card

You can register up to 240 User Data(PIN Code/Card).

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [2] button.
- ③ Press the [*] button after pressing the [1] button.
- ④ Enter the Super User PIN Code, and press the [*] button.
- ⑤ Press the [*] button. Then ID Number is displayed. (1~240)
- ⑥ Enter a new User PIN Code and press [*] button. Or place the Card on the Card Reader.
- ⑦ Press the [*] button for the additional registration or press the [REG] button to quit.

7. Deleting a User PIN Code/Card

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [2] button.
- ③ Press the [*] button after pressing the [3] button.
- ④ Enter the Super User PIN Code, and press the [*] button.
- ⑤ Enter the ID Number(1~240) and press the [*] button. Or place the card to be deleted.
- ⑥ Enter another ID Number or press the [REG] button to quit.

8. Pairing/Unparing with a Home Controller

8.1 Pair to a Home Controller

After pairing with a home controller, you can use User Card.(Registration/Enterance)

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [3] button.
- ③ Press the [*] button after pressing the [1] button.

8.2 Check the Completion of Paring

This is to check if “Pair to a Home Controller” is successfully completed.

- ① Press the [REG] button.

- ② Press the [*] button after pressing the [3] button.
- ③ Press the [*] button after pressing the [2] button.

8.3 Unpair from a Home Controller

After unpairing the door lock from a home controller, it will no longer be remotely-controlled via the home controller. And you couldn't use User Card.

- ① Press the [REG] button.
- ② Press the [*] button after pressing the [3] button.
- ③ Press the [*] button after pressing the [3] button.

9. Opening the Door with a PIN Code/Card

- ① Touch the [Touchscreen].
- ② Enter the PIN Code and press the [*] button. Or place the Card on the Card Reader.
- ③ The door opens within one second.

■ Additional Function

10. Privacy Mode Functions

Press and hold the [OPEN/CLOSE] button for more than five seconds, if five beeps deactivate the Keypad. As it is set from the inside, provides a secure lock for the convenience of the occupant(s). Privacy mode disables remote control capabilities.

11. Setting the Security Function

Function that allows alarm to be rung in case the door lock is manipulated from the inside.

And it makes difficultly to open through Thumbturn Lever.

- ① Touch the [Touchscreen].
- ② Press the [#] button for 3 seconds.
- ③ Enter the PIN Code and press the [*] button.


12. Lockout Mode

When more than 5 failed authentication attempts with unregistered PIN Code/Cards occur, the alarm sound is generated, and the lock is deactivated for 3 minutes.

13. Intrusion Detection Function

When the Interior Unit is forcibly detached while the door is locked, it is detected by the magnetic sensor, the alarm sounds. The Intrusion Detection function is a basic function and cannot be disabled.

14. Additional Function Mode

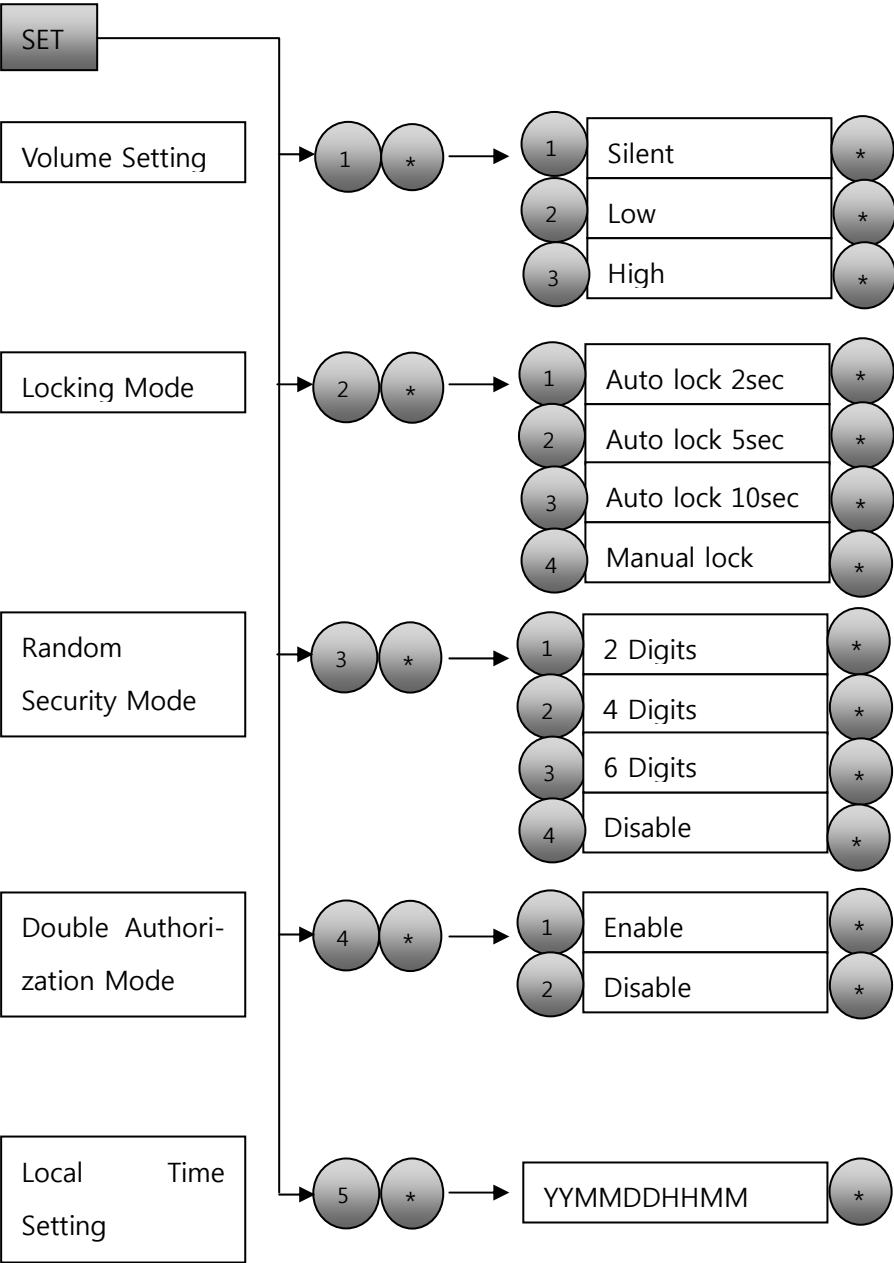

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

.