

# KG Racer™

## OPERATING INSTRUCTIONS

### Remote Controller

- Unscrew back compartment with a phillips screwdriver to open battery door
- Install 1-9V battery with polarity as shown inside battery compartment
- Extend antenna
- Only different frequency cars can be operated at the same time

 
### Vehicle

- Unscrew plastic holder attached to back of vehicle with a phillips screwdriver
- Install 2-AAA batteries with polarity as shown inside battery compartment
- Turn switch to ON to start vehicle
- Model#4203-Bee stinger stored with the operating instructions. Open & snap into hole in rear

The radio circuitry in your vehicle and remote controller is sensitive. Radio interference can affect the control of your vehicle. You may have to choose another location to operate your vehicle.

**Toll Free KG Racer Hot Line: 866-KG Racer (347-2237)**

**PLAY** with knobs for wheelies, turns, and spins



Copyright ©2003 Kid Galaxy, Inc.

## USER MANUAL

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

 
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment, off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.


Item No.: 4100/4101/4102/4103/4104/4105

4201/4202/4203/4204


4301/4302/4303

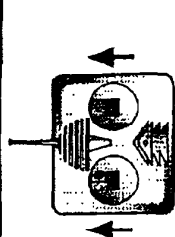


**FORWARD:**  
push both knobs forward

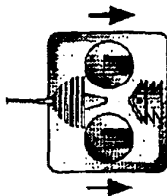 

**REVERSE:**  
pull both knobs

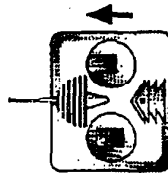 

 **SPIN LEFT:**  
push right knob forward

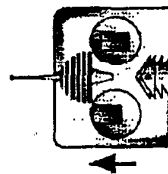

**SPIN RIGHT:**  
push left knob forward