

 


User Menu

Getting to know your new phone

Congratulations on the purchase of your new Mobicom phone!

Your Mobicom phone is an advanced communications device with many features and functions. Please take a moment to familiarize yourself with the capabilities and options of your Mobicom phone. Your familiarity with the operation of your Mobicom phone will help you enjoy it in a safe and productive manner

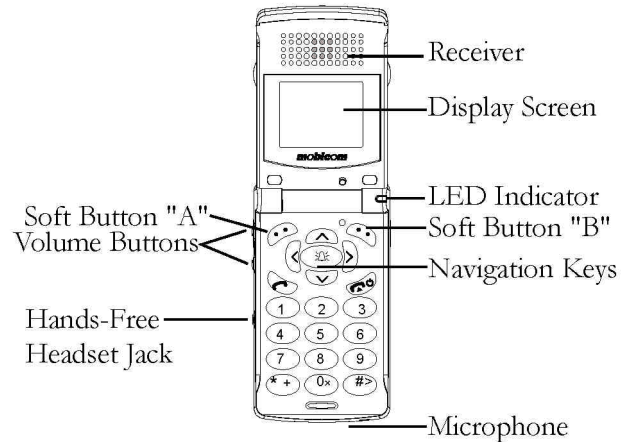

Display Icons



Audio Settings

Battery level and charge

Call Divert Activated

Divert

Incoming call and on-call indicator

Keypad locked

Memo or alarm set



Messages



Phone book



Phone number saved in phone



Phone number saved in SIM card



Secretary



Settings



Signal strength indicator



Safe use of your new phone

Please observe the following guidelines for safe and responsible operation of your cellular phone



Follow all guidelines for safe and legal use of your phone. See detailed information in this manual.



Use caution while placing or receiving calls while driving. You should try to find a safe place to pull over and stop driving before placing or receiving a phone call while driving. The use of a hands free headset is required for cell phone use while driving in some areas.



Keep your phone switched off near blasting areas where explosives are being detonated. Always observe local rules and regulations that may restrict or prohibit phone use in some areas.



When in hospitals or near medical equipment local rules and regulations may require that your phone be switched off.



FCC regulations require that your phone be switched off while on airplanes. Wireless phones could cause interference with the airplanes equipment or air traffic control signals.



Keep your phone switched off while refueling. Do not use your phone while near fuel or flammable chemicals.



Avoid contact with your phones antenna while the phone is in use.



All wireless phones, including this one may receive interference from other sources, which may affect the phones performance.

Table of contents

Getting to know your new phone 2

Display Icons 3

Safe use of your new phone 5

Table of contents 6

Key Features of the Mobicom C6088 & C6288
Phone 11

Getting Started 13

UnPacking 14

Contents 14

Your new phone's box should contain the following items: 14

Installing your SIM Card 14

Charging your phone's battery 15

Connecting a hands free headset
adapter to your phone 16

Using your Phone 17

Turn phone on 17

Welcome Screen 17

Menu: 17

Navigation Keys: 17

Menu Tree 19

Messaging Management- Stay Connected with Mobicom 19

Phone Book Management 20

Audio Settings 21

Diverting your Calls 22

- Settings 23
- Secretary 25
- Making and Recieving Phone Calls 27
 - Dial By Number 27
 - Dial By Name 27
 - Receive Calls 28
 - Flip Open Answer: 28
 - Any Key Answer 28
- Audio Settings 29
 - Audio Settings 29
 - Setting volume 29
 - Setting Speach Volume 29
 - Setting Ringer Volume 29
 - Setting Tone Volume 30
 - Settinging a Ringer Type 30
 - Setting Tone Types 31
 - Setting Key Tones 31
 - Setting Info Tones: 31
 - Setting the SMS Rx. Tone 31
 - Setting the Serve Tone: 31
 - Setting One Min Beep Tone 32
- View Missed, Received and Placed Calls 33
 - Viewing Missed Calls 33
 - Viewing Missed Call details: 33
 - Copying Missed calls to Phone Book: 34
 - Editing Missed Calls: 34
 - 34
 - Deleting Missed Calls: 34
 - There are several ways to delete the details regarding a Missed call from your phone's memory: 34
 - Viewing Received Calls 35
 - Viewing Received Call details: 35
 - Copying Received calls to Phone

Book: 35

Editing Received Calls: 35

Deleting Received Calls: 36

Viewing Placed Calls 36

Viewing Placed Call details: 36

Copying Placed calls to Phone

Book: 37

Editing Placed Calls: 37

Deleting PlacedCalls: 37

Voice Mail 39

Managing Voice Mail: 39

Short Messaging Service (SMS) 41

Reading Messages: 41

Reading messages in your INBOX

41

Reading Messages in your Outbox

42

Composing Messages 42

Deleting Messages 43

Delete ALL messages 44

Deleting Messages in your Outbox:
44

Delete a particular Message 44

Delete ALL messages 45

Checking available message memo-
ry space 45

Message Set-Up 45

Message Display: 45

Message: 45

Message deliverability 46

Message Status 46

Broadcast: 46

Phone Book 47

Searching by name: 47

Creating an entry in the phone book:

47

Deleting an entry in the phone book:

48

Copying a Phone book entry from
the SIM card to the phone: 48

Viewing SIM card and Phone phone
books: 48

Checking available phone book
memory space: 48

Entering your phone's number into
phone book: 49

One-Touch Dialing: 49

Changing Phone Settings 51

Call Settings 51

Flip Open Answer: 51

1 Touch Dial 51

Auto Redial 52

Any Key Answer 52

Call waiting: 52

Clock Setup 53

To Set The Time 53

Setting The Date 53

Setting Time Format 53

Setting Time Zone: 53

Setting Daylight Savings: 53

Screen Setting 54

Setting the Backlight 54

Setting the Contrast 54

Language Settings 55

Setting the Language: 55

Setting the Greeting on your phone
55

Setting the default phone 55

Setting the Security features on your
phone: 55

Setting the Network details on your
phone: 55

Secretary Mode 57

- Entering A Memo 57

- Setting an Alarm 57

- Setting Area Code Search 58

- Using the Calculator Utility 58

- Using the Global Time Clock 58

Diverting Messages 59

- Diverting all calls: 59

- Diverting calls when phone is in use:
60

- Diverting calls when there is no re-
ply: 60

- Diverting calls when phone is off:
60

- Status of diverting calls: 61

- Cancel diverting calls: 61

Care and maintenance of your new phone 65

- Batteries care and maintenance 67

- Warranty 69

Troubleshooting 63

Key Features of the Mobicom C6088 & C6288 Phone

Your feature-packed MobiCom phone is the world's smallest, lightest cellular phone.

Size L x W x H (mm)	C6088 68 x 38 x 20
	C6288 68 x 38 x 24
Weight	C6088 74 g
	C6288 74 g
2-band	(900/1800MHz or 900/1900MHz)
Talk time	up to 3 h 45 min
Standby time	up to 115 hours
Charging time	2.5 hours
Multi-party conversation	Yes
Connection tone	Yes
Ringing tones	32
One-key ringer stop	Yes
Internal vibrator	Yes
Phone book copy	(phone <--> SIM)

Phone book size	(phone) 200
Phone book size	(SIM) defined by operator
Short message service (SMS)	Yes
Predictive text Input	Yes
Preset SMS	Yes
SMS auto-display	Yes
SMS delivery report	Yes
Recent calls list	
Dialed	25
Received	25
Missed	25
Pager mode	Yes
Clock and clock alarm	Yes
Calendar	(1900 - 2049)
Calculator	Yes
Global time	Yes
Area code search	Yes

Getting Started

UnPacking

Carefully unpack and inspect the contents of your new phone's box.

Contents

Your new phone's box should contain the following items:

Phone
Battery
Charger
User Manual
Neck Strap
Hands Free Kit

Installing your SIM Card


Depending upon how you purchased your Mobicom phone, it may or may not have come with a SIM card already installed. The SIM card acts as the heart of the phone, providing the ability to store both your phone's own number as well as those numbers that you frequently dial.

If the SIM card is not installed, please follow these instructions::

1. Remove the battery from the back of the phone.
2. Slide the SIM card into the slot, with the electrical contacts facing inward.
3. Move the latch downward to hold the SIM card in place.
4. Put the battery back into position.

Warning: The SIM card is a delicate piece of precision electronic hardware; care should be taken while handling it to prevent damage. Avoid excessive or unnecessary handling of the SIM card. Never touch the golden electrical contacts on the SIM card with fingers or other objects. Never bend the SIM card. Never force the SIM card into its connector; when properly aligned the card should slide in effortlessly

Installing SIM card In new Phone.

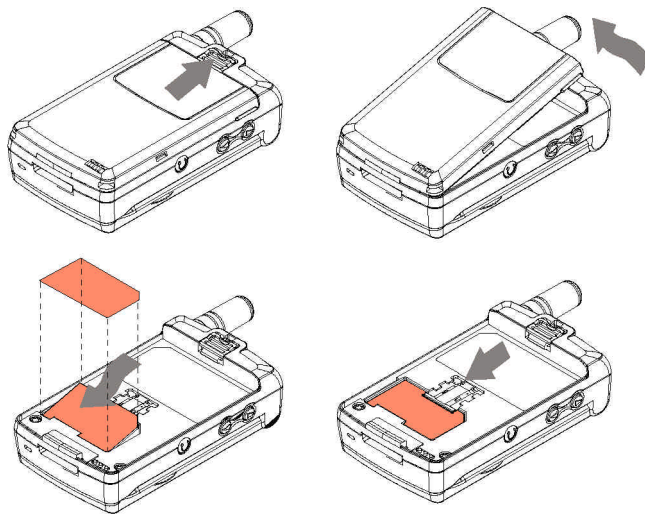


Charging your phone's battery

To ensure proper operation, your new phone's battery should be fully charged prior to its first use. Charge the battery by using the enclosed MobiCom AC wall charger or the MobiCom mobile charger. It may take up to three hours to fully charge your phone's battery.

Gently align and insert the charger into the phone by pressing the release buttons on the side of the charger... place the , until you hear it click into place.


.Gently connect charger to Phone.

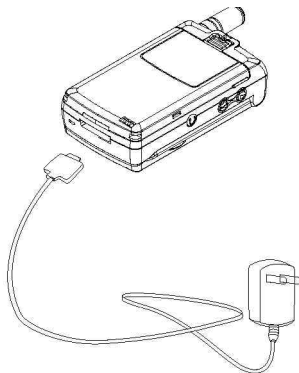

Connecting a hands free headset adapter to your phone

Blah BLah BLah

hands free plug-in

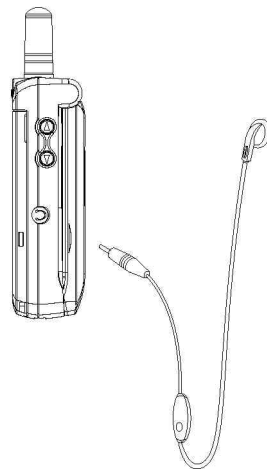

answer calls

Description of connect Handsfree

Using your Phone

Turn phone on

To Turn your phone on, press and hold down the (red phone key) key for a few seconds. To Turn off your phone, follow the same procedure.

Welcome Screen

The welcome screen appears when you open your phone and turn it on, as well as when your phone is in a latent state when you are not accessing functions and features.

Menu:

Scrolling through the menu:

To access your phone's menu, press the MENU key at the welcome screen. Use the left, right, up and down scroll keys to access from the various menu and sub-menu items.

Press the SELECT key to enter one of the 6 menu and sub-menu items. Press the EXIT key to return to exit the phone's menu or sub-menu items.

Menu numbering:

The Menu and sub-menu items of your phone numbers assigned to them

you can use these numbers as shortcuts to access menu and sub-menu functions and features.

Navigation Keys:

Soft keys: Your phone features two soft keys that appear below the display screen. Their current function is indicated by the words appearing above the keys on the display screen. Simply press the corresponding key under the option you want to select.

Scroll Keys: Your phone has four scroll keys. They have left, right, up and down arrows on them to indicate directional use. Use the scroll keys to navigate among the menu and sub-menu items

Menu Tree

Messaging Management- Stay Connected with Mobicom

Mobicom understands the importance of maintaining connectivity, and has built a variety of messaging management features and functions into the (Mobicom Model Phone) that will allow you a breadth of message access options and management functionality.

Messaging

Read

Inbox

List Of Messages (Select to View)

Outbox

List Of Messages (Select to View)

Write

Send to

Send

Send and Store

Store

Delete

Inbox

Outbox

Free Count

Total / Free

Setup

Auto display (On / Off)

SMS Center

Valid Time

12 Hours

1 Day

1 Week

1 Month

Max Time

Status Report (On / Off)

Broadcast

Read

Languages

Multiple languages depending upon market

List

Auto Display (On / Off)

Voice Mail

Connect

Enter Number

Mail Box Number

Enter Number

Phone Book Management

Managing the details for your professional and personal contacts can be a time consuming task. Your (Mobicom model phone) is the ideal tool to centralize this process. Your (Mobicom model phone) offers you the ability to quickly and conveniently configure, categorize, update and manage all your various contacts. Access to important people is now right at your fingertips!

Phone Book

- Search Name
 - Enter First Chars
- Create
 - Enter Name
- Delete
- Copy
 - SIM <-> Phone
- Directory
 - SIM
 - Phone
- Free Count
 - Total / Free SIM
 - Total / Free Local
- Own Number
 - Enter Number
- One Touch Dial
 - Key 1
 - Key 2
 - Key 3

- Key 4
- Key 6
- Key 7
- Key 8
- Key 9

Audio Settings

We're all unique. From classical to traditional to contemporary to whimsical, your (Mobicom phone model) offers a variety of ringer options and tone settings to fit every personality and preference.

Audio Settings

Set Vol

- Speech Vol
- Ringer
- Tone Vol

Ring / Vib

Ring Tone

- Blip
- Simple 1
- Submarine
- Chirp
- Brring
- Walking Bass
- Nee Naw
- Wild Rover
- Town I Love
- Connemara
- Wild Mountain
- Chopin
- Bach
- Blue Bonube
- Maple

- Scherzo
- Simple 2
- Sleeping
- Phone Ring 1
- Phone Ring 2
- Phone Ring 3
- Phone Ring 4
- Two Tone

Ring Vib

- Ring
- Vibration
- Ring / Vib
- Vib / Ring
- Silent

Set Tone

Key Tone

- Key Click
- DTMF
- Silent

Info Tone (On / Off)

SMS Rx. Tone

- Silent
- Beep Once
- Meeting
- Standard
- Outdoor
- Vibration

Serve Tone (On / Off)

One Min Beep (On / Off)

Diverting your Calls

Cancel All

Never miss another phone call. Period. You can instantly and seamlessly divert calls from your Mobicom (model phone) to any other phone. Anywhere. Whether you are at work, at home-or even on vacation- make sure those important calls reach you.

Divert

All Calls

- Activate
- Cancel
- Status

If Busy

- Activate
- Cancel
- Status

If No Reply

- Activate
- Cancel
- Status

Phone Off

- Activate
- Cancel
- Status

Status

Settings

This directory highlights some of the more advanced, diverse and useful features and functions of your Mobicom (model phone). Through the settings menu, you will be introduced to a variety of options that offer the opportunity to configure your phone to reflect personal tastes and preferences.

Settings

Phone Setup

Paging Mode

Pager On

Pager Off

Settings

Ringer Vol.

Ringer Tone

Blip

Simple 1

Submarine

Chirp

Brring

Walking Bass

Nee Naw

Wild Rover

Town I Love

Connemara

Wild Mountain

Chopin

Bach

Blue Bonube

Maple

Scherzo

Simple 2

Sleeping

Phone Ring 1

Phone Ring 2

Phone Ring 3

Phone Ring 4

Two Tone

Ringer Vib

Pager Alert

Vibration

Ring & Vib

Back Light (On / Off)

Contrast

Language

English

Chinese

Spanish

Greeting

Greeting On

No Greeting

Edit Text (Enter Text)

Default

Phone Lock Code

Call Settings

- Flip Open Answer
- One Touch Dial
 - One touch Dial
- Auto Redial
- Any Key Answer
- Call Wait
 - Activate
 - Cancel
 - Status
- Clock Setup
 - Set The Time
 - Set The Date
- Time Format
 - 12 Hour
 - 24 Hour
- Set Time Zone
 - Offset from GMT
- Daylight Savings
 - Automatic Adjust Summertime
 - USA
 - Europe
- Security
 - PIN Setting
 - PIN Enable

- PIN Change
- PIN to Change
- Phone Lock
 - Lock Phone
 - Change Code
- Bar Calls
 - All Out
 - All International
 - Out Except Home
 - All In
 - In if Roam
 - Cancel All
 - Change Password
- Fixed PB (On / Off)
- SIM Lock
 - Set Lock
- ChangePC?
 - Change Password
- Network
 - Select Method
 - Manual Select
 - Auto Select
 - Select PLMN (Public Land Mobil Network)
 - List??
 - Edit PLMN
 - List ?

Secretary

Remind yourself of important dates and meetings. Capture valuable ideas and information through electronic memos. Instantly launch a 12-month calendar- or retrieve the time in Tokyo, London or New York by accessing a global clock. Your Mobicom phone is truly a communication device and personal assistant combined.

Secretary

Alarm

- Set Alarm
- Re-Set Alarm

Select Tone

- Blip
- Simple 1
- Submarine
- Chirp
- Brring
- Walking Bass
- Nee Naw
- Wild Rover
- Town I Love
- Connemara
- Wild Mountain
- Chopin
- Bach
- Blue Bonube
- Maple

- Scherzo
- Simple 2
- Sleeping
- Phone Ring 1
- Phone Ring 2
- Phone Ring 3
- Phone Ring 4
- Two Tone

Memo

- Write
- Once
- Daily
- Weekly
- (Enter Something)
- Enter Date
- Enter Alarm Time
- Do You Want to Set Alarm (Yes / No)

View Today

- Edit Memo
- View
- Delete

View All

- Edit Memo
- View
- Delete

Delete

Delete All

Calendar

Global Time
Query
Add
Delete

Making and Recieving Phone Calls

Dial By Number

Using the phone's key pad, enter the number you wish to call. When you have finished entering the phone number, press the (green phone) key to place the call.

If you want to dial a number that is already stored in your Phone Book (see Storing Phone Numbers, pg. xxx) use the scroll up and down keys to locate the phone book entry you wish to dial. Press the (green phone) key to place the call.

Dial By Name

Using the scroll keys, highlight the Phone Book icon from the main menu of features. Press the select key. Scroll to the SEARCH NAME function, and press the select key. Using the phone's keypad, enter the name of the contact you wish to call. Press the search key when finished. The name and number will appear on the screen. Press the (green phone) key to place the call.

If you want to dial a name that is already stored in your Phone Book (see Storing Phone Numbers, pg. xxx) use the scroll up and down keys to locate the name of the person you want to call. Press the (green phone) key to place the call.

Receive Calls

There are several ways to answer incoming calls:

Flip Open Answer:

This allows you to answer a phone call simply by flipping open the phone. To enable this function, scroll to the FLIP OPEN ANS function and press the select key. To enable the flip open answer function, Press the ON key. To disable the flip open answer function, press the OFF key.

If “flip open answer” has been deactivated (see Call Settings pg XXX) press the XXX key to answer the call.

Any Key Answer

This allows you to answer a phone call simply by pressing any key on the phone. To enable this function, scroll to the ANY KEY ANSW function and press the select key. To enable the any key answer function, Press the ON key. To disable the any key answer function, press the OFF key.

If any key answer has been deactivated (see Call Settings pg XXX) press the xxx key to answer the call.

Audio Settings

We're all unique. From classical to traditional to contemporary to whimsical, your (Mobicom phone model) offers a variety of ringer options and tone settings to fit every personality and preference.

Audio Settings

This directory offers you a variety of different menu options to set audio volume and tones. To access the audio setting options, press the ____ Menu key and select the ____ Audio Settings icon from the main menu of features. Press the __ Exit key to return to the main menu of features.

Setting volume

To set volume levels, scroll to the SET Vol function and press the select key.

Setting Speech Volume

To set the speech volume, scroll to the SPEECH VOL. function and press the select key. Adjust the volume up or down using the right and left scroll keys.

Setting Ringer Volume

To set Ringer Volume, scroll to the RINGER VOL. function and press the select key. Adjust the volume up or down using the right and left scroll keys.

Setting Tone Volume

To set the Tone Volume, scroll to the Tone Volume function and press the select key. Adjust the volume up or down using the right and left scroll keys.

Setting a Ringer Type

To adjust the ringer type and tone, scroll to the ringer/vib function and press the select key.

To adjust the ringer tone, scroll to the Ringer Tone function and press the select key. Using the scroll down key, select from the following ring tones:

- Blip
- Simple 1
- Submarine
- Chirp
- Bring
- Walking Bass
- Nee Naw
- Wild Rover
- Town I Love
- Connemara
- Wild Mountain
- Chopin
- Bach

- Blue Bonube
- Maple
- Scherzo
- Simple 2
- Sleeping
- Phone Ring 1
- Phone Ring 2
- Phone Ring 3
- Phone Ring 4
- Two Tone

Tones will automatically sound as they are highlighted.

To specify a combination of ringer and vibration options, scroll to the Ringer/Vib function and press the select key. You will then have the ability to choose from the following choices:

- Ring Only
- Vibration Only
- Ring / Vib
- Vib / Ring
- Silent

Use the scroll down key to move between the various selections. Press the select key to choose an option.

Setting Tone Types

You can set tones for a variety of different functions. To set tones, scroll to the SET TONE function and press the select key.

Setting Key Tones

To set various key tones, scroll to the KEY TONE function and press the select key. You have 3 different key tones to choose from:

- Key Click Tone
- DTMF Tone
- Silent

Use the scroll down key to move between the various selections. Press the select key to choose an option.

Setting Info Tones:

To set an Info tone, scroll to the INFO TONE function and press the select key. To turn the info tone on, press the ON key. To turn the Info tone off, press the OFF key.

Setting the SMS Rx. Tone

To set a tone to indicate the arrival of a text message, scroll to the SMS Rx. Tone function and press the select key. You will have several different key tones to choose from:

- Silent
- Beep Once
- Meeting
- Standard
- Outdoor
- Vibration

Use the scroll down key to move between the various selections. Press the select key to choose an option.

Setting the Serve Tone:

To set a Serve tone, scroll to the SERV. TONE function and press the select key. To turn the serv. tone on, press the ON key. To turn the serv. tone off, press the OFF key.

Setting One Min Beep Tone

Your phone can be programmed to emit a short beep every minute to help you track how long you have been connected.

To set an One Minute Beep tone, scroll to the 1 Min Beep function and press the select key. To turn the One Minute Beep tone on, press the ON key. To turn the One Minute Beep tone off, press the OFF key.

View Missed, Received and Placed Calls

Calls

Missed calls (shows a list)

Incoming calls (shows a list)

Outgoing calls (shows a list)

Number info

Copy to pb (phone book)

Edit and Send (store, erase)

Delete

Viewing Missed Calls

To view detailed information about the calls you have missed, press the CALLS key, scroll to the MISSED CALLS function and press the select key. A list will appear of all the calls you have missed.

You can access useful information about the calls you have missed.

Viewing Missed Call details:

Use the Up and Down Arrow keys to scroll through the missed calls. Press the select key to access a specific missed call.

A list will appear with details regarding the call you have missed, including :

The first call out of the total calls missed
the time the missed call was received

who the missed call was from

The date the missed call was received

Copying Missed calls to Phone Book:

You can store the details of a missed call in your phone book. Simply select the missed call you would like to store. Scroll to the COPY to PB function and press the select key. Using your phone's keypad, enter the first and last name for the contact. When finished, press the STORE key.

Editing Missed Calls:

You can edit the details of a missed call . Simply select the missed call you would like to edit. Scroll to the EDIT function and press the select key. Using your phone's keypad, enter the new information regarding the missed call. When finished, press the STORE key. To erase a keystroke, press the ERASE key.

Deleting Missed Calls:

There are several ways to delete the details regarding a Missed call from your phone's memory:

Delete using CALLS sub-menu:

To delete the details regarding a specific missed call, press the CALLS key, scroll to the DELETE function and press the select key. Scroll to the Missed Calls function and press the select key. Use the Up and Down Arrow keys to scroll through the missed calls. Press the select key to delete the details regarding a specific missed call from your phone's memory.

Delete using To delete a specific missed call, scroll to the entry of the call you wish to delete and press the select key. Next, scroll down to the DELETE function and press the select key. The entry will be automatically deleted from your phone's memory.

Viewing Received Calls

To view detailed information about the calls you have received, press the CALLS key, scroll to the INCOMING function and press the select key. A list will appear of all the calls you have missed.

You can access useful information about the calls you have received .

Viewing Received Call details:

Use the Up and Down Arrow keys to scroll through the received calls. Press the select key to access a specific received call.

A list will appear with details regarding the call you have received, including :

The first call out of the total calls received

the time the call was received

who the call was received from

The date the call was received

Copying Received calls to Phone Book:

You can store the details of a received call in your phone book. Simply select the received call you would like to store. Scroll to the COPY to PB function and press the select key. Using your phone's keypad, enter the first and last name for the contact. When finished, press the STORE key.

Editing Received Calls:

You can edit the details of a received call . Simply select the received call you would like to edit. Scroll to the EDIT function and press the select key. Using your phone's keypad, enter the new information regarding the received call. When finished, press the STORE key. To erase a keystroke, press the ERASE key.

Deleting Received Calls:

There are several ways to delete the details regarding a Received call from your phone's memory:

To delete the details regarding a specific call received, press the CALLS key, scroll to the DELETE function and press the select key. Scroll to the INCOMING function and press the select key. Use the Up and Down Arrow keys to scroll through the received calls. Press the select key to delete the details regarding a specific received call from your phone's memory.

To delete a specific received call, scroll to the entry of the call you wish to delete and press the select key. Next, scroll down to the DELETE function and press the select key. The entry will be automatically deleted from your phone's memory.

Viewing Placed Calls

To view detailed information about the calls you have placed, press the CALLS key, scroll to the OUTGOING function and press the select key. A list will appear of all the calls you have missed.

You can access useful information about the calls you have placed.

Viewing Placed Call details:

Use the Up and Down Arrow keys to scroll through the placed calls. Press the select key to access a specific placed call.

A list will appear with details regarding the call you have placed, including :

- The first call out of the total calls placed
- the time the call was placed
- who the call was placed to
- The date the call was placed

Copying Placed calls to Phone Book:

You can store the details of a placed call in your phone book. Simply select the placed call you would like to store. Scroll to the COPY to PB function and press the select key. Using your phone's keypad, enter the first and last name for the contact. When finished, press the STORE key.

Editing Placed Calls:

You can edit the details of a placed call . Simply select the placed call you would like to edit. Scroll to the EDIT function and press the select key. Using your phone's keypad, enter the new information regarding the placed call. When finished, press the STORE key. To erase a keystroke, press the ERASE key.

Deleting PlacedCalls:

There are several ways to delete the details regarding a Received call from your phone's memory:

To delete the details regarding a specific call placed, press the CALLS key, scroll to the DELETE function and press the select key. Scroll to the OUTGOING function and press the select key. Press the select key to delete the details regarding a specific placed call from your phone's memory.

To delete a specific placed call, scroll to the entry of the call you wish to delete and press the select key. Next, scroll down to the DELETE function and press the select key. The entry will be automatically deleted from your phone's memory.

Voice Mail

Managing Voice Mail:

o access new or existing messages, scroll to the VOICE MAIL function and press the select key.

Connecting to your voicemail:

To connect to your voice mailbox, scroll to the CONNECT function and press the select key. You are then prompted to enter your Voice Mailbox Number. Once you have entered your voicemailbox number, press the OK key to connect. Press the EXIT key to return to the previous menu.

Mail Box Number

Prompt you to Enter Number

Short Messaging Service (SMS)

Messages

This directory offers you a variety of different menu options to fuel messaging management. To access your messaging options, press the ____ Menu key and select the ____ Messages icon from the main menu of features. Press the __ Exit key to return to the main menu of features.

Reading Messages:

To read your messages, scroll to the READ function and press the select key. You will then be given the option to read messages in your INBOX or your OUTBOX.

Reading messages in your INBOX

To read the messages in your Inbox, scroll to the INBOX function and press the select key. The following will be displayed:

The first message out of the total messages in your Inbox

the time the message was received

who the message was sent from

The date the message was received

Use the Up and Down Arrow keys to scroll through the messages

Press the __Exit key top return to the READ (1) Menu

Reading Messages in your Outbox

To read the messages in your OutBox, scroll to the OUT-BOX function and press the select key. The following will be displayed:

The first message out of the total messages in your OUT-BOX

the time the message was sent

who the message was sent to

The date the message was sent

Use the Up and Down Arrow keys to scroll through the messages

Press the __Exit key to return to the READ (1) Menu

Composing Messages

To write text messages, scroll to the WRITE function and press the select key. Using the keypad on your phone, press the number that corresponds to the letter you wish to display. Press the number once for the first letter, twice for the second letter and three times for the third letter.

If you make an error while writing a message, press the __-Erase key.

When you have completed writing your message and are ready to send it, press the __OK key. This will bring up the SEND TO: screen. Enter the number you wish to send the text message to. Press the OK key when you are finished.

When sending your text message, you will have three options:

To send the message without storing it, scroll to the SEND function and press the select key. You will be advised as to whether the task was Successful or Unsuccessful.

To send and store the message, scroll to the SEND and STORE function and press the select key. You will be advised as to whether the task was Successful or Unsuccessful.

To store the message without sending it, scroll to the STORE function and press the select key. You will be advised as to whether the task was Successful or Unsuccessful.

Deleting Messages

To delete messages, scroll to the DELETE function and press the select key. You will then be given the option to delete messages in your INBOX or your OUTBOX.

Deleting messages in your INBOX:

To delete the messages in your Inbox, scroll to the INBOX function and press the select key. You will then be given the option to:

Delete a particular Message

To delete a particular message in your INBOX, scroll to the DELETE MSG. function and press the select key. The following will be displayed:

The first message out of the total messages in your INBOX
the time the message was sent
who the message was sent to
The date the message was sent

Use the Up and Down Arrow keys to scroll through the messages. Press the ___ delete key to select a message for deletion. Press the YES key to delete, press the NO key to cancel. Press the ___Exit key to return to the DELETE Menu.

Delete ALL messages

To delete all messages in your INBOX, scroll to the DELETE ALL. function and press the select key. You will be asked if you would like to delete all your messages from your INBOX. Press the YES key to delete, press the NO key to cancel. Press the ___Exit key to return to the DELETE Menu

Deleting Messages in your Outbox:

To delete the messages in your OUTBOX, scroll to the OUTBOX function and press the select key. You will then be given the option to:

Delete a particular Message

To delete a particular message in your OUTBOX, scroll to the DELETE MSG. function and press the select key. The following will be displayed:

The first message out of the total messages in your OUTBOX

the time the message was sent

who the message was sent to

The date the message was sent

Use the Up and Down Arrow keys to scroll through the messages. Press the ___ delete key to select a message for deletion. Press the YES key to delete, press the NO key to cancel. Press the ___Exit key to return to the DELETE Menu.

Delete ALL messages

To delete all messages in your OUTBOX, scroll to the DELETE ALL function and press the select key. You will be asked if you would like to delete all your messages from your OUTBOX. Press the YES key to delete, press the NO key to cancel. Press the __Exit key to return to the DELETE Menu.

Checking available message memory space

To determine how much message memory space your phone has, scroll to the FREE COUNT function and press the select key. You will be able to view:

TOTAL: the TOTAL number of messages that are currently stored on your phone

FREE: the amount of space that is still available for storing future messages

Message Set-Up

The Messages Set-up function offers the advantage of customizing the viewability and deliverability of your messages. To access the messages set-up features, scroll to the SETUP function and press the select key.

Message Display:

Through the AUTO DISPLAY function, you can receive instant notification when new messages are received. When the AUTO DISPLAY function is enabled, new messages will be immediately viewable, eliminating the step of having to search for new messages via the Messages directory.

To enable the AUTO DISPLAY function, scroll to the AUTO DISPLAY function, press the select key and then press the On key. To disable this function, press the OFF key.

Message:

SMS Center- service center (phone company number that you send SMS messages to)

Message deliverability

When sending a message, you have the ability to specify the length of time a particular message is valid for delivery. To program the deliverability timeframe for a specific message, scroll to the VALID TIME function and press the select key. You can choose from these various time intervals:

12 Hours- message is able to be delivered for up to 12 hours

1 Day- message is able to be delivered for up to 1 day

1 Week- message is able to be delivered for up to 1 week

1 Month- message is able to be delivered for up to 1 month

Max Time (?) - message is able to be delivered for max. time possible

Message Status

You can track the delivery status of all the messages you send. To enable the viewability of message delivery status, scroll to the STATUS REPORT function and press the select key.

To enable the STATUS REPORT function, scroll to the STATUS REPORT function, press the select key and then press the On key. To disable this function, press the OFF key.

Broadcast:

Read

Languages

Multiple languages depending upon market

None

List

Auto Display (On / Off)

Phone Book

Your new phone is equipped with plenty of internal memory and has the capacity to store up to 200 names and phone numbers. However, if you move your SIM Card frequently between multiple GSM phones, you may want to save some names and phone numbers on the SIM card for ease of use. Names and phone numbers saved on your SIM Card will be available on any GSM phone you install the SIM Card in; however, please note that the SIM Card does have limited capacity, so you may want to store only your most important or frequently accessed names and phone numbers on it.

This directory offers you a variety of different menu options to manage and access important contact information. To access your phone book options, press the ____ Menu key and select the ____ Phone Book icon from the main menu of features. Press the __ Exit key to return to the main menu of features.

Searching by name:

To search for a Name entry in your phone book, scroll to the SEARCH NAME function and press the select key. Using your phone's keypad, enter letters of the name you wish to find. When finished, press the VIEW key. To edit the entry, press the EDIT key. Press the -----scroll key to highlight the areas you want to edit. Press the ERASE key to remove letters and make the appropriate changes. When edits are complete, press the STORE key.

Creating an entry in the phone book:

To create a new entry in your phone book, scroll to the CREATE function and press the select key.

-Using your phone's keypad, enter the first and last name for the contact. When finished, press the OK key.

-Next, enter the phone number for the contact. Press the OK key to accept the entry. Press the ERASE key to edit your entry.

Deleting an entry in the phone book:

To delete an entry in your phone book, scroll to the DELETE function and press the select key.

-Using the scroll keys, find the phone book entry you would like to delete. When the entry is selected, press the DELETE key.

-Press YES if you would like to delete the entry. Press NO if you would not like to delete the entry. Press EXIT to return to the previous menu.

Copying a Phone book entry from the SIM card to the phone:

To copy a phone book entry from the SIM card to your phone, scroll to the COPY function and press the select key.

Using the scroll keys, find the phone book entry you wish to copy. When the entry is selected, press the COPY key. Press YES to copy the entry to the phone. Press NO to cancel this function. Press EXIT to return to the previous menu.

Viewing SIM card and Phone phone books:

To view the phone book directory on your SIM card or on your phone, scroll to the DIRECTORY function and press the select key.

To view the phone book directory for the SIM card, scroll to the SIM function and press the select key.

-To view the phone book directory for your phone, scroll to the LOCAL function and press the select key.

Checking available phone book memory space:

To determine how much phone book memory space your phone has, scroll to the FREE COUNT function and press the select key. You will be able to view:

-SIM: the TOTAL number of phone book entries that are currently stored on your SIM card and the amount of space that is still available for storing future entries

-LOCAL: the TOTAL number of phone book entries that are currently stored on your phone itself and the amount of space that is still available for storing future entries

Entering your phone's number into phone book:

To enter your phone's number into the phone book, scroll to the OWN NUMBER function and press the select key. Enter your phone's number and press the OK key. Press the ERASE key to make changes to the number.

One-Touch Dialing:

You can program one-touch dialing for up to 9 phone numbers. To set-up one touch dialing, scroll to the 1 TOUCH DIAL function and press the select key. Scroll to the Key 1 function and press select. Enter the phone number you would like to set 1 touch dialing for, and press the OK key. Press the Erase key to edit this entry. Repeat these steps for Keys 2-9. Press EXIT to return to the previous menu.

Storing a Phone Number in your SIM Card

Storing a Phone Number in your phones internal memory

Changing Phone Settings

Your new phone is factory configured to be a useful and productive tool. However, your phone is an extension of yourself and only you will know what works best for you. Your phone allows virtually every aspect of its operation to be custom configured to suit the way you live, work and play.

Call Settings

Flip Open Answer:

This allows you to answer a phone call simply by flipping open the phone. To enable this function, scroll to the FLIP OPEN ANS function and press the select key. To enable the flip open answer function, Press the ON key. To disable the flip open answer function, press the OFF key.

1 Touch Dial

You can program one-touch dialing for up to 9 phone numbers. To set-up one touch dialing, scroll to the 1 TOUCH DIAL function and press the select key. Scroll to the Key 1 function and press select. Enter the phone number you would like to set 1 touch dialing for, and press the OK key. Press the Erase key to edit this entry. Repeat these steps for Keys 2-9. Press EXIT to return to the previous menu.

Auto Redial

If you dial a number and it is busy, you can tell your phone to automatically redial the number. To enable this function, scroll to the AUTO REDIAL function and press the select key. To enable the auto redial function, Press the ON key. To disable the auto redial function, press the OFF key.

Any Key Answer

This allows you to answer a phone call simply by pressing any key on the phone. To enable this function, scroll to the ANY KEY ANSW function and press the select key. To enable the any key answer function, Press the ON key. To disable the any key answer function, press the OFF key.

Call waiting:

To activate the call waiting, scroll to the ACTIVATE function and press the select key.

To cancel call waiting, scroll to the CANCEL function and press the select key.

To check the status of call waiting, scroll to the STATUS function and press the select key.

Clock Setup

To Set The Time

To set the time on your phone, scroll to the SET THE TIME function and press the select key. Using the left and right scroll keys and the phone's numerical keypad, enter the correct time. Press the OK key to accept, press the EXIT key to return to the previous menu.

Setting The Date

To set the date on your phone, scroll to the SET THE DATE function and press the select key. Using the left and right scroll keys and the phone's numerical keypad, enter the correct date. Press the OK key to accept, press the EXIT key to return to the previous menu.

Setting Time Format

You have the option to view what time it is based on a 12-hour or 24-hour range. To select a time format, scroll to the TIME FORMAT function and press the select key.

To choose a 12-hour format, scroll to the 12 HOUR function and press the select key.

To choose a 24-hour format, scroll to the 24 HOUR function and press the select key.

Setting Time Zone:

To set the correct Time Zone on your phone, scroll to the SET TIME ZONE function and press the select key. Using the left and right scroll keys and the phone's numerical keypad, enter the correct time zone offset from GMT. Press the OK key to accept, press the EXIT key to return to the previous menu.

Setting Daylight Savings:

To set Daylight Savings, scroll to the DAYLIGHT SAVIN function and press the select key. You will be asked whether you want to Automatically adjust for Summer Time?

Press the YES key to Automatically adjust for Summer Time.

You will then be prompted to enter the country in which you are adjusting for Daylight savings.

USA

Press USA if you are adjusting for Daylight Savings in the

Europe

Press Europe if you are adjusting for Daylight Savings in the

Press the No key to cancel this function.

Screen Setting

Setting the Backlight

Your phone offers a backlit function for increased viewability. To set backlight options, Scroll to the BACKLIGHT function and press the select key. To Turn the backlight on, press the ON key. To turn the backlight off, press the OFF key.

Setting the Contrast

Your phone offers options in contrast. To set contrast options, Scroll to the CONTRAST function and press the select key. Increase or decrease the contrast by using the right and left scroll keys.

Language Settings

Setting the Language:

Your phone is a multi-lingual device offering access to phone features and functions in several different languages. To set the language on your phone, scroll to the LANGUAGE function and press the select key. You will have the option to choose from:

English
Chinese
Spanish

Use the scroll down key to move between the various selections. Press the select key to choose an option.

Setting the Greeting on your phone

You have the option for a textual greeting to display when you turn on or open your phone. To set a greeting to display on your phone, scroll to the GREETINGS function and press the select key.

-To Turn on a greeting, scroll to the GREETING ON key and press the select key. Your greeting will automatically appear the next time you turn on or open your phone. To Cancel this function, scroll to the NO GREETING function and press the select key. No greeting will appear the next time you turn on or open your phone.

Setting the default phone

Default- set lock- enter phone lock code

Setting the Security features on your phone:

Setting the Network details on your phone:

Secretary Mode

Entering A Memo

Scroll to the WRITE function and press the select key. You have the option

Once- scroll to the ONCE function and press the select key. Using the keypad on your phone, press the number that corresponds to the letter you wish to display. Press the number once for the first letter, twice for the second letter and three times for the third letter. When you are finished entering your memo, press the OK key.

Enter the date you've written the memo. Press the OK key.. Enter the alarm time if. Do you want to set an alarm? Press the YES key if you would like to set an alarm for the memo. Press the NO key to cancel this function. Your memo will be stored.

Daily

Weekly

Monthly

Yearly

View Today

View All

Delete

Delete All

Setting an Alarm

Interdum volgus videt, est ubi peccat. Si veteres ita miratur laudatque poetas, ut nihil anteferat, nihil illis comparet, errat. Si quaedam nimis antique, si peraque dure dicere credit eos, ignave multa fatetur, et sapit et mecum facit et Iova iudicat aequo. Non equidem insector delendave carmina Livi esse reor, memini quae plagosum mihi parvo Orbilium dictare; sed emendata videri pulchraque et exactis minimum distantia miror. Inter quae verbum emicuit si forte decorum, etsi versus paulo concinnior unus et alter, iniuste totum ducit venditque poema.

Setting Area Code Search

Interdum volgus videt, est ubi peccat. Si veteres ita miratur laudatque poetas, ut nihil anteferat, nihil illis comparet, errat. Si quaedam nimis antiquae, si peraeque dure dicere credit eos, ignave multa fatetur, et sapit et mecum facit et Iova iudicat aequo. Non equidem insector delendave carmina Livi esse reor, meminisse quae plagosum mihi parvo Orbilius dictare; sed emendata videri pulchraque et exactis minimum distantia miror. Inter quae verbum emicuit si forte decorum, etsi versus paulo concinnior unus et alter, iniuste totum ducit venditque poema.

Using the Calculator Utility

ICalculator can perform addition, subtraction, multiplication and division functions.

Using the Global Time Clock

IQuery, Add, delete.

Diverting Messages

This directory offers you the opportunity to divert calls from your Mobicom model phone to any another phone. To access call diversion functions, press the ____ Menu key and select the ____ Divert icon from the main menu of features. Press the __ Exit key to return to the main menu of features.

Diverting all calls:

To divert all your calls to another phone, scroll to the ALL CALLS function and press the select key.

-To activate the diversion of all your calls to another phone, scroll to the ACTIVATE function and press the select key. Enter the number you wish to divert all your calls to and press the OK key. Press the Erase key to edit this entry.

--To cancel the diversion of all your calls to another phone, scroll to the CANCEL function and press the select key. Enter the divert number you wish to cancel all your calls from going to and press the OK key. Press the Erase key to edit this entry.

--To check the status of the diversion of all your calls to another phone, scroll to the STATUS function and press the select key. This will tell you if call diversion for all your calls is currently in operation.

Diverting calls when phone is in use:

To divert calls only when your phone is in use, scroll to the IF BUSY function and press the select key.

-To activate the diversion of your calls to another phone only when your phone is in use, scroll to the ACTIVATE function and press the select key. Enter the number you wish to divert your calls to and press the OK key. Press the Erase key to edit this entry.

--To cancel the diversion of your calls to another phone when your phone is in use, scroll to the CANCEL function and press the select key. Enter the divert number you wish to cancel your calls from going to and press the OK key. Press the Erase key to edit this entry.

--To check the status of the diversion of your calls to another phone if your phone is in use, scroll to the STATUS function and press the select key. This will tell you if call diversion when your phone is in use is currently in operation.

Diverting calls when there is no reply:

To divert calls only when your phone does not reply, scroll to the IF NO REPLY function and press the select key.

-To activate the diversion of your calls to another phone only when your phone does not reply, scroll to the ACTIVATE function and press the select key. Enter the number you wish to divert your calls to and press the OK key. Press the Erase key to edit this entry.

--To cancel the diversion of your calls to another phone when your phone does not reply, scroll to the CANCEL function and press the select key. Enter the divert number you wish to cancel your calls from going to and press the OK key. Press the Erase key to edit this entry.

--To check the status of the diversion of your calls to another phone if your phone does not reply, scroll to the STATUS function and press the select key. This will tell you if call diversion when your phone does not reply is currently in operation.

Diverting calls when phone is off:

To divert calls only when your phone is off, scroll to the PHONE OFF function and press the select key.

-To activate the diversion of your calls to another phone only when your phone is off, scroll to the **ACTIVATE** function and press the select key. Enter the number you wish to divert your calls to and press the OK key. Press the Erase key to edit this entry.

--To cancel the diversion of your calls to another phone when your phone is off, scroll to the **CANCEL** function and press the select key. Enter the divert number you wish to cancel your calls from going to and press the OK key. Press the Erase key to edit this entry.

--To check the status of the diversion of your calls to another phone if your phone is off, scroll to the **STATUS** function and press the select key. This will tell you if call diversion when your phone is off is currently in operation.

Status of diverting calls:

To check the status of a call diversion function, scroll to the **STATUS** function and press the select key. This will tell you how many calls were diverted, and are viewable by diversion function:

All Calls
If Busy
If no Reply
Phone Off

Cancel diverting calls:

To cancel diversion of your calls, scroll to the **CANCEL** **ALL** function and press the select key. This will cancel any call diversion functions currently in effect.

Troubleshooting

Symptom	What to Check
Unable to dial phone	Verify Phone is receiving signal, move to an open area. Verify keypad is unlocked, press * and 6 key Verify screen does not read “restricted”, turn off call barring Verify phone was not locked before a different SIM card is used. SIM card PIN number required to unlock phone.

SIM card does not work	Verify SIM Card has not been damaged. Verify Sim card is making contact with its connector in the phone
Phone unable to delete divert or barring call	Verify Phone is receiving signal, move to an open area.

Care and maintenance of your new phone

Only authorized service personnel may repair or perform service on your MobiCom phone. Repairs or service performed on your MobiCom phone by unauthorized personnel may void your warranty.

Use only MobiCom approved batteries and accessories with your MobiCom phone. Use of incompatible batteries and accessories may affect your phone's performance, damage your phone or void your phones warranty.

Keep your phone out of the reach of small children.

Avoid exposing your phone to rain, snow and liquid.

Use only soft cloth or tissue paper to clean your phone. Other material or cleaning solvents may scratch or damage the phones finish.

Do not paint your phone, paint may cause electrical and mechanical damage.

Only MobiCom approved antennas should be used with your phone to ensure the performance.

Batteries care and maintenance

Use only MobiCom proved chargers to recharge your phones battery. The use of unapproved chargers may result in fire, damage to the phone and will void the warranty.

Avoid using batteries in a wet ,humid and high temperature conditions.

Use caution when handling or storing a detached battery from your phone. If the batteries two terminals are accidentally shorted together by a metal object, the battery and object may become hot, causing property damage, injury or burns. Exercise care in placing batteries inside a pocket, purse or other packages that may contain metal objects

Your new phones battery will require about 2.5 hours of charging to reach full strength.

The performance of all rechargeable batteries degrades over time. When replacing your phones battery do not dispose of old the battery in fire, the battery may explode causing injury or damage.

Warranty

1. The limited warranty for the Product extends for one (1) year beginning on the date of purchase of the Product.
2. The limited warranty extends only to the original consumer purchaser (Consumer) of the Product and is not assignable or transferable to any subsequent purchaser/end-user.
3. The limited warranty extends only to Consumers who purchase the Product in the .
4. During the limited warranty period, Mobicom will repair, or replace, at Mobicom's option, any defective parts, or any parts that will not properly operate for their intended use with new or factory rebuilt replacement items. No charge will be made to the Consumer for any such parts. Mobicom will also pay for the labor charges incurred by Mobicom in repairing or replacing the defective parts. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Upon request from Mobicom, the Consumer must provide information to reasonably prove the date of purchase.
6. The Consumer shall bear the cost of shipping the Product to Mobicom Inc . Mobicom

shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.

7. The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:

a) The Product has been subject to: abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Mobicom, including damage caused by shipping and blown fuses.

b) Mobicom was not notified by Consumer of the alleged defect or malfunction of the Product during the applicable limited warranty period.

c) The Product serial number plate or the accessory date code has been removed, defaced or altered.

d) The defect or damage was caused by the defective function of the cellular system, or by inadequate signal reception by the external antenna.

8. If a problem develops during the limited warranty period, the Consumer should take the following step-by-step procedure:

The Consumer shall return the Product to the place of purchase for repair or replacement processing.

b) If a is not convenient the Consumer shall ship the Product prepaid and insured to:

Mobicom Corporation

960 Holmdel Rd.

Holmdel, NJ 07733

USA

The customer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase, and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.

d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer shall be responsible for expenses related to reinstallation of the Product.

e) If the Product is returned to Mobicom during the limited warranty period, but the problem with the Product cannot be fixed under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned to Mobicom after the expiration of the warranty period, Mobicom's normal service policies shall apply and the Consumer will be invoiced for all shipping charges.

9. The Product consists of newly assembled equipment that may contain used components which have been reprocessed to allow machine compliance with Product performance and reliability specifications.

10. ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING WRITTEN WARRANTY, OTHERWISE, THE FOREGOING WARRANTY IS THE PURCHASERS SOLE AND EXCLUSIVE REMEDY AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. Mobicom SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR A

LOSS OF ANTICIPATED BENEFITS OR PROFITS, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE WARRANTY EVEN IF Mobicom KNEW OF THE LIKELIHOOD OF SUCH DAMAGES.

11. Mobicom neither assumes nor authorizes any authorized service center or any person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.

12. The limited warranty period for Mobicom supplied attachments and accessories are specifically defined within their own warranty cards and packaging.

13. Questions concerning this limited warranty may be directed to:

Mobicom Corporation

960 Holmdel Rd.

Holmdel, NJ 07733

USA

FCC Notice And SAR Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by Mobicom Corporation will void the user's authority to operate this equipment. Only use approved batteries and chargers.

Specific Absorption Rate (SAR) is a value that corresponds to the relative amount of RF energy absorbed by the user of a wireless phone. The Federal Communications Commission of the U.S. Government sets SAR limits. The maximum allowed SAR value of 1.6W/kg allows for a substantial safety margin, designed to assure the safety of all persons. Tests for SAR values are conducted using FCC approved operating positions at the highest possible power levels. The actual SAR level while using the phone is likely to be well below the maximum value.

Highest reported SAR levels for this phone are: Head 1.18 W/kg, body 0.244 W/kg. SAR compliance for body-worn operating configurations is limited to the specific belt-clips/holsters/accessories shipped with this product. SAR compliance is limited to the batteries shipped with this product.