

82618/82617 Asst.

RA-01

For competition among RC BEYBLADE tops,


For competition among the BEYBLADE tops, the other RC BEYBLADE tops (sold separately) must have frequencies other than 27 MHz.

Requires 2 x 1.5V "AA" (LR6 batteries not included). Alkaline batteries recommended.

Phillips/crosshead screwdriver needed (not included). See instructions

⚠ WARNING: Do not use BEYBLADE tops or Beystadium™ on tables or other elevated surfaces.

BEYBLADE tops/BEYSTADIUM are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may bounce up and hit eye or face.

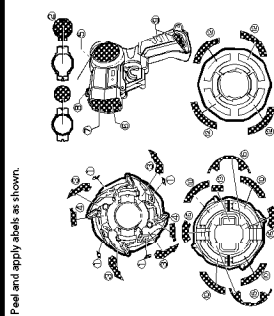

Includes radio control launcher, radio control BEYBLADE top, ripcord, Bit Chip, and label sheet.

Peel and apply abels as shown.

TO INSERT BATTERIES:

- 

IMPORTANT: BATTERY INFORMATION

IMPORTANT: BATTERY INFORMATION
Please retain this information for future reference.


- 1) Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- 2) Do not mix old batteries and new batteries, or standard alkaline with acidic batteries.
- 3) Do not use old or damaged batteries.
- 4) Remove batteries if product is not to be played with for a long time.
- 5) Do not short-circuit the supply terminals.
- 6) Do not use the product cases, or be affected by, with electrical interference. Reset switching off and back on.
- 7) Do not use the product with damaged or leaking batteries. It increases the risk of fire.
- 8) RECHARGEABLE BATTERIES: Do not use the product with your toys or battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

⚠ CAUTION: TO AVOID BATTERY LEAKAGE


1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

CHARGING:


- Turn the launcher power switch to ON.

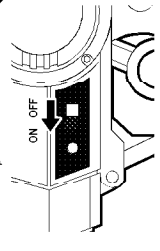

- Open the launcher front cover to expose the charge gate. Attach the radio control top to the charge gate. The charge light will turn ON.

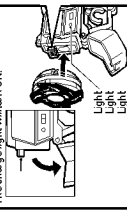

- 3** Set the metal part of the launcher's charge gate in the depression as shown.

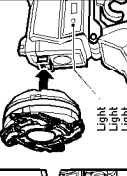

4

 
Please note:

- Charge the radio control top after the tip has stopped moving. Recharging when a charge remains in the battery may lead to weakening of the battery.
- If the radio control top is accidentally removed from the charge gate while it is charging, the charge light will continue to stay lit until the entire 80 second charging sequence has been completed. Be sure to charge until the charge light goes out.

The charge light will go out after about 80 seconds of charging. This means that charging has been completed.

LAUNCH:


- Slide the ripcord through the launcher and attach the radio control top.



- Turn the radio control top to the right and secure the launcher.



- 3

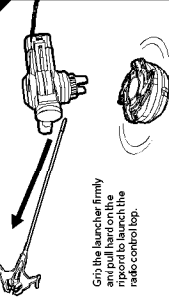

Grip the launcher firmly and pull hard on the ripcord to launch the radio control ton.