



Odyssey 2000-8R

Repeater Instruction Manual

575-00001-0001



DC/MA is a registered trademark of ComSpace Corporation.

Table of Contents

TABLE OF CONTENTS	2
INTRODUCTION	3
WARNING	4
<i>FCC Warning</i>	4
<i>Information to Digital Device Users Required by the FCC</i>	4
NOTICES TO THE USER	4
SAFETY:	5
PRECAUTIONS	6
REPEATER SPECIFICATIONS	7
<i>General</i>	7
<i>Receiver</i>	8
<i>Transmitter</i>	8
REPEATER CONTROLLER COMMAND SET	9
UNPACKING AND CHECKING EQUIPMENT	11
ASSEMBLY	12
BASIC OPERATION.....	13

Introduction

This manual covers the Odyssey 2000 8R Repeater Radio for Digital Channel/Multicarrier Architecture, DCMA®, with LTR trunking. This unit is a full duplex radio transceiver featuring digital technology developed by ComSpace™ Corporation, that greatly increases the traffic carrying capabilities of the radio network while at the same time improving the quality of communications. The principal features are:

1. Digital Modulation with DC/MA technology.
2. Digital trunking (Direct Frequency Assignment) compatible with EF Johnson LTR® network protocol.
3. Enhanced voice quality via AMBE+® vocoder.

Thank You

We believe that this “*Technology Development for the Wireless Future*” will be an easy to use transceiver that will provide dependable communications to allow peak operating efficiency. We are grateful you chose ComSpace Corporation for your professional repeater radio applications and believe that you will be pleased with the quality and features of our product.

Warning

One or more of the following statements may be applicable.

FCC Warning

This equipment generates or uses radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the Operator's Manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

Information to Digital Device Users Required by the FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can generate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit breaker different from that to which the receiver is connected.
- Consult the dealer for technical assistance.

Notices to the User

- **GOVERNMENT LAW PROHIBITS THE OPERATION OF UNLICENSED RADIO TRANSMITTERS WITHIN THE TERRITORIES UNDER GOVERNMENT CONTROL.**
- **ILLEGAL OPERATION IS PUNISHABLE BY FINE OR IMPRISONMENT OR BOTH.**
- **REFER SERVICE TO QUALIFIED TECHNICIANS ONLY.**

Safety:

It is important that the operator is aware of, and understands, hazards common to the operation of any transceiver.

WARNING:

IMPORTANT NOTE: To comply with FCC RF exposure compliance requirements, the antenna(s) used for this transmitter must be: (1) fixed-mounted on outdoor permanent structures with a separation distance of at least 19.7 feet (6 meters) from all persons during normal operation and (2) professionally installed. The peak conducted output power at each antenna terminal must not exceed 85W and the peak radiated output power must not exceed 1640W EIRP. The gain of the antenna(s) used with this transmitter summed with any combiner losses and coaxial cable losses experienced in the feed between the transmitter and the antenna must not exceed a total gain of 12 dBd. The installer of the antenna to be used with this transmitter may be required to perform an MPE evaluation and an Environmental Assessment (EA) of the location at the time of licensing per CFR 47 Part 1.1307. Additionally, fixed mounted antenna(s) that are co-located with other antenna(s) must satisfy the co-location requirements of Part 1.1307 for satisfying RF exposure compliance.

- **INJURY FROM RADIO FREQUENCY TRANSMISSIONS:** Do not operate the transceiver when someone is either touching the antenna or standing within proximity established by an MPE evaluation to avoid the possibility of radio frequency burns or related physical injury.
- **DYNAMITE BLASTING CAPS** Operating the transceiver within 500 feet of dynamite blasting caps may cause them to explode. Turn OFF your transceiver when in an area where blasting is in progress, or where “TURN OFF TWO-WAY RADIO” signs have been posted. If you are transporting blasting caps in your vehicle, make sure they are carried in a closed metal box with a padded interior. Do not transmit while the caps are being placed into or removed from the container.

Precautions

Please observe the following precautions to prevent fire, personal injury, and transceiver damage.

- Do not modify the transceiver for any reason.
- Do not expose the transceiver to long periods of direct sunlight, nor place it near heating appliances.
- Do not place the transceiver in excessively dusty, humid or wet areas, or on unstable surfaces.
- If an abnormal odor or smoke is detected coming from the transceiver, turn OFF the power immediately. If the unit does not turn OFF, remove the power source. Contact your ComSpace dealer.

Repeater Specifications

Odyssey® Series Model 2000 8R

General

No.	Parameter	Requirement	Comments
1	Frequency Range Receiver: Transmitter:	806 MHz – 824 MHz 851 MHz – 869 MHz	
2	Channel Spacing	25 kHz	12.5KHz steps
3	Duty Cycle	100% – RX 100% – TX	
4	Input Voltage	115Vac, nominal	Two circuits required
5	Current	20A service	
6	RF Impedance	50 Ω	Unbalanced
7	Frequency Stability	0.0022ppm	
8	Spurious and Image Suppression	-85dB	
9	FCC ID	PCK	
10	FCC Compliance	FCC Part 15 & Part 90	Part 15, Class B digital device
11	Normal Test Conditions	Temperature +20°C Relative Humidity 75% Max. Test Voltage 13.8V	
12	Sub-channel Data Rate: Time Slot Data Rate:	16 kbps for single sub-channel 8.0 kbps for single time slot	An 800 MHz, 25 kHz DC/MA® channel is divided into four sub-channels with channel offsets of $\pm 2400\text{Hz}$ and $\pm 7200\text{Hz}$.
13	Temperature Range	-30°C to +60°C	
14	Size	53 inches	19 inch standard cabinet
15	Weight	240 pounds	Cabinet not included

Receiver

No.	Parameter	Requirement	Comments
1	Passband Ripple	1dB	Measured at baseband, 400Hz to 9.2kHz
2	Total Group Delay	75μsec (max)	Measured at baseband, 400Hz to 9.2kHz
3	Differential Group Delay	TBD	Measured at baseband between the I and Q channels, 400Hz to 9.2kHz
4	I Q Gain Imbalance	0.5dB	Measured at baseband, 400Hz to 9.2kHz
5	I Q Phase Imbalance	$\leq 2^\circ$	Measured at baseband, 400Hz to 9.2kHz
6	DC Offset	$\leq 10\%$ minimum signal level	$\approx 216\mu\text{Vrms}$ at 14dB S/N
7	Output Noise	3 bits @ 53.95μV/bit	$\approx 432\mu\text{Vrms}$, Measured at the ADC input
8	Noise Figure	5dB min	
9	Sensitivity	-119dBm	$\approx 0.25\mu\text{Vrms}$, Measured at the receiver input
10	Adjacent Channel Rejection Ratio	80dB min	
11	3 rd order Intermodulation Distortion	5dBm min	Interferer tones at $F_0 \pm 50\text{kHz}$ and $\pm 100\text{kHz}$
12	Image Rejection	100dB min	
13	$\frac{1}{2}F$ Rejection	100dB min	
14	Spurious Rejection	100dB min	
15	Gain Variation	15dB	Adjustable for site noise variations
16	ADC	16 bit	Serial output, single ended, 52kHz sample rate
17	Dynamic Range	65dB	16bits – 3 noise bits = 12 bits, with a 14dB S/N

Transmitter

No.	Parameter	Requirement	Comments
1	Modulation	DC/MA®	16QAM (2 level 8 phase) Digital Channel/Multicarrier Architecture
2	Output Power	85 Watts Continuous Average	DC/MA has a 10dB Peak to Average Ratio
3	Output Impedance	50 Ω	
3	Image Suppression	-55dBc	Sampling image measured at the output of the transmitter.
4	Amplitude Response	<1.0dB	Measured across the 18MHz Tx band
5	Intermodulation Products	-60dBc	DC/MA intermodulation performance measured at the output of the transmitter
6	Tuning Spacing	12.5kHz	
7	Channel Frequency spread	18MHz	
8	Occupied Bandwidth	20kHz	
9	LO Phase Noise	-85dbc/Hz @ 400Hz -126dBc/Hz @ 10kHz -134dBc/Hz @ 25kHz	Single sideband phase noise
10	LO Reference Spur	< -98dBc @ 12.5kHz	Maximum level for the 12.5kHz reference spur

Repeater Controller Command Set

Communication with the repeater controller is accessible through the RS232 port located on the front panel of this board. This connection requires a pin to pin compatible RS232 cable. A HyperTerminal must be started to communicate with the repeater controller. With a WINDOWS operating system, the HyperTerminal can be found at:

Start/Programs/Accessories/ HyperTerminal/HyperTerminal

The HyperTerminal should be set up as follows.

Bits per second	38400
Data bits	8
Parity	None
Stop bits	1
Flow control	None
Properties	
Settings	
Terminal Key	Selected
Emulation	ANSI
ASCII Setup	
ASCII Receiving	Wrap lines that exceed terminal width

The following table is the Repeater Controller Command Set.

1	Legend		
2		[parameter]	parameter is required
3		<parameter>	parameter is optional or required in some cases
4		[parm1 parm2]	parm1 OR parm2
5		PID	Processor ID in [0,20]
6		IPC	Interprocessor Communications
7			
8			
9	help	help <command>	display all commands or help on a specific <i>command</i>
10	osinfo	osinfo <task queue sem part>	display pSOS info for <i>tasks</i> , <i>queues</i> , <i>semaphores</i> , <i>partitions</i> , or all of the above if no parameter given
11	ifconfig	ifconfig	display network I/F data
12	netstat	netstat	display network connections
13	arp	arp [-adsf]	address resolution protocol (ARP) table maintenance; show <i>all</i> , <i>delete</i> host, <i>set</i> host and MAC address, or load from <i>file</i>
14	date	date	display RC860 system date
15	echo	echo ["string"]	echo " <i>string</i> " to the CONSOLE
16	getid	getid	display user ID and group ID
17	getpri	getpri [taskname tid]	display task <i>taskname</i> or <i>task ID</i> priority
18	kill	kill [taskname tid]	kill task <i>taskname</i> or <i>task ID</i>
19	ping	ping [IP]	check connectivity to address <i>IP</i>

20	resume	resume [taskname task ID]	resume task <i>taskname</i> or <i>task ID</i>
21	route	route [add delete -a] <host net> <dest> <gateway>	IP routing table maintenance
22	setenv	setenv <ENV_VAR=value>	set environment variable <i>ENV_VAR</i> to <i>value</i> , or if no parameters show all environment variables
23	setid	setid [uid] [gid]	set user and group IDs
24	setpri	setpri [taskname tid] [priority]	set task <i>taskname</i> or <i>task ID</i> priority to <i>priority</i>
25	sleep	sleep [seconds]	suspend shell execution for <i>seconds</i> seconds
26	suspend	suspend [taskname tid]	suspend task <i>taskname</i> or <i>task ID</i>
27	ber	ber [subchannel (0-3)] <frequency (seconds)>	toggle bit error rate display on the specified <i>subchannel</i>
28	flashcrc	flashcrc [target pid all]	report the flash CRC of the requested <i>PID</i>
29	getRev	getRev [target pid all]	report the software revision of on the requested <i>PID</i>
30	remlog	remlog	toggles msgLog on telnet sessions
31	wmsl	wmsl [target PID] [b h w] [address] [value]	write <i>value</i> at <i>address</i> on slave <i>PID</i> using <i>byte</i> , <i>half-word</i> , or <i>word</i> access
32	dmsl	dmsl [target PID] [b h w] [address] <length>	read (dump) <i>length</i> bytes of memory at <i>address</i> on <i>PID</i> using <i>byte</i> , <i>half-word</i> , or <i>word</i> access
33	ipcsI	ipcsI [target PID]	report IPC info for <i>PID</i>
34	rxmqueue	rxmqueue	report info for the RXM I/Q sample circular queue
35	txmdac	txmdac	report info for the TXM transmit DAC buffer
36	cpdbg	cpdbg [target PID]	report info for the CP with <i>PID</i> pid
37	statedbg	statedbg	report info for the RXM call state machine
38	time	time	display RC860 system time
39	syspar	syspar <r w> <parameter> <value>	<i>read</i> or <i>write parameter</i> with <i>value</i> if writing; no parameters lists all system parameters and current values
40	sysStatus	sysStatus	User-friendly display of repeater statuses, as seen by the RC860
41	reset860	reset860	resets the entire repeater
42	shutdown	shutdown	stops all RX and TX on the repeater
43	resetSysParms	resetSysParms	resets all non-volatile parameters to defaults
44	prescheck	prescheck	displays task and slave processor presence
45	flashld	flashld [pid]	prepare <i>PID</i> to receive flash image
46	iflock	iflock	displays RF lock status
47	chuser	chuser <-adhm> <username>	change telnet user - <i>add</i> a new user, <i>delete</i> user, <i>help</i> , <i>modify</i> user password
48	startnow	startnow	start repeater initialization now, skipping warm-up timer
49	log	log	toggles msgLog on CONSOLE shell
50	taskdbg	taskdbg [DPR PA RF SCON] <pid amp>	display task DPR, PA, RF, or SCON debug info
51	memtest	memtest [h w] [address] <length>	test memory at <i>address</i> for <i>length</i> bytes using <i>half-word</i> or <i>word</i> access

Unpacking and Checking Equipment

Note: The following unpacking instructions are for use by your ComSpace dealer, an authorized ComSpace service facility, or the factory.

Carefully unpack the transceiver. ComSpace recommends that you identify the items listed in the following table before discarding the packing material. If any items are missing or have been damaged during shipment, file a claim with the carrier immediately.


Components

Item	Part Number	Quantity
Power Amplifiers (PA)	G3L-800-25-002	4
RF Enclosure	075-00011-0001	1
LLRF Enclosure	075-00012-0001	1
Repeater Controller	050-00003-0002	1
Tx Master	050-00004-0001	1
Rx Master	050-00004-0002	1
Rx Slave	050-00004-0003	2
Channel Cards	050-00023-0002	4
RF/Digital DB-25 Communications Cable	CS300010	2
RF/Digital DB-9 Communications Cable	CS300008	1
RF/Digital Coaxial 13MHz Reference Cable	SPC, 1799	1
AC Power Line Cords	VOLEX, 17604-C3-10	2
Digital Enclosure	075-00013-0001	1

Assembly

The repeater should be assembled as indicated in the following diagram. The RF power unit, containing the power supplies, low level RF and RF power amplifiers should be mounted in a relay rack on top of the digital card cage.

- 1) After the RF power unit is mounted, the four RF power amplifiers should be inserted
- 2) After mounting the digital card cage, the digital cards must be inserted in the following order.
 - a) The Repeater Controller must be inserted into slot one.
 - b) The Tx master must be inserted into slot two.
 - c) The Rx master must be inserted into slot three.
 - d) The two Rx Slaves must be inserted into slots four and five.
 - e) The four Channel Cards must be inserted into slots eight through eleven.
- 3) Proper grounding practice should be followed while inserting all of the digital cards.
- 4) The relay rack should be grounded to a properly installed building ground.
- 5) Two AC lines of a minimum 20Amp service at 115V must be available for the repeater.
- 6) Connect the two DB-25, the DB-9 and 13MHz-reference coaxial cable between the RF chassis and the digital chassis.
- 7) Connect the power supply cable and voltage sense cable from the RF chassis to the digital chassis.
- 8) Connect the Rx and Tx connection from the repeater to a duplexer or multicoupler/splitter system.

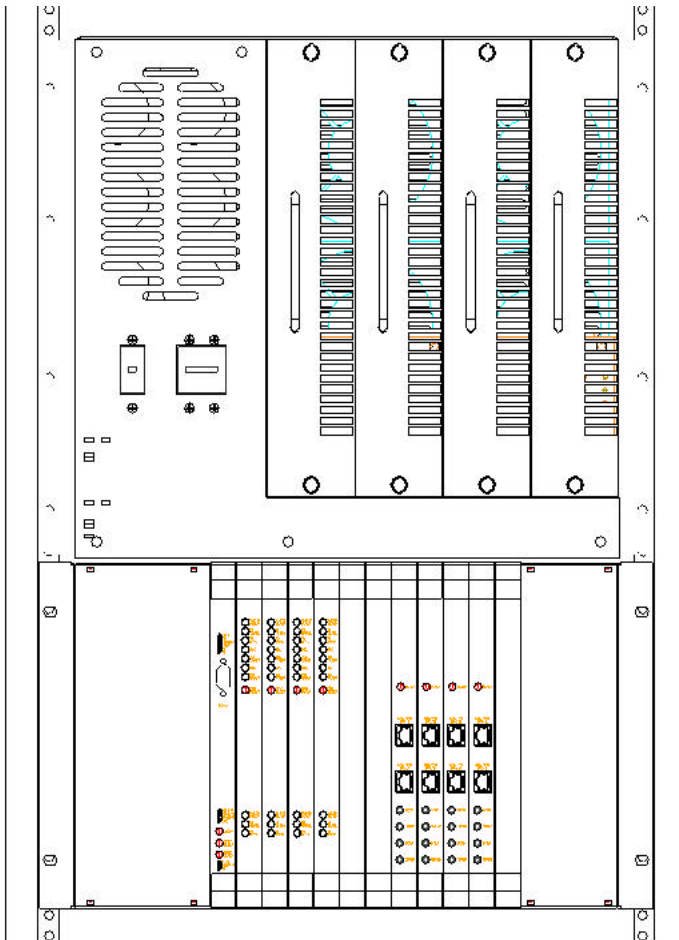

Basic Operation

After all the cables have been properly connected, the repeater is ready for service.

The transceiver frequency has already been pre-programmed at the factory and is confirmed on the shipping papers and a sticker on the rear of the RF chassis.

To begin basic operation, simply follow these steps.

- 1) Turn on the power breakers on the four RF power amplifiers.
- 2) Turn on the main power switch.

After an approximately five minute timeout period, the 13MHz ovenized crystal oscillator will be sufficiently stabilized, and the repeater will begin modulating and transmitting a pseudo-random DC/MA signal.

The frequency and other repeater parameters can be checked by connection a computer running a hyper terminal and typing in the syspar command.