



XETA4m-HP

Licensed Spectrum Wireless Data Transceiver

406 to 512 MHz

Installation Guide

Version Xet4m-HP sp3

Contents

Xeta4m-HP Installation	3
Figure 1. Xeta4m-HP Photo.....	3
Figure 2. Botton View of Module.....	4

Xeta4m-HP Installation

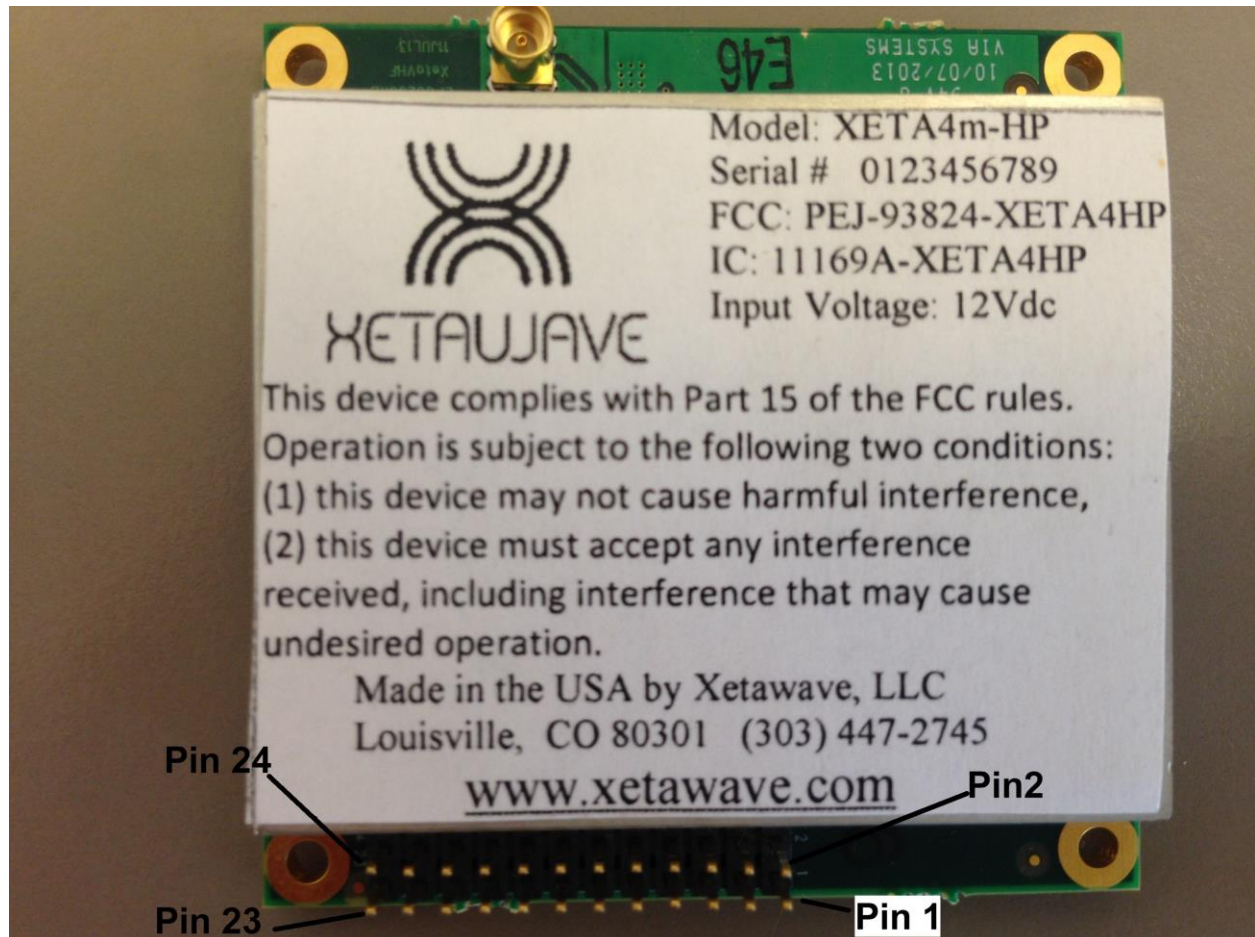


Figure 1. Xeta4m-HP Photo

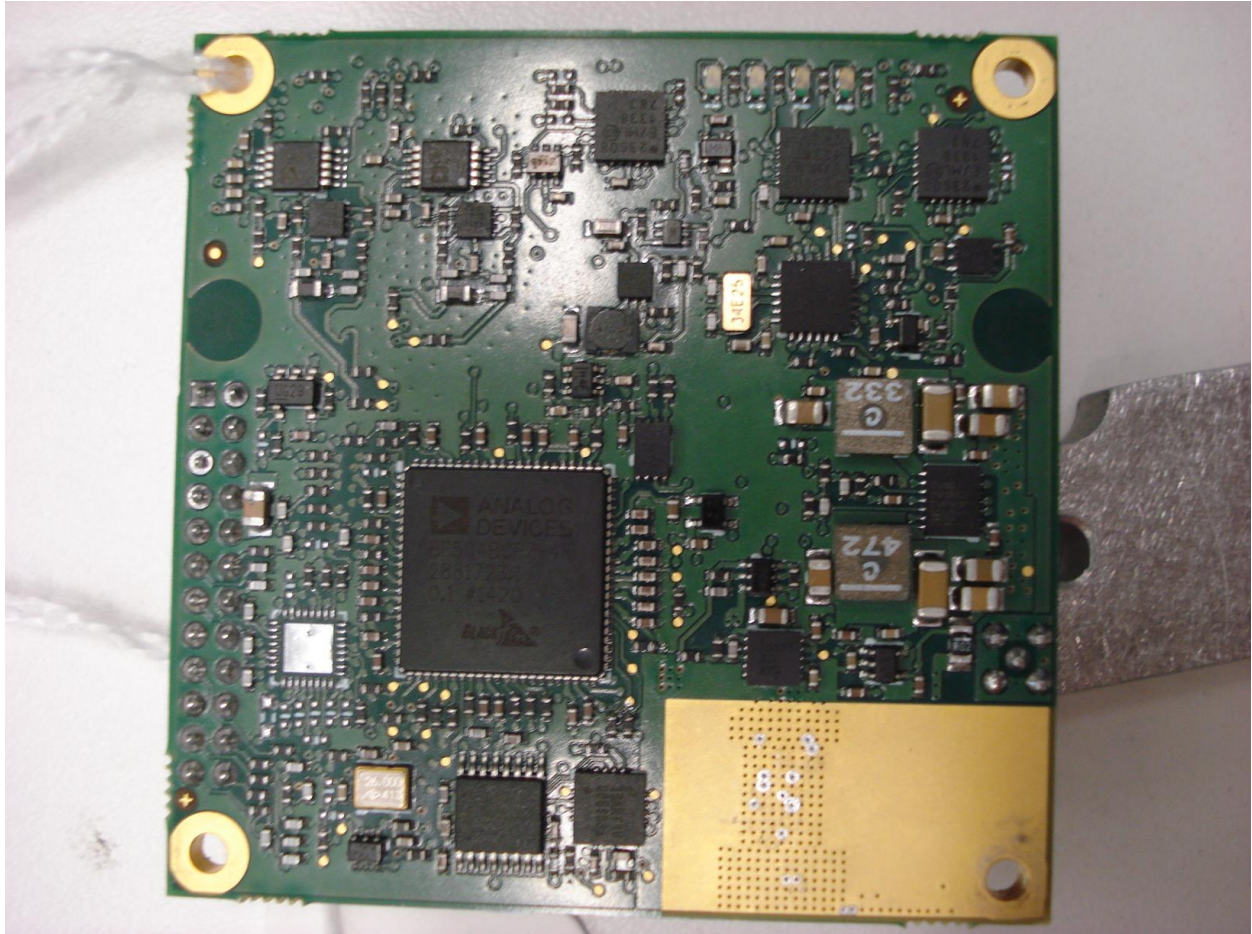


Figure 2. Bottom View of Module

1. Plug the module into the 12 pin header socket
2. Connect RF cable
3. Power up the radio