

Model : WT-010

 
Ages 5 and up

TO OPERATE:

1. To turn on the walkie talkie, turn the ON/OFF power switch to the ON position.
2. To send a message, press and hold the TALK button with the speaker/ microphone about 1" from your mouth. Speak directly into the speaker/ microphone in a normal voice. Release the TALK button when finished talking.
3. To turn off the walkie talkie, turn the ON/OFF power switch to the OFF position.

CAUTION:

1. If your walkie talkie does not operate properly, try a new set of batteries.
2. After use, always turn off the walkie talkie.
3. Do not touch antenna with your fingers or hand, while you are using walkie talkie. It will cause weak transmissions.
4. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than to replace the battery.
5. Avoid using it in hostile environment, such as dusty, humid and high temperature environment.
6. To clean the walkie talkie, wipe with a soft cloth dampened with water. Do not use corrosive chemical solvents to clean the dust on the surface.
7. Remove the batteries when walkie talkie is not use in a long period that can prevent the walkie talkie destroyed by corrosive chemical.

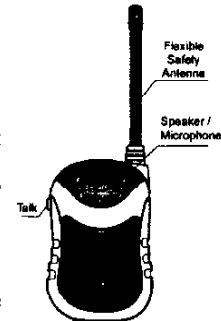


BATTERIES INSTALLATION :

Open the battery compartment unit on the back of the unit by pushing in the direction of the arrow and lift. Insert one 9V (6LR61) battery, making sure to correctly connect the positive and negative terminals. Replace the battery compartment door and slide until you feel it lock into place.

Each unit requires its own battery.

To ensure proper function:

 - Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable)
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacture's instructions. Exhausted
- batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

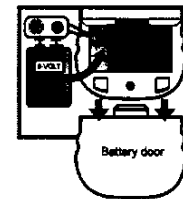


FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

 Warning: Charges or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

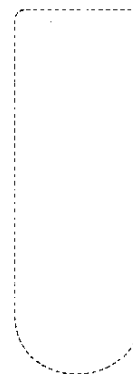

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

