



BUCKSHOT PRO ULTRA

ALL-IN-ONE
WIRELESS

SPEAKER
POWER BANK
FLASHLIGHT

PMN: Bluetooth Speaker



Hi



Good call on picking up the Outdoor Tech® Buckshot Pro Ultra speaker/powerbank/flashlight combo. Your experience of the universe will soon be enhanced powerfully. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses,

 


OUTDOOR TECH.

CONTENTS

Anatomy	1
Flashlight Function	5
Power Up.....	6
Power Bank Features	7
Pairing Mode.....	8
Music Function	9
Phone Function.....	10
Specs.....	11
Care & Maintenance	12


ANATOMY

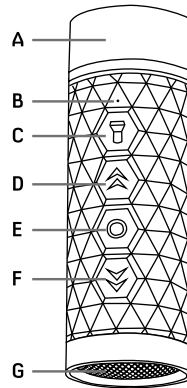

- A. Flashlight
- B. Microphone
- C. Flashlight Button
- D. Volume Up
- E. Multifunction Button (MFB)
- F. Volume Down
- G. Speaker

1

 ANATOMY (CONTINUED)

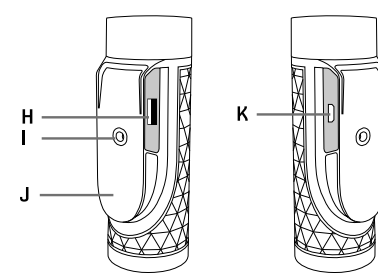


- H. USB Out port (5V/1A)
- I. 1/4"-20 Thread Mount
- J. Mounting Clip
- K. Micro USB Charging Port

2

ANATOMY (CONTINUED)

 HANDLE BAR
MOUNT INCLUDED

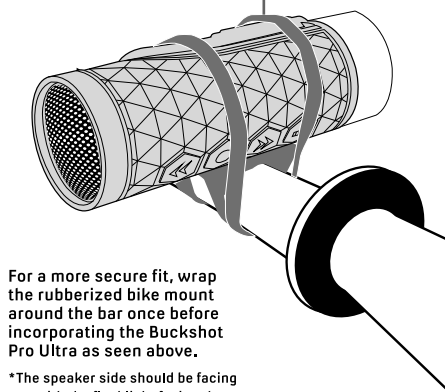

For a more secure fit, wrap the rubberized bike mount around the bar once before incorporating the Buckshot Pro Ultra as seen above.

 
*The speaker side should be facing you with the flashlight facing the other direction.

The included rubber bike mount can be used in different ways to accommodate your outdoor lifestyle. Whether its a bike handlebar or your backpack strap, you can be creative in the ways you wrap your Buckshot Pro Ultra to any space.

(super)

3


ANATOMY (CONTINUED)

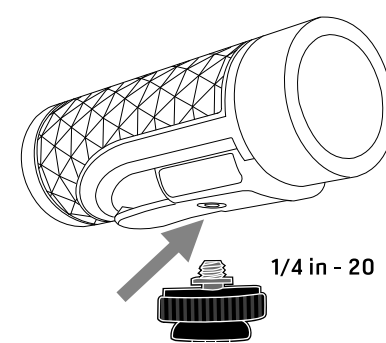

For mounting: Twist the Buckshot Pro Ultra onto a 1/4 in - 20 threaded bolt.

4

 
FLASHLIGHT FUNCTION

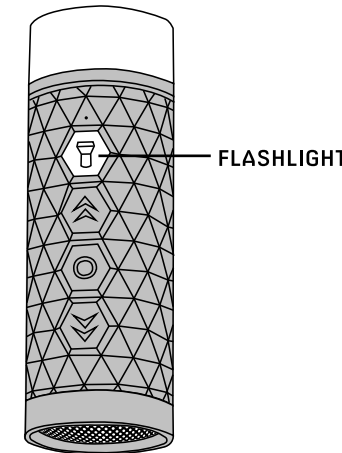

- On/Off - Press & Hold 3 sec
- Lantern: High - short press 1x
- Lantern: Low - short press 1x
- Bike Light: Solid Beam - short press 1x
- Bike Light: Strobe - short press 1x

5

 POWER UP

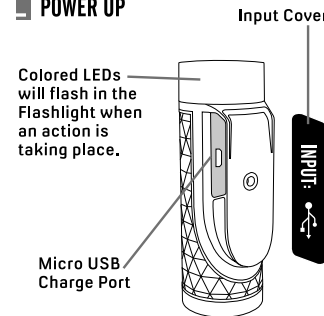


TO CHARGE UP

1. Connect the included Micro USB cord to a power source and the charging port on the Buckshot Pro Ultra. When charging, the red LED light will stay activated. ***Full charge time is about 3 hours.
2. When the Buckshot Pro Ultra is fully charged, the RED light will turn off.

The displayed battery meter is supported for Apple products.

*The Buckshot Pro Ultra's Bluetooth and music functions can still operate while charging.

 POWER BANK FEATURES

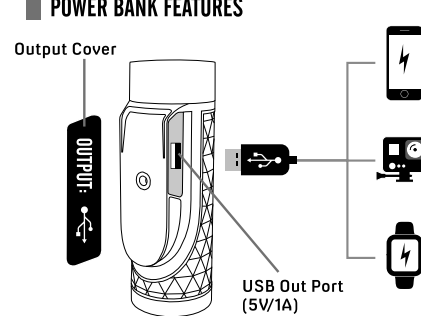


TO CHARGE YOUR DEVICES

1. Connect the USB Port cable to the Buckshot Pro Ultra's output port.
2. Connect the other port to your device.
3. Your device should automatically start charging.
4. When the your device is fully charged, disconnect the Buckshot Pro Ultra.

Remember, the Buckshot Pro Ultra shares its 2600 mAh battery with three functions: speaker, powerbank, and flashlight accessory. The amount of charge, music time, light time will vary based on the use of any of the three functions.

 PAIRING MODE

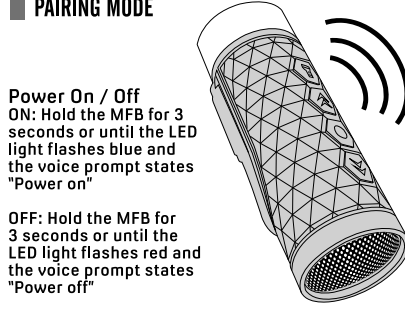


Enter Pairing Mode

When powered on, it will enter into pairing mode automatically. Hold the MFB for 2-3 seconds or until you see the LED light flash blue and the voice prompts states "Power on, Pairing." The LED lights will then flash red and blue alternately.

Pairing Buckshot Pro Ultra to Device


Open the Bluetooth settings on your device. If you have put your Buckshot Pro Ultra into pairing mode, it should be listed as "ODT Buckshot Pro Ultra" as an available device to pair. Connect with the Buckshot Pro Ultra. The voice prompt will state "Paired" if the Buckshot Pro Ultra and your device connected. The blue LED light shuts off when connected.

 MUSIC FUNCTION

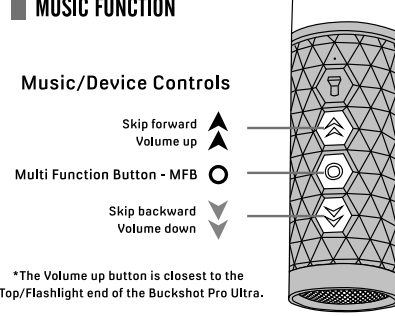

FUNCTION	BUTTON	ACTION
Power on	○	Press & hold 3 sec
Power off	○	Press & hold 3 sec
Pairing mode	○	When powered on, it will enter into pairing mode automatically
(hi-jack mode) Manual pairing	▲ ▼	Press & hold for 3 sec
Play / Pause	○	Short press once
Volume up	▲	Short press once
Volume down	▼	Short press once
Skip forward	▲	Press & hold for 2 sec
Skip backward	▼	Press & hold for 2 sec

 PHONE FUNCTIONS

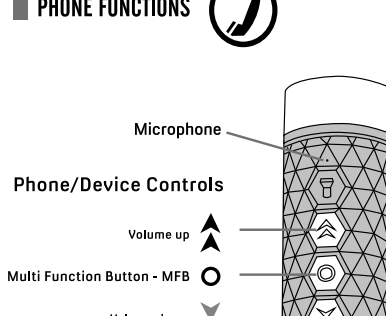

FUNCTION	BUTTON	ACTION
Answer call	○	Short press once
End call	○	Short press once
Reject an incoming call	○	Press & hold for 2 sec
Siri/Voice activation	○ ▼	Short press 1x simultaneously
Last number redial	▲ ○	Short press 1x simultaneously

 
SPECS

Rating: IP66
Bluetooth v 4.2
Bluetooth profiles: HFP, A2DP
Operating range: 32 ft
Device name: ODT Buckshot Pro Ultra
Pairing code: 0000 (if needed)

Power source: Lithium ion rechargeable battery cell
Battery capacity: 2600 mAh
Charging in: micro-USB 5V/1A
Charging out: 5V/1A
Playing Time: 10 hrs
Standby Time: 3 months
Flashlight: 100 Lumens


Operating Temperature: -20~40° C
Storage Temperature: -20~40° C
RoHS: Fully RoHS compliant

CARE & MAINTENANCE

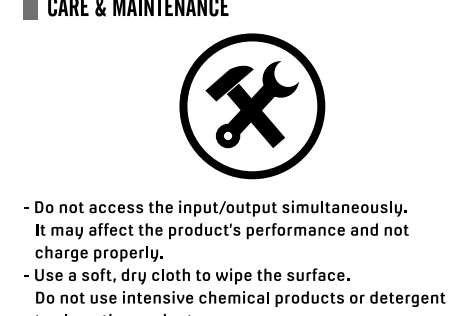

- Do not access the input/output simultaneously. It may affect the product's performance and not charge properly.
- Use a soft, dry cloth to wipe the surface. Do not use intensive chemical products or detergent to clean the product.
- Charge the product at least once every three months, to prevent the batteries from drying out.
- It is normal for the battery to heat up during its charge. The temperature should be below 45° & does not affect the Buckshot Pro Ultra's performance.
- For best performance, fully charge the Buckshot Pro Ultra before charging other devices.
- All products have passed the strict quality inspection. Do not use the battery/device if it gives off an odor, generates heat, becomes deformed, abrasion, damaged or appears abnormal in any way.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The apparatus can be used in tropical and moderate climates.
- The Marking plate is located at the bottom of the device

 CARE & MAINTENANCE

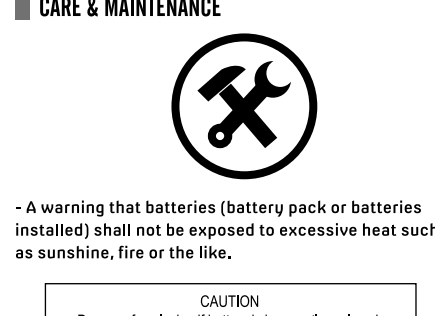

- A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

- If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

DON'T BE SO ANTISOCIAL



Facebook.com/outdoortechnology
Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires, or just to say what's up: email info@outdoortech.com

K bye.



www.outdoortech.com

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The use of apparatus in moderate climates.
- The Marking plate is located at the bottom of the device
- A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Maximum RF Transmit Power: ≤ 0 dBm

Bluetooth Frequency Range 2402-2480MHz

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.