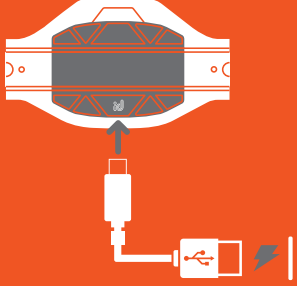


Apple version Quick Start Guide

1 	2 	3 
4 	5 	For full instructions go to: • Pour consulter les instructions complètes, rendez-vous à l'adresse : • Die vollständige Anleitung finden Sie unter: • Per ricevere istruzioni, visita il sito: • Voor de uitgebreide gebruiksinformatie ga je naar: • Para ver las instrucciones y más, visita: • Para instruções completas, aceder a: • Fullständiga instruktioner finns på: • Yksityiskohtaiset ohjeet ovat osoitteessa • Se den komplette vejledning på: • Du finner fullstendige instruksjoner her: • Aby uzyskać pełne instrukcje, wejdź na stronę: • Úplné znění pokynů naleznete zde: • Komplettné pokyny nájdete tu: • A teljes útmutatóért látogasson el ide: • Для получения развернутой инструкции перейдите на сайт: • Για πλήρεις οδηγίες επισκεφθείτε το: • Talimatların tamamı için şu adresi ziyaret edin: • Повну версію інструкцій можна переглянути на сторінці • Pentru instrucțiuni complete, accesați: • للمعلومات كاملة قم بزيارة: • HOTWHEELS.COM/iD

BATTERY CHARGING

To charge, insert the included USB cable into the USB Type C port, as shown in the picture. Plug the other end of the cable into a 5V smartphone charger or computer's USB port.

Your Hot Wheels® iD device will automatically begin charging the battery. The red light next to the USB port indicates that the battery is charging. Once charging is complete, the red light will turn green. The light will turn off once the cable is unplugged. Charging takes about 1 hour. Your device can be turned on simultaneously while the cable is plugged into the USB port.

Batteries are only to be charged by persons of at least 8 years old.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

This toy contains batteries that are non-replaceable.

RESET: If Hot Wheels® iD app freezes, quit and restart app to resume normal operation.

APP UPDATES: WiFi required for product updates. Data rates may apply.

SAFETY INFORMATION STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


Please keep these instructions for future reference as they contain important information.

Apple and the Apple logo are trademarks of Apple Inc. registered in the U.S. and other countries. App Store is a service of Apple Inc.

Apple et le logo Apple sont des marques de Apple Inc., déposées aux États-Unis et dans d'autres pays et régions. App Store est une marque de service de Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Mattel is under license. Other trademarks and trade names are those of their respective owners. La marque et les logos Bluetooth® sont des marques déposées appartenant à Bluetooth SIG, Inc. et toute utilisation de ces marques par Mattel est sous licence. Les autres marques et noms commerciaux appartiennent à leurs propriétaires respectifs.

HID00

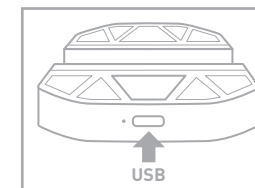

FXB53-MA70G1 21A